


## Information for Users

- The screen for changing password appears when using this product and accessing the network function for the first time to obtain the higher security level. Follow the onscreen instructions to change the password. The following screen is an example.
- ご購入いただいた製品は、セキュリティレベル向上のため、製品への初回ネットワークアクセス時にパスワードの設定変更を促す画面が表示されます。表示された画面の内容に従って、パスワードを変更してください。本書に掲載している画面イラストは、ある製品の一例です。
- L'écran de modification du mot de passe apparaît lorsque vous utilisez le produit et accédez à la fonction réseau pour la première fois, afin d'obtenir un niveau de sécurité optimal. Suivez les instructions à l'écran pour modifier le mot de passe. L'écran suivant est un exemple.
- La pantalla para cambiar la contraseña se muestra al utilizar este producto y acceder a la función de red por primera vez con el fin de aumentar el nivel de seguridad. Siga las instrucciones que aparecen en pantalla para cambiar la contraseña. La pantalla siguiente se muestra a modo de ejemplo.
- Um eine höhere Sicherheitsstufe zu erlangen, wird der Bildschirm zum Ändern des Passwortes eingeblendet, wenn die Benutzung dieses Produktes und der Zugang zu der Netzwerkfunktion zum ersten Mal erfolgen. Folgen Sie den Anweisungen auf dem Bildschirm, um das Passwort zu ändern. Der folgende Bildschirm ist ein Beispiel.
- La schermata per la modifica della password appare quando questo prodotto e la funzione di rete vengono usati per la prima volta, per ottenere un livello di sicurezza più alto. Per modificare la password, seguire le istruzioni che appaiono sullo schermo. La seguente schermata è un esempio.
- Чтобы обеспечить более высокий уровень безопасности, при использовании данного изделия и обращении к функции сети впервые появляется экран смены пароля. Следуйте инструкциям на экране, чтобы сменить пароль. В качестве примера показан следующий экран.
- 본 제품을 사용하여 네트워크에 처음으로 액세스 할 시에 보안 수준 향상을 위해 암호를 변경하라는 메시지가 화면에 표시됩니다. 표시된 화면의 지시에 따라 암호를 변경하십시오. 다음 화면은 예시입니다.

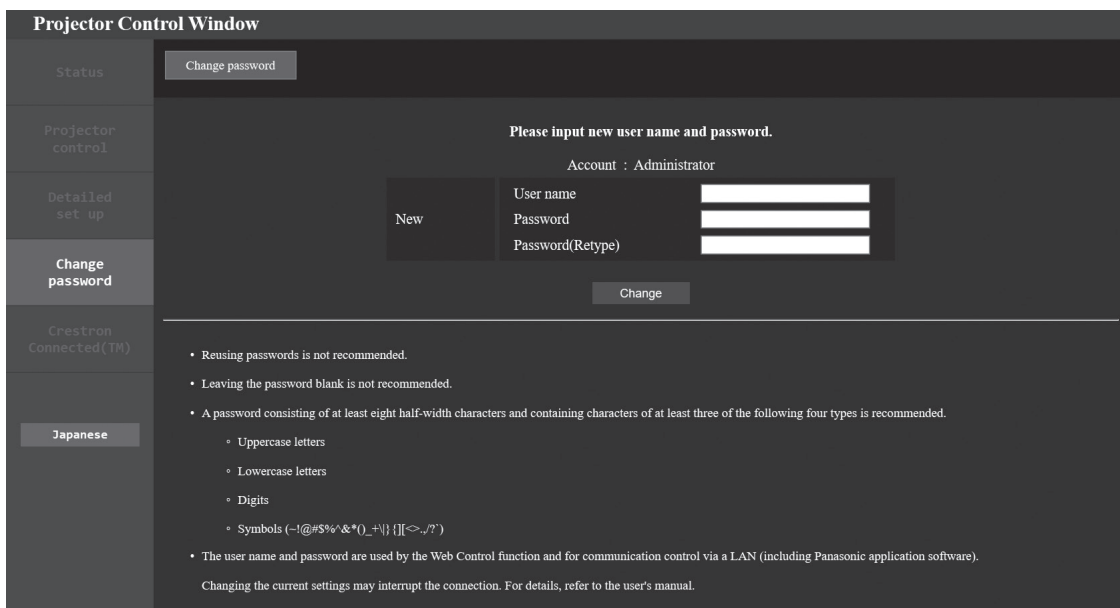

**Projector Control Window**

Status: Change password

Projector control: Please input new user name and password.

Detailed set up: Account : Administrator

Change password: New

User name:

Password:

Password(Retyp):

Change

---

Creston Connected(TM)

Japanese

- Reusing passwords is not recommended.
- Leaving the password blank is not recommended.
- A password consisting of at least eight half-width characters and containing characters of at least three of the following four types is recommended.
  - Uppercase letters
  - Lowercase letters
  - Digits
  - Symbols (-!@#%&\*()\_+{}|[]<.>/?)
- The user name and password are used by the Web Control function and for communication control via a LAN (including Panasonic application software).

Changing the current settings may interrupt the connection. For details, refer to the user's manual.



## 用户信息

- 为提高您所购产品的安全性，首次通过网络访问投影机时，将出现一个提示您更改密码的屏幕。请按照屏幕上的说明更改密码。  
以下屏幕是一个示例。
- The screen for changing password appears when using this product and accessing the network function for the first time to obtain the higher security level. Follow the onscreen instructions to change the password. The following screen is an example.

**Projector Control Window**

Status

Projector control **Please input new user name and password.**

Detailed set up Account : Administrator

Change password  User name

Crestron Connected(TM) Password

Japanese Password(Retyp)

- Reusing passwords is not recommended.
- Leaving the password blank is not recommended.
- A password consisting of at least eight half-width characters and containing characters of at least three of the following four types is recommended.
  - Uppercase letters
  - Lowercase letters
  - Digits
  - Symbols (-!@#%&^\*()\_+{}|[]<>./?)
- The user name and password are used by the Web Control function and for communication control via a LAN (including Panasonic application software).

Changing the current settings may interrupt the connection. For details, refer to the user's manual.

