

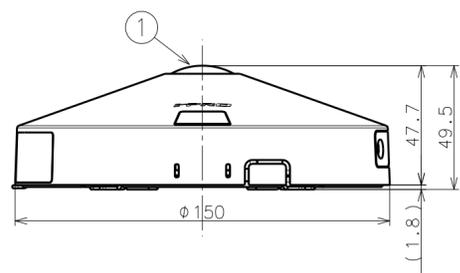
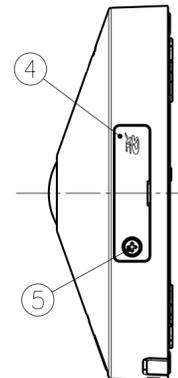
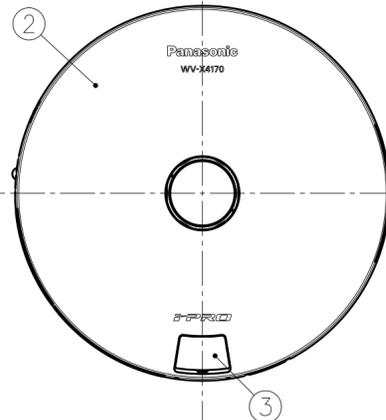
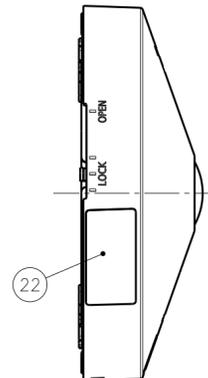




Inside of SD-slot cover  
(S=1:1)

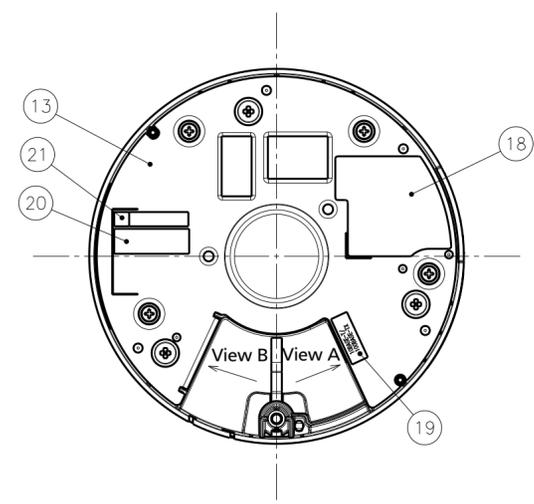

Inside of camera fixing screw cover

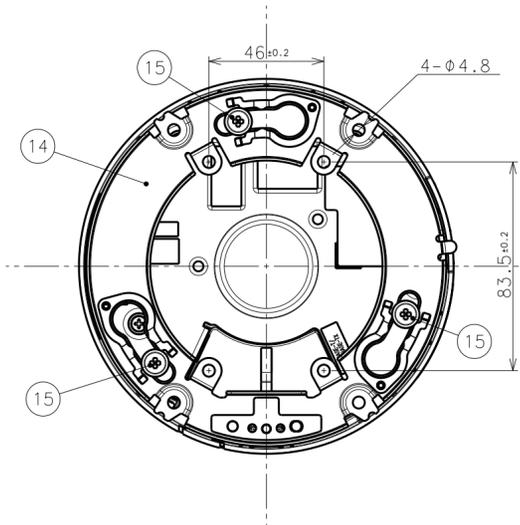

Without Attachment Plate

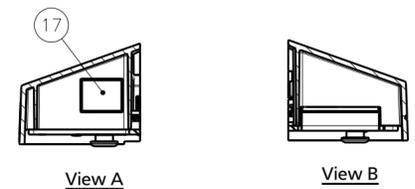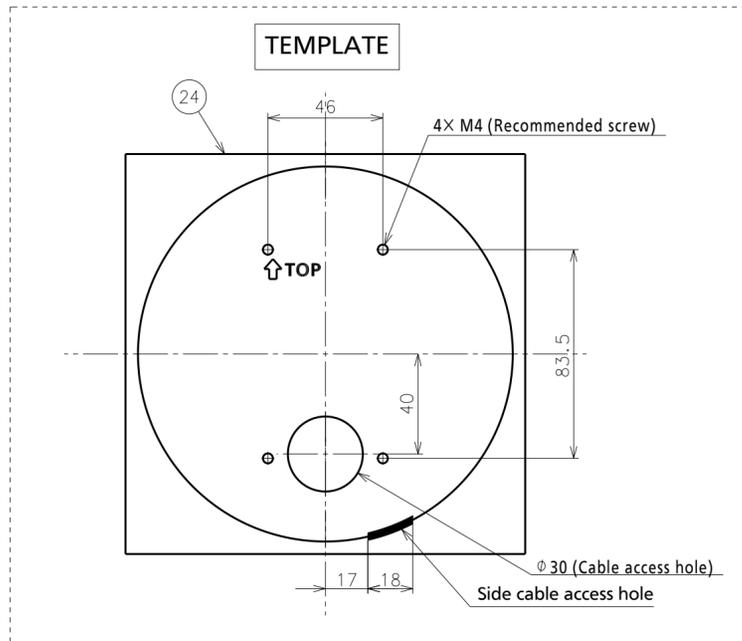

View A

View B

No.	Part Name	QTY	MATERIAL & SIZE	TREATMENT	REMARK
24	TEMPLATE	1	-	-	-
23	SD slot Label	1	Polyester Film	Printing	-
22	FCC ICES-3A Label	1	Polyester Film	Printing	-
21	Serial No. Label	1	Polyester Film	Printing	-
20	Code Label	1	Polyester Film	Printing	-
19	RJ45 Label	1	Polyester Film	Printing	-
18	Name Label	1	Polyester Film	Printing	-
17	Network Connector (RJ45)	1	-	-	-
16	Camera Lock Screw	1	Stainless Steel	-	-
15	Attachment Mounting Screw	3	Stainless Steel	-	-
14	Attachment Plate	1	Stainless Steel	-	-
13	Bottom Plate	1	-	-	-
12	INITIAL SET button	1	-	-	-
11	Access LED (ACT)	1	-	-	-
10	Link LED (LINK)	1	-	-	-
9	SD ERROR/ABF LED	1	-	-	-
8	SD MOUNT LED	1	-	-	-
7	SD ON/OFF button	1	-	-	-
6	SD CARD Slot	1	-	-	-
5	SD Slot Cover Fixing Screw	1	Steel	-	-
4	SD Slot Cover	1	ABS(Sail white)	-	-
3	Camera Fixing Screw Cover	1	ABS(Sail white)	-	-
2	Upper Case	1	ABS(Sail white)	Printing	-
1	Lens	1	-	-	-

WV-X4170ZYS