


Video Wall Construction Manual



Contents

●Unpacking	3
●Installation	
Cautions when installing or moving	4
Wall-mounting bracket	6
Installation of mounting bracket	7
Cautions of Video Wall installation	9
Embedding condition	13
Connection to power source	17
Daisy Chain Connection	18
Remote controller IR signal outreach distance	24
●Picture adjustment	
Color Calibration	25
●Maintenance	
Maintenance	26


Unpacking Procedure

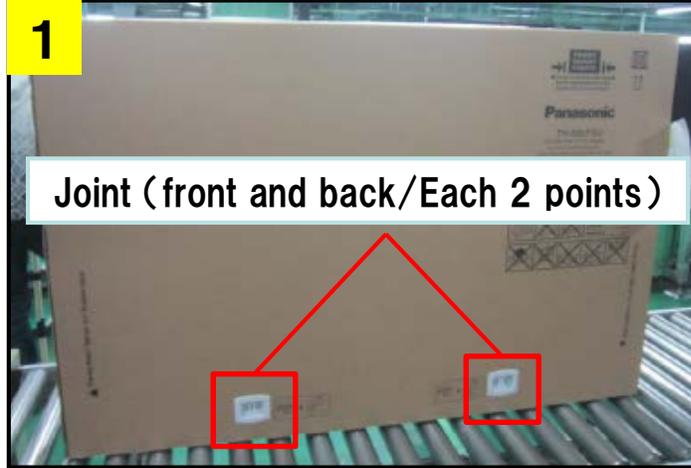

Remove Joint (Total 4)



Take out accessory parts and cushions

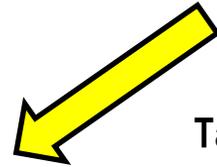



Remove upper carton case and front cushions



Cautions when installing or moving

To prevent this Display from falling:


- Grab the handles when moving this Display.
- Do not touch any parts except the handles.
- Handle with care and with more than two persons when moving this Display. Keep in mind that this Display is easy to break from carelessness.
- For ceiling installation, we recommend installing this Display with metal brackets which are commercially available. For detailed installation instructions, refer to the guide received with the respective bracket.
- To lessen the probability of injury and damage resulting from fall of this Display in case of earthquake or other natural disaster, be sure to consult the bracket manufacturer for installation location.
- For portrait installation, please turn this Display right.

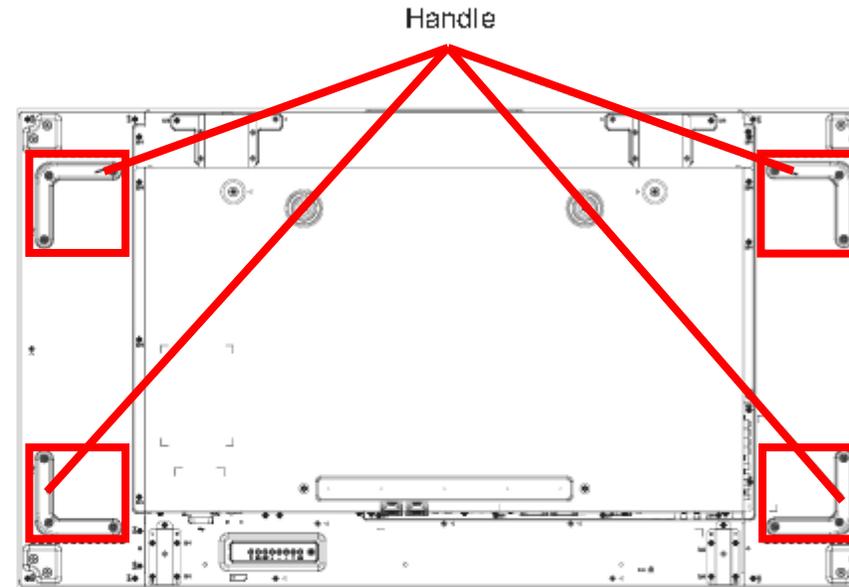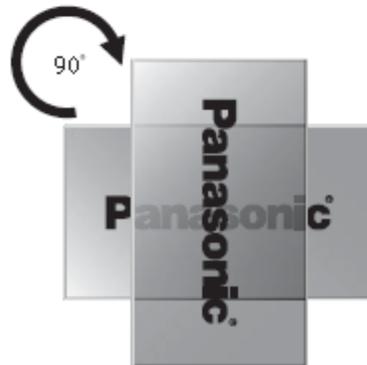

When you install a display by multi, please prepare for 0.5 mm between each display in the state of the power supply OFF.


NOTE:

- Please do not rotate and use it for left-hand side.
- Please do not move with the monitor as an upswing or a downswing.

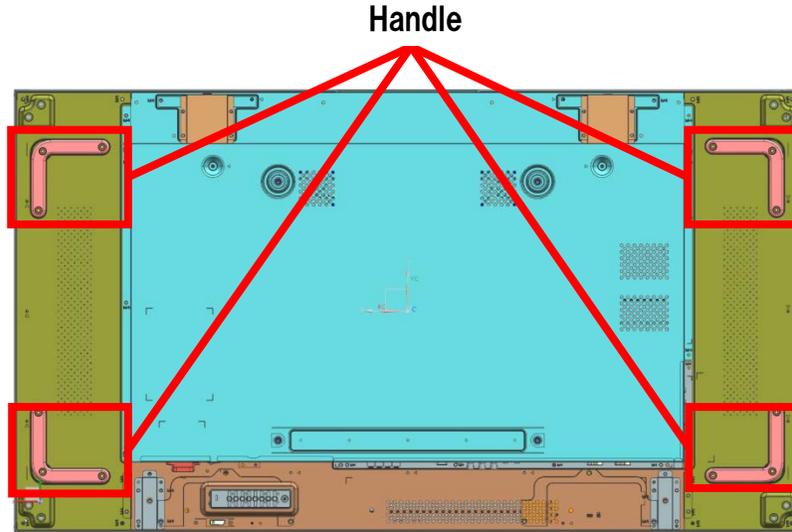


- Grab the handles when working.
- Do not take hold any part except the handles.
- Do not touch top/down/left/right side and also surface of the monitor.
- Do not stand on the floor directly with surface or rear side of the monitor.
- Do not make impacts to the monitor.

Do not twist the monitor.

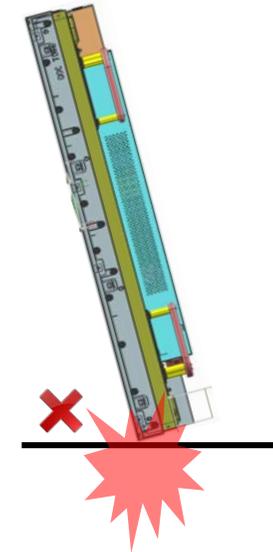

✗ : No Good

○ : OK

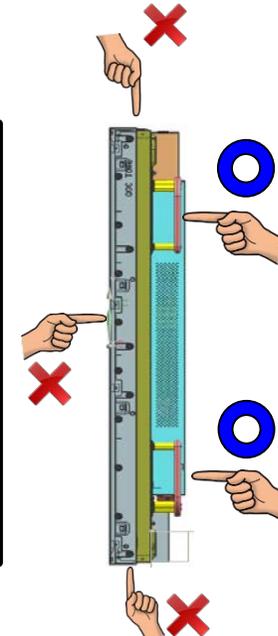

Wall-mounting bracket

When preparing bracket for multiple monitors, please take the following considerations.

- 1) Ensure the wall on which the monitors will be installed has a smooth surface.
- 2) Ensure the bracket used to attach the monitors to the wall have enough load capacity to support them.
- 3) Ensure the bracket used can be adjusted upward, downward, to the left and right, forward and backward.
- 4) When installing or moving, ensure the bracket does not interfere with the back of the monitor, cable guides, and other structures.
- 5) Ensure the bracket is constructed so that the monitor can easily be removed.
- 6) Please do not distort the monitor.




If you can not install in the same way as this manual,
please contact Panasonic sales company.

VESA Mounting

To mount this Display to a wall, you will have to obtain a standard wall-mounting kit.


1. Lay a protective sheet on a table, which was wrapped around this Display when it was packaged, beneath the screen surface so as not to scratch the screen face.
2. Ensure you have all accessories for mounting this Display (wall mount, ceiling mount, etc).
3. Follow the instructions that came with the wall mounting kit. Failing to follow the correct mounting procedures could result in damage to the equipment, or injury to the user or install personnel. The product warranty does not cover the damage caused by improper installation.
4. For the wall-mounting kit, use M6 mounting screws (having a length 10 - 16mm longer than the thickness of the mounting bracket) and tighten them securely.

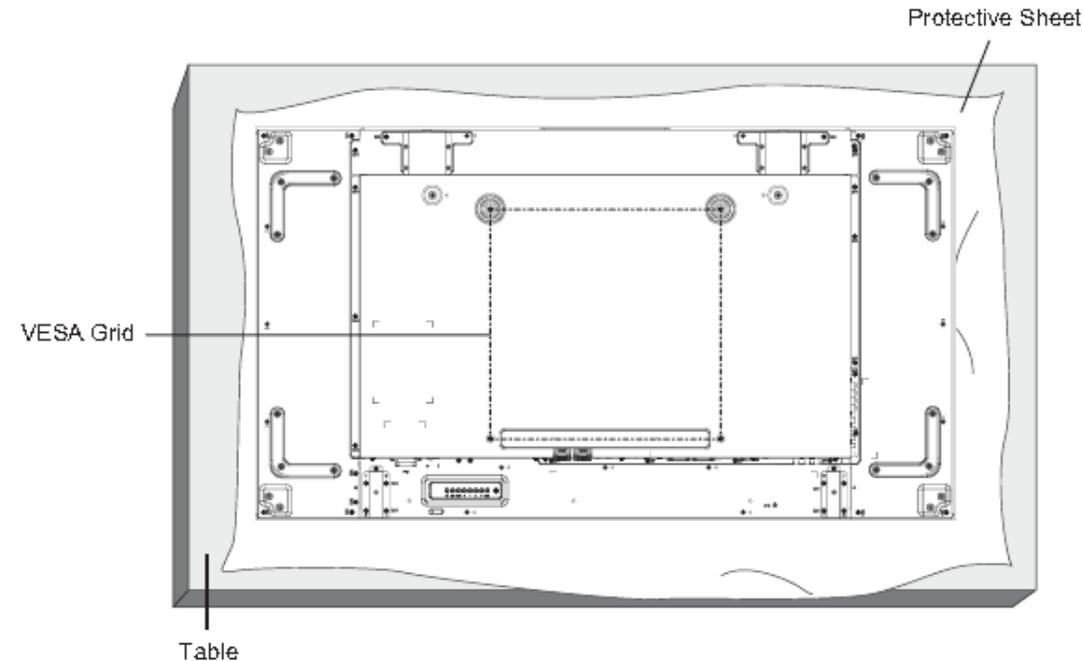

There are L type protection board (downside) and protection film (monitor surface). Please remove them.



There is a limitation of maximum units using optional mounting bracket, when we install video walls.

- TH-55VF2H/VF2 : 4row/5column
- TH-55VF1H : 5row/6column
- TH-55LFV9/LFV8 : 9row/11column

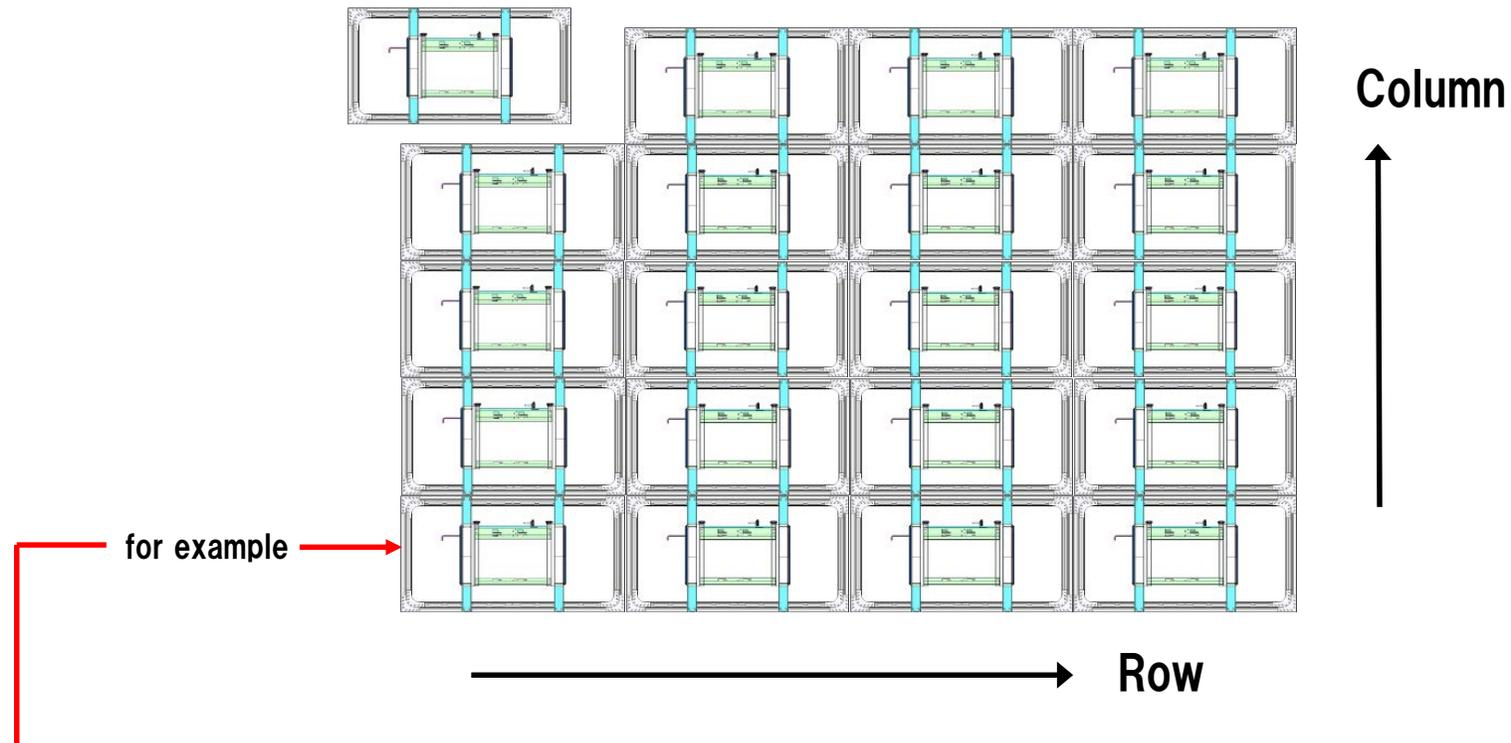

Please set a position dial (up, down, left and right) of the starting bracket to eccentric position of installation direction side, not a center (default) position.

 Cautions of Video Wall installation 1

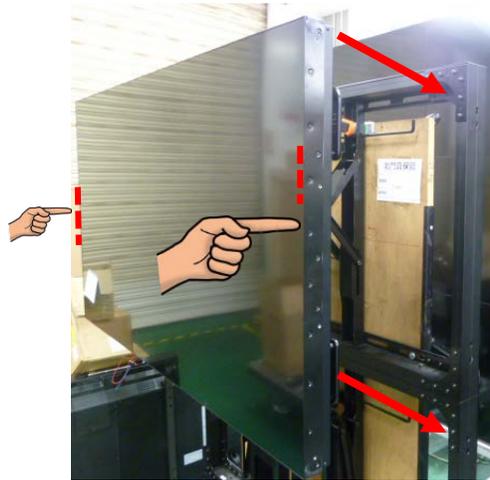


When we press 70 N power to left and Right, the wall mount will move to back

※In case of using TY-VK55LFV1 and TY-VK55LFV2




Please do not press panel active area and corner.
Please press center edge of right and left.
Please press vertically to the panel.
Please increase power in right and left equality.

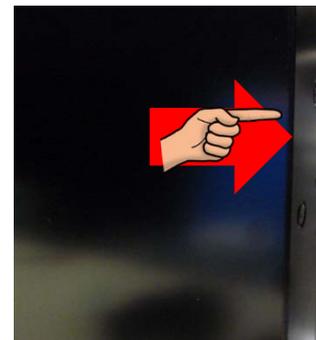

There is a possibility that if pressure is added on the bezel towards outside, the bezel will be distorted.
(The bezel will be open by 20N pressure)
Please add a soft pressure vertically to the panel.

Cautions of Video Wall installation 2

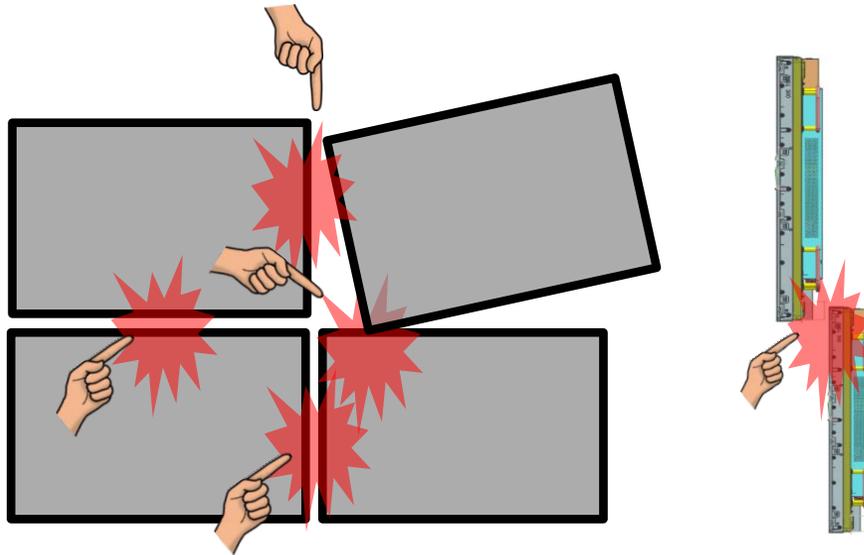


Please do not distort the monitor.


About securing space between monitors

- After turning on, the monitor slightly expands due to heat. When installing multiple monitors with fixed outer most peripheries, space (0.5 mm) between monitors (above, below, to the left and right sides of each monitor) must be secured to account for expansion due to heat.


Space between sets (same for above, below, to the left and right directions)

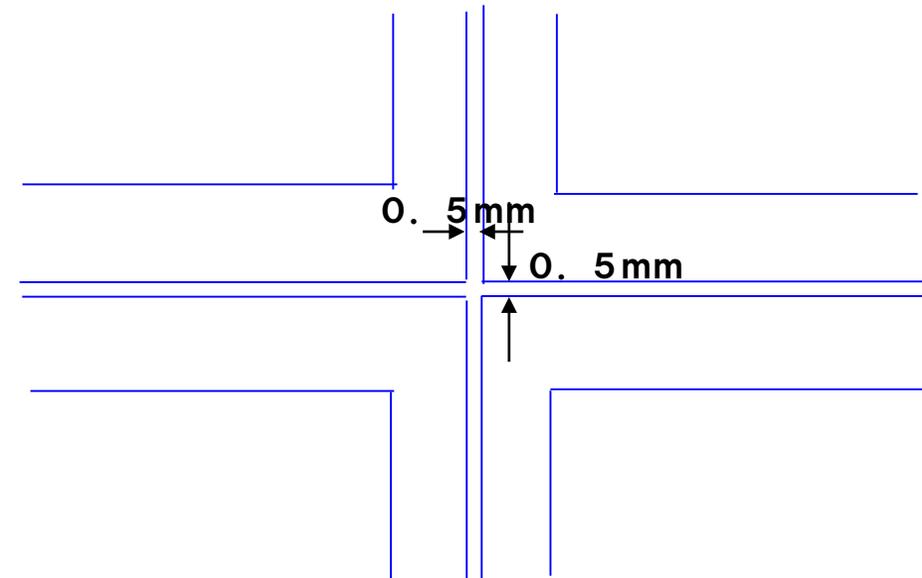

Cautions of Video Wall installation 3

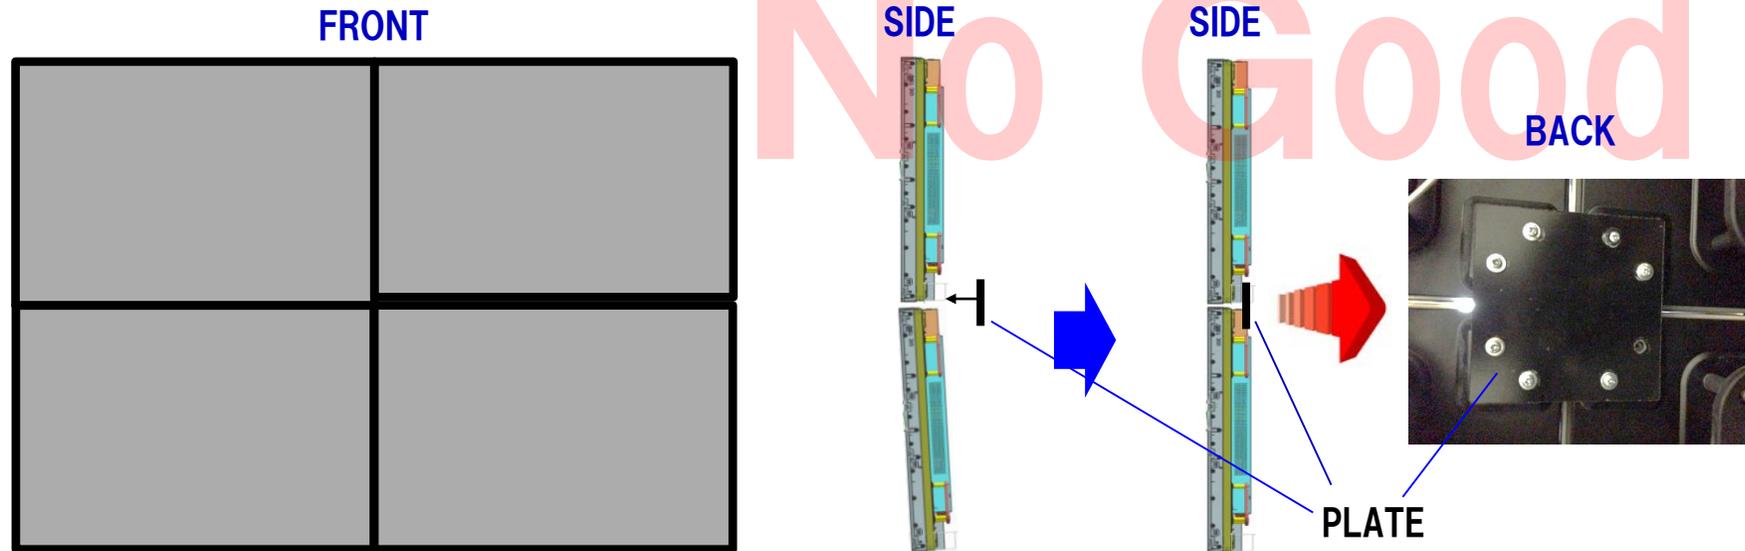

After hung up the monitor and adjust position,
Please do not adjust to flat each monitor surface using some material such as "PLATE".
This case, distortion is added to the monitor, and there is a possibility some picture trouble happen to the monitor.

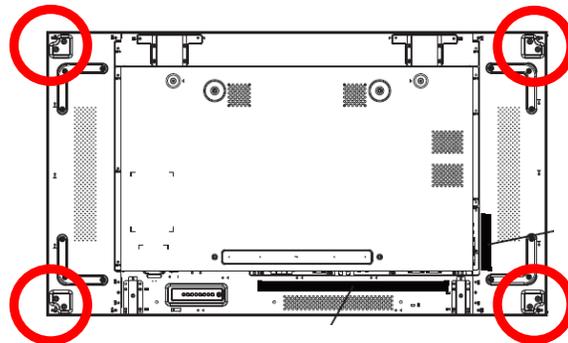

Please do not use a hole of rear monitor corner
except for Panasonic option bracket such as
TY-VK55LV1、TY-VK55LV2.

Main points of attention


- Secure air circulation to ensure the ambient condition as follows.
 - Temperature : 0°C – 40°C
 - Humidity : 10% – 90% (Non condensation).
 - Note
 - In case of LFV8 model : 20% – 80% (Non condensation)
- Please secure space as follows.
 - 1) Stand-alone installation
 - Secure 100 mm or more space above, below, to the left and right and 50 mm or more behind the monitor.
 - 2) Multi-installation
 - Secure 100 mm or more space above, below, to the left and right and 150 mm or more behind the monitor.

Embedding space (stand-alone / horizontal installation)

- Secure space as follows.

Unit : mm

A	B	C	D	E
100	100	100	100	50

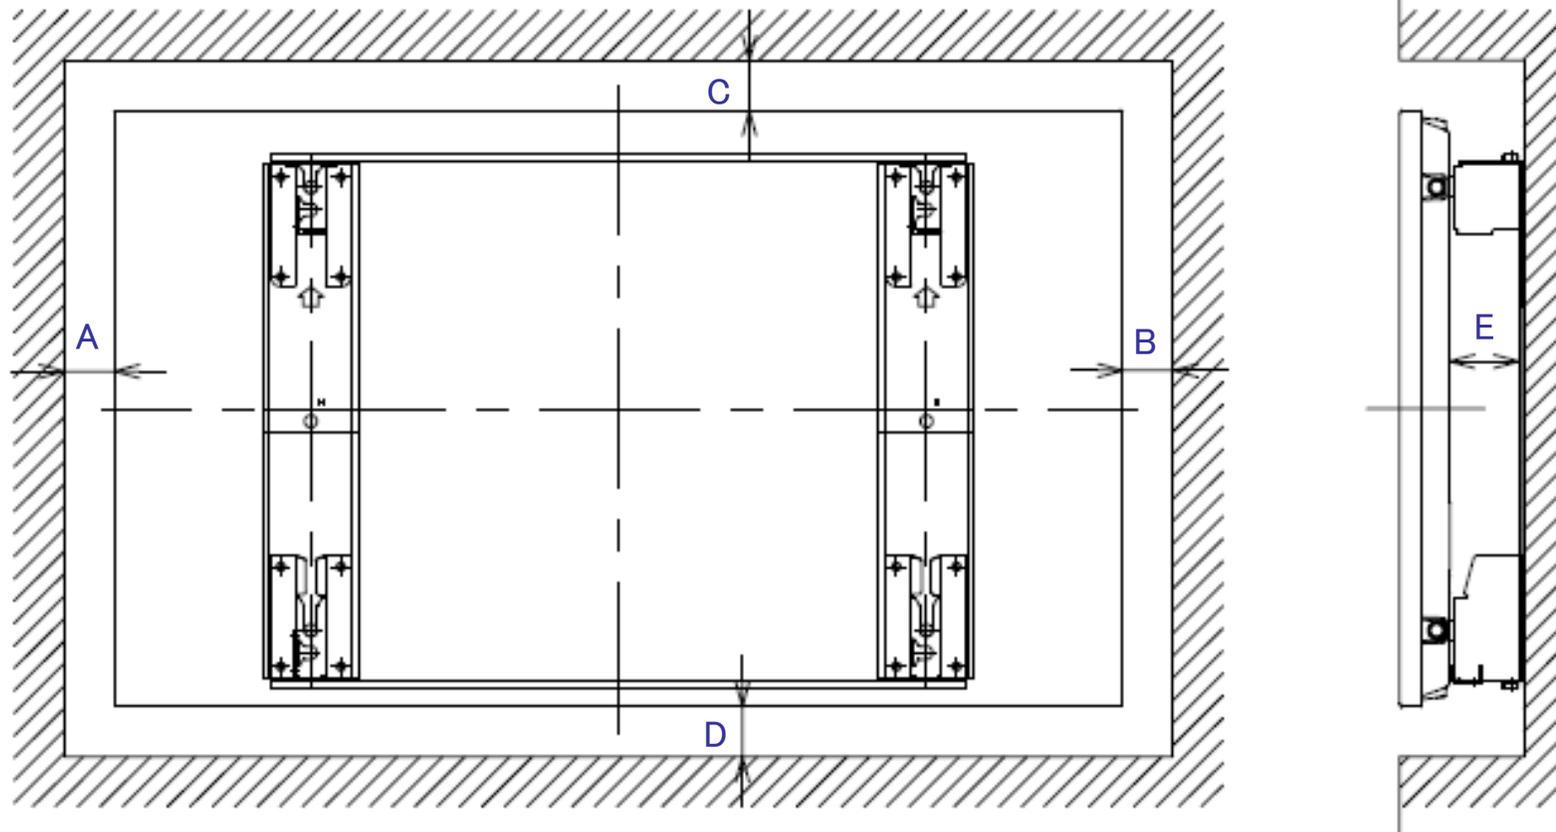

Ambient Condition : Temperature 0—40 °C、 Humidity 10—90% (Non condensation)


Note : In case of Lfv8 model, from 20% to 80% (Non condensation)

Embedding space (stand-alone / vertical installation)

- Secure space as follows.

Unit : mm

A	100
B	100
C	100
D	100
E	50

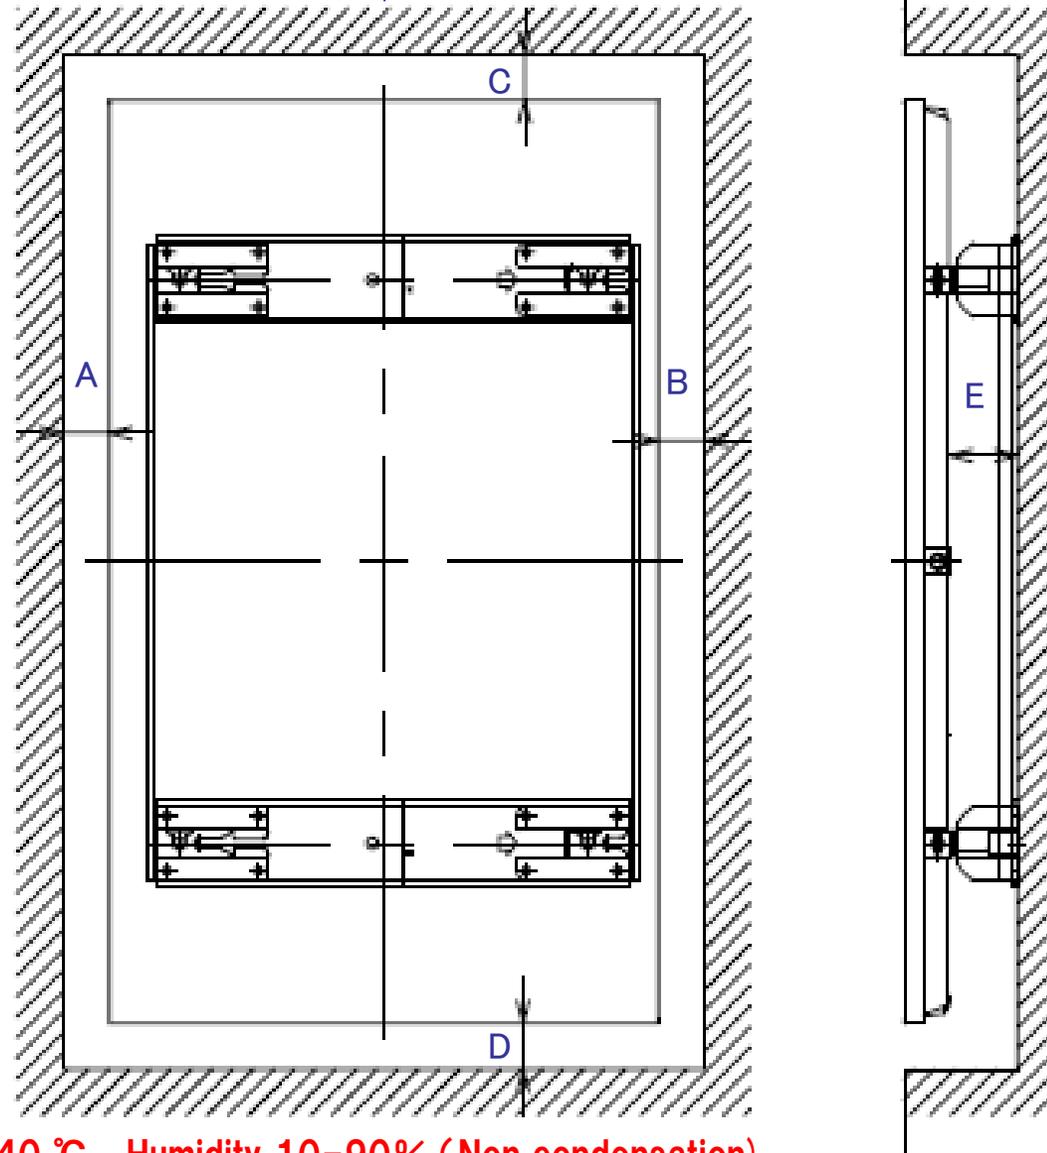

Ambient Condition : Temperature 0—40 °C、 Humidity 10—90% (Non condensation)


Note : In case of LJV8 model, from 20% to 80% (Non condensation)

Embedding space (multi-system / horizontal installation)

- Secure space as follows.

Unit : mm

A	B	C	D	E
100	100	100	100	150

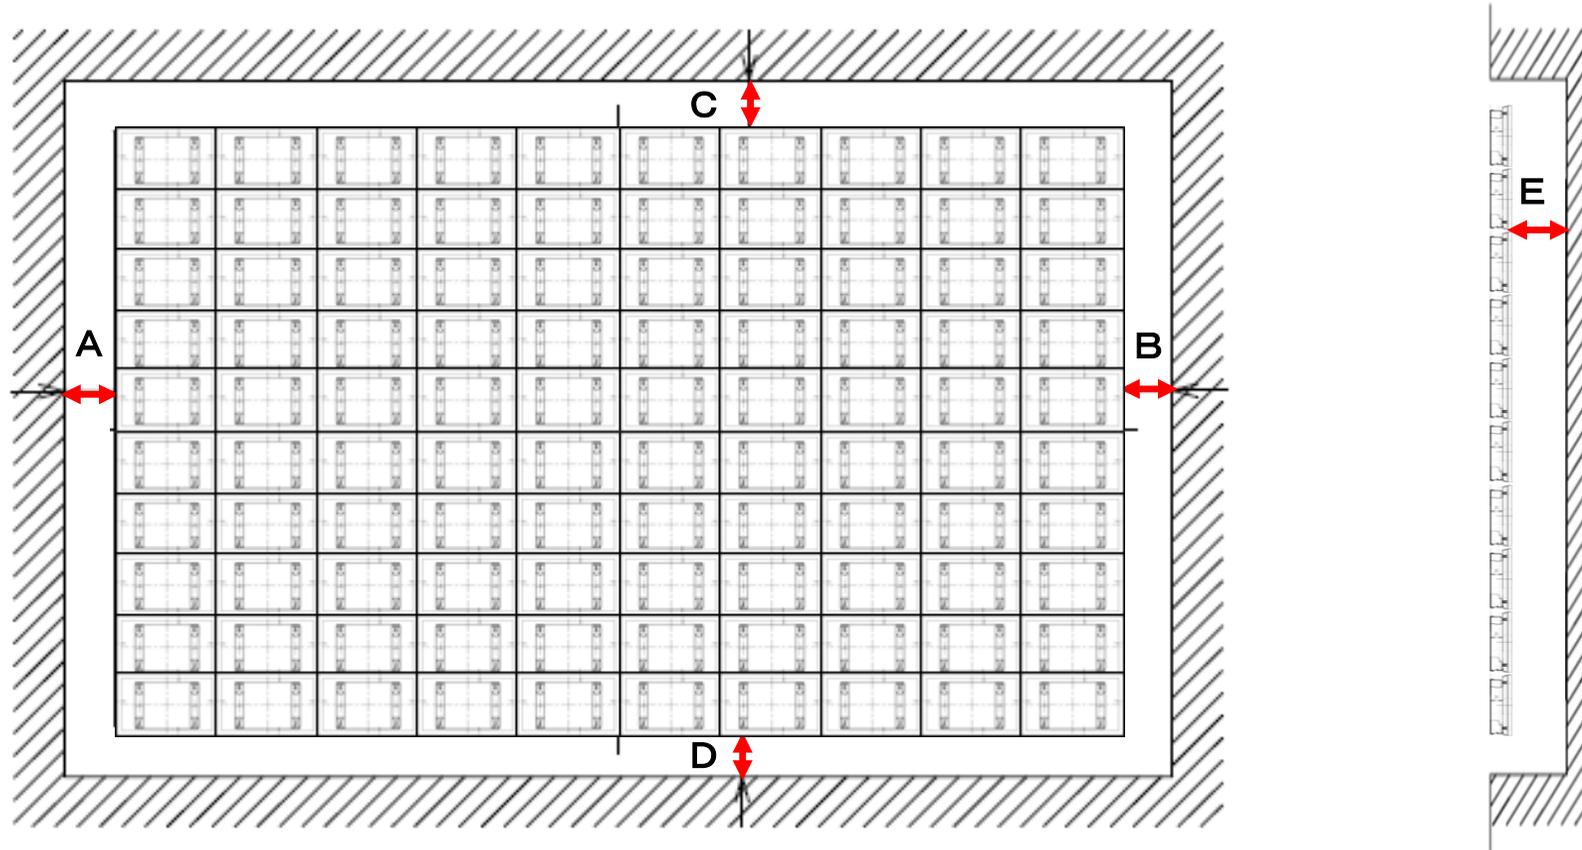

Ambient Condition : Temperature 0–40 °C、 Humidity 10–90% (Non condensation)



Note : In case of Lfv8 model, from 20% to 80% (Non condensation)

Embedding space (multi-system / vertical installation)

- Secure space as follows.

Unit : mm

A	100
B	100
C	100
D	100
E	150

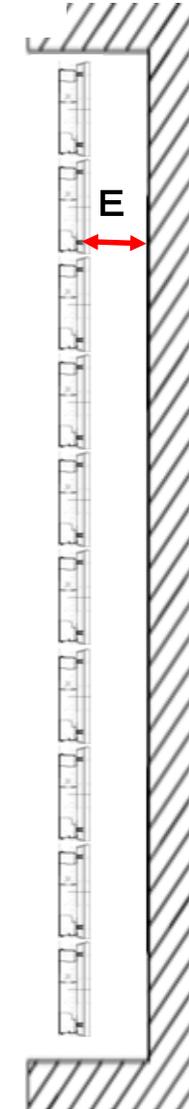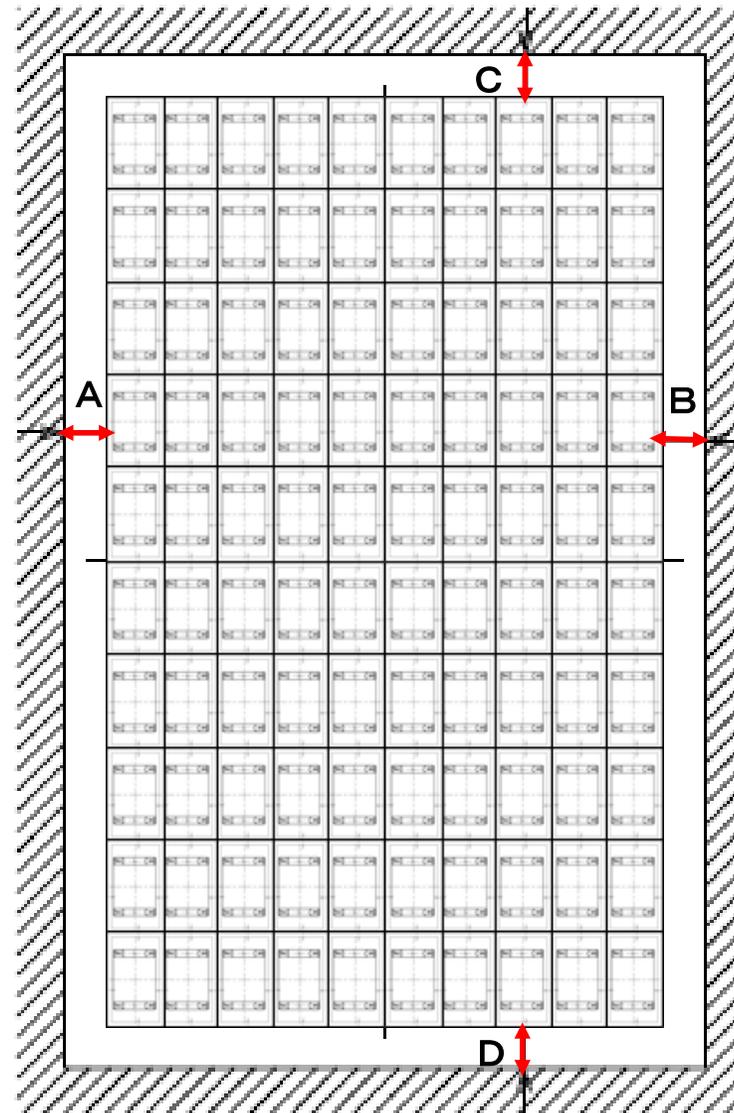


Ambient Condition : Temperature 0–40 °C、Humidity 10–90% (Non condensation)


Note : In case of Lfv8 model, from 20% to 80% (Non condensation)

About connecting to power source

1. Plug the AC cord into this Display.

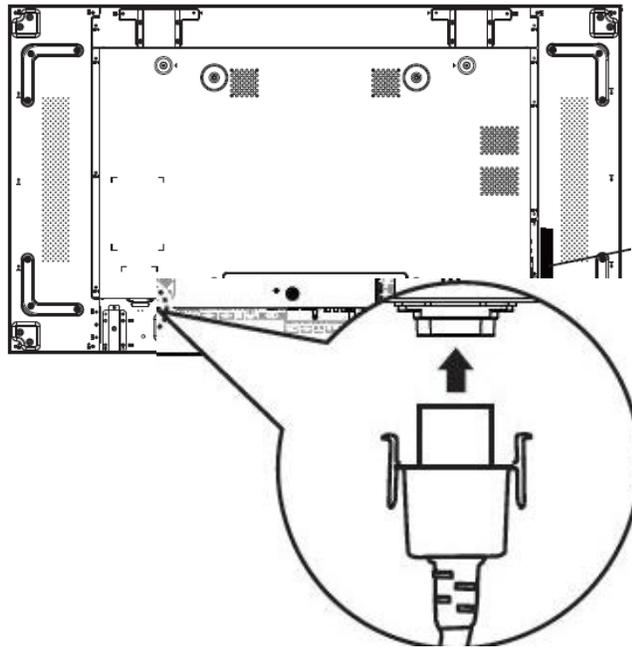


2. Plug the AC cord firmly until it clicks into position. Make sure the AC cord is locked on both the left and right sides.

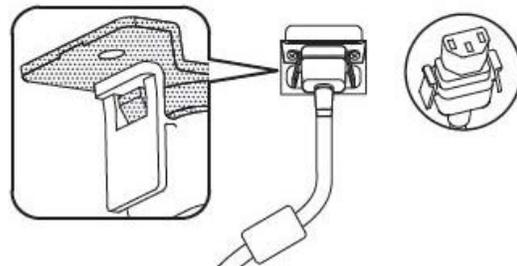

Caution

- Use only the AC power cord included and connect securely.
- Never use a power cord other than the one included as it may lead to a smoke emission and/or fire due to insufficient contact.

AC Power Cord

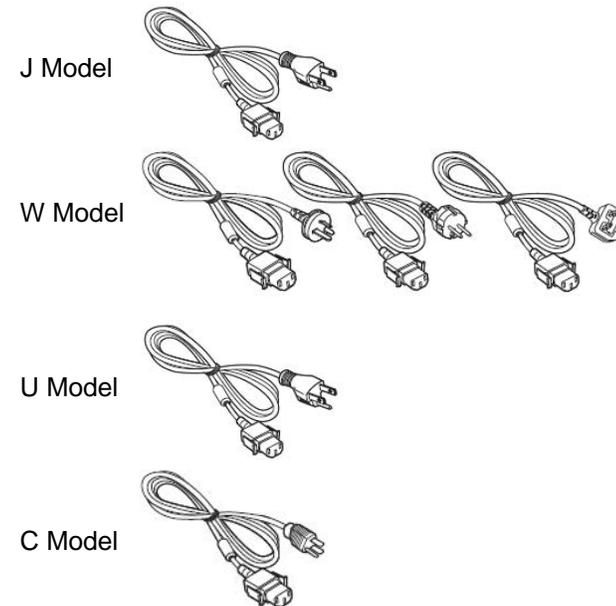


DIGITAL LINK Connection (For VF1H/VF2H/VF2 model)


Max: 10units

※If contents have HDCP signal,
Max 8units is available.

In case of Digital Link input

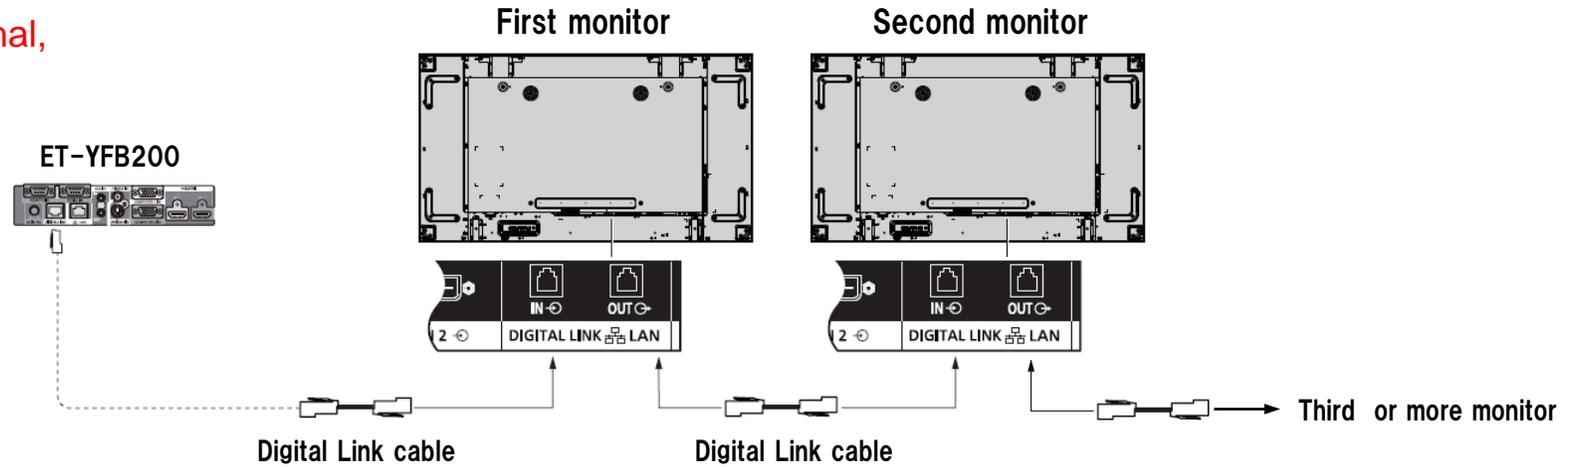

In case of DVI input

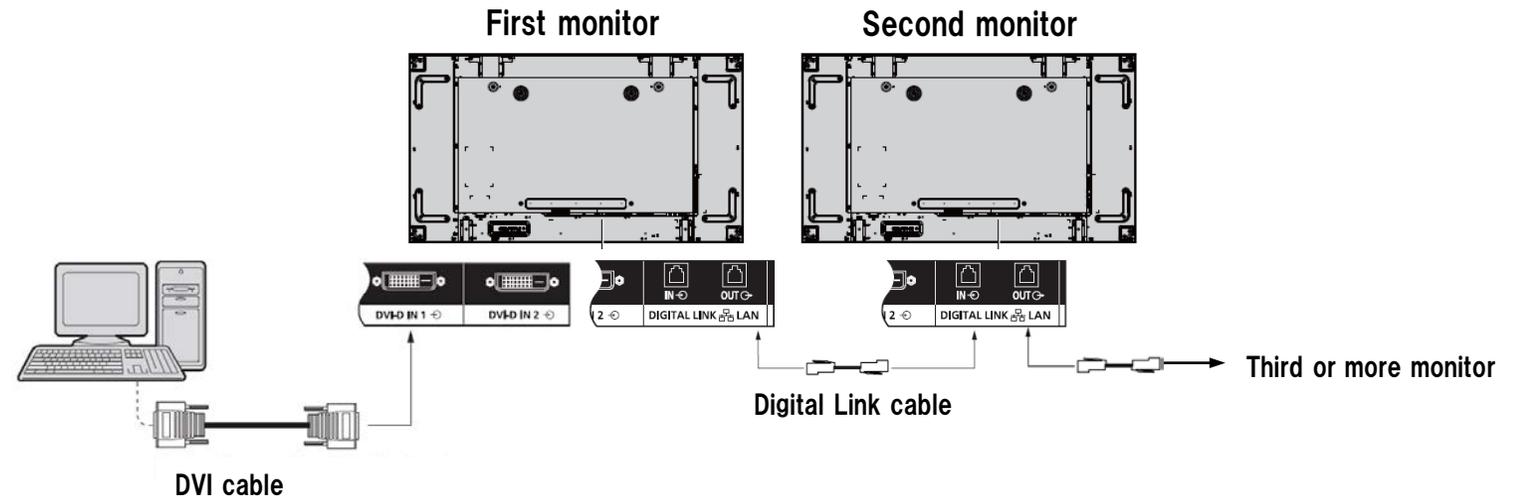


DIGITAL LINK Connection (For VF1H/VF2H/VF2 model)


Max: 10units

※If contents have HDCP signal,
Max 8units is available.

In case of HDMI input

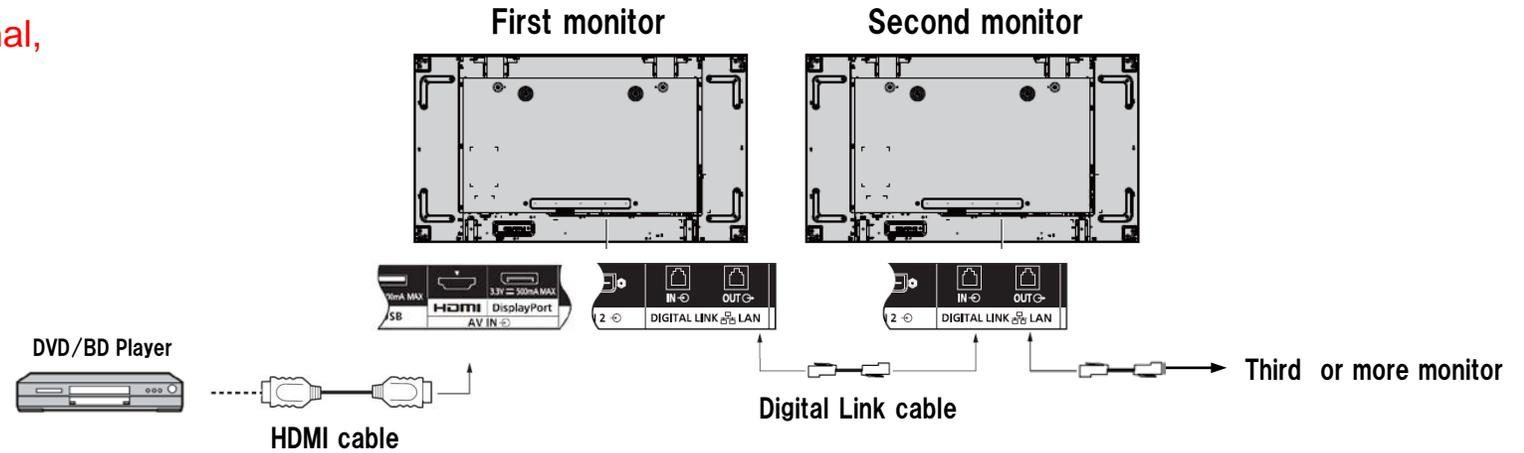


In case of Display Port input

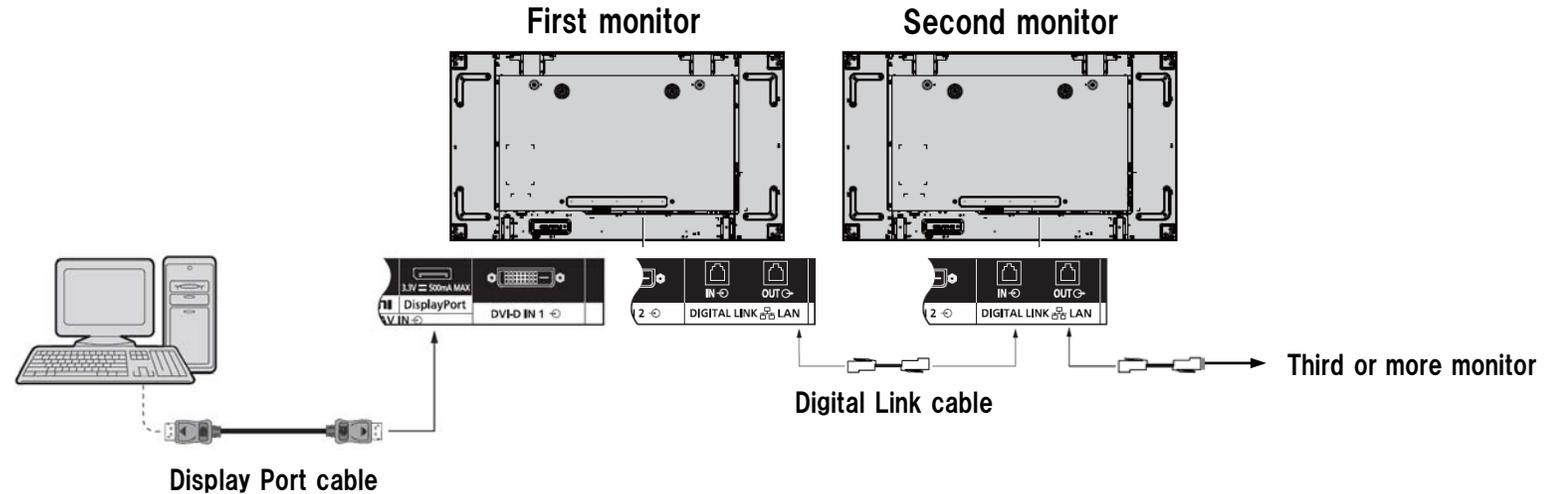

Display Port Daisy Chain Connection (For LfV8/LfV9 model)

Max: 10units


※If contents have HDCP signal,
Max 8units is available.

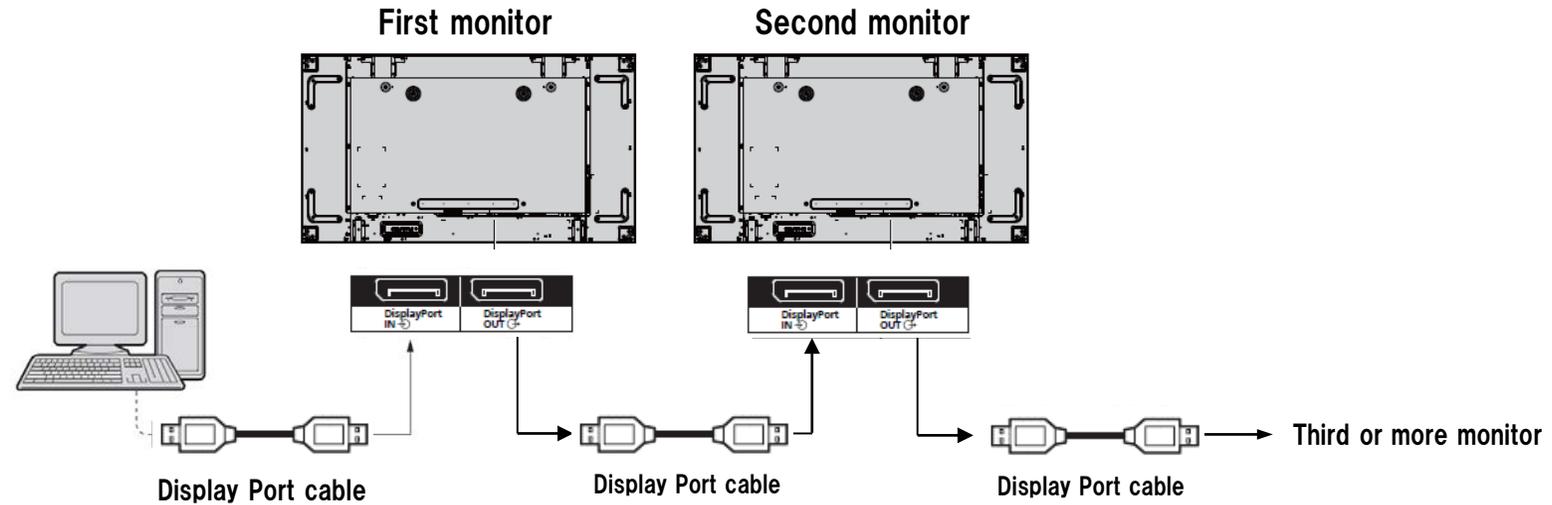


DVI Daisy Chain Connection (For LVF8/LVF9 model)

Max: 10units

※If contents have HDCP signal,
Max 8units is available.

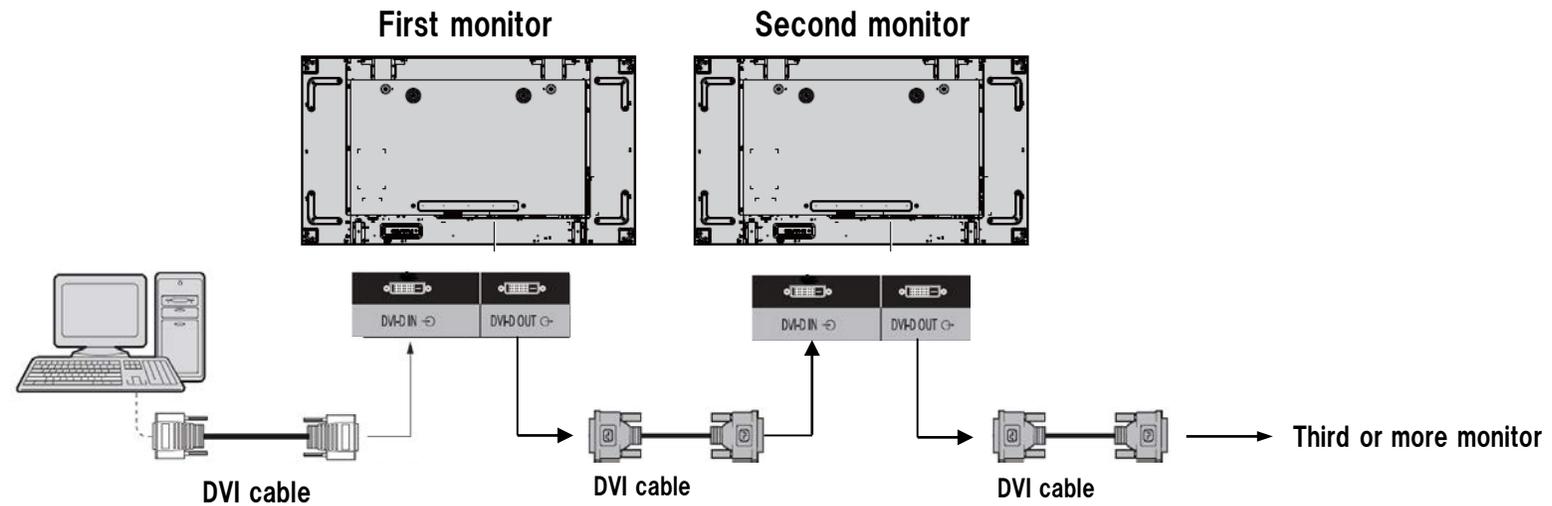


RS-232C Control Connection (For VF1H/VF2H/VF2 model)

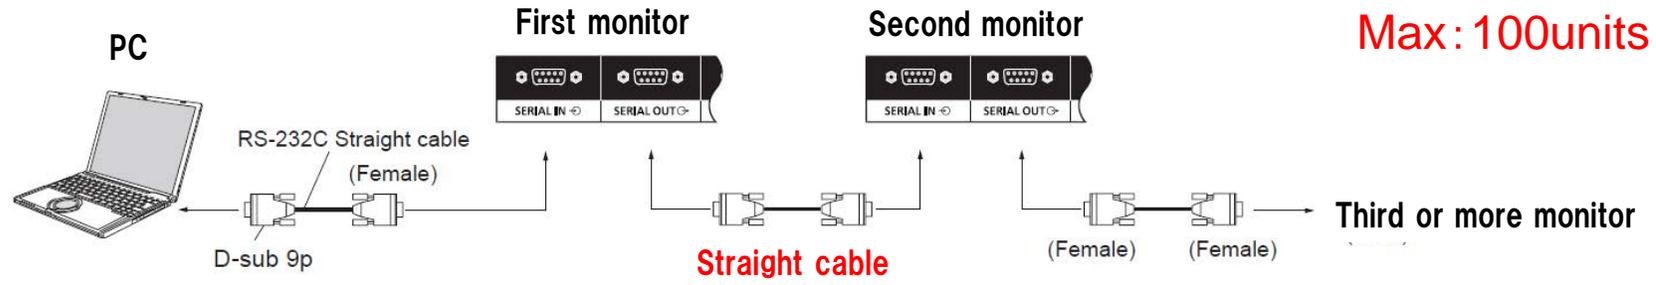


In case of the Digital Link daisy chain connection, no need to connect the RS232C cable. But, connection limitation is same as the Digital Link daisy chain connection.

RS-232C Control Connection (For Lfv8/Lfv9 model)

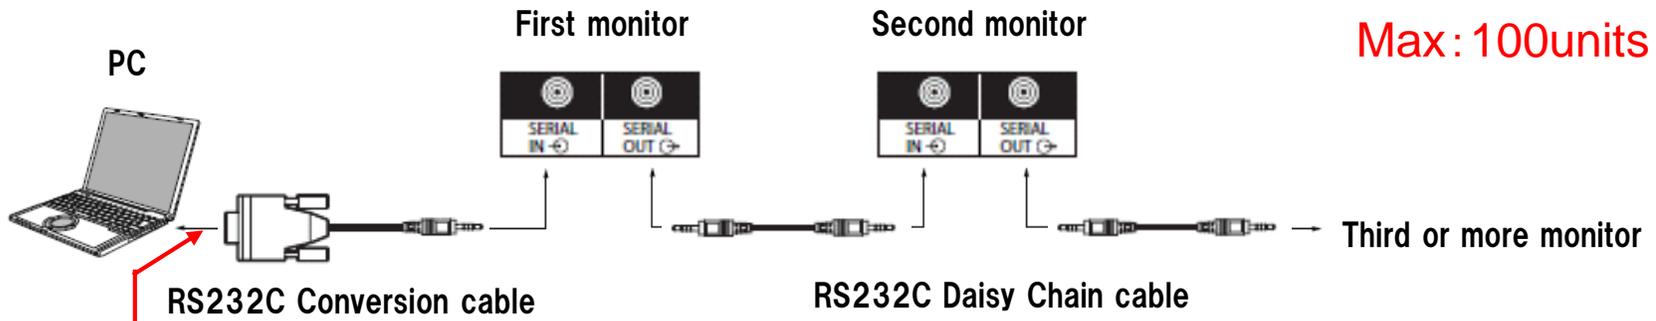

In case of using extended RS232C cable from PC, please use the RS232C straight cable.




EXTERNAL IR CONNECTION

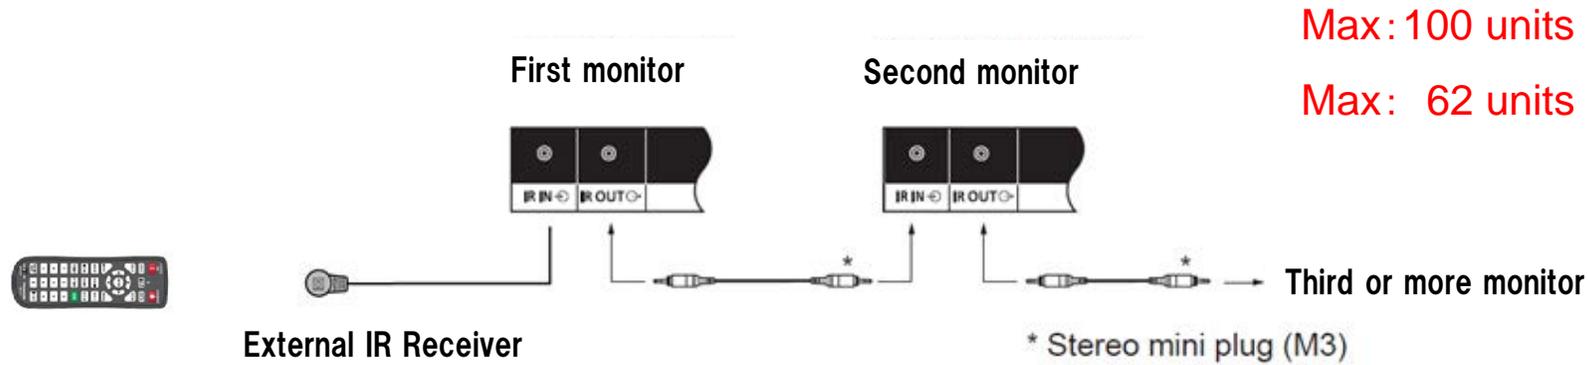

In case of the Digital Link daisy chain connection of the VF1H/VF2H/VF2 model, no need to connect the IR daisy chain cable (stereo mini plug). But, connection limitation is same as the Digital Link daisy chain connection.

◆ Remote controller IR signal outreach distance

In case of using external IR receiver,
the remote controller IR signal outreach distance
is about 7m.

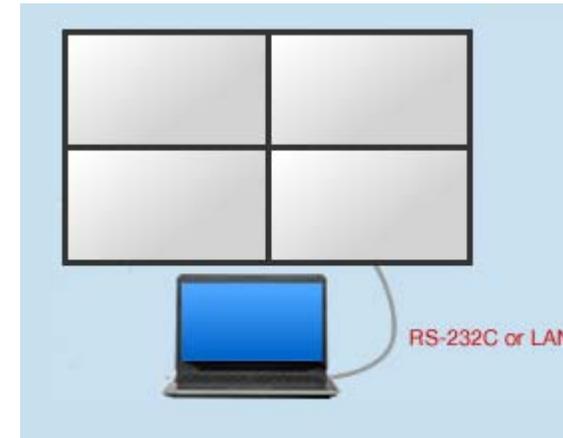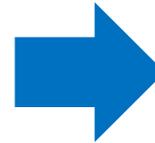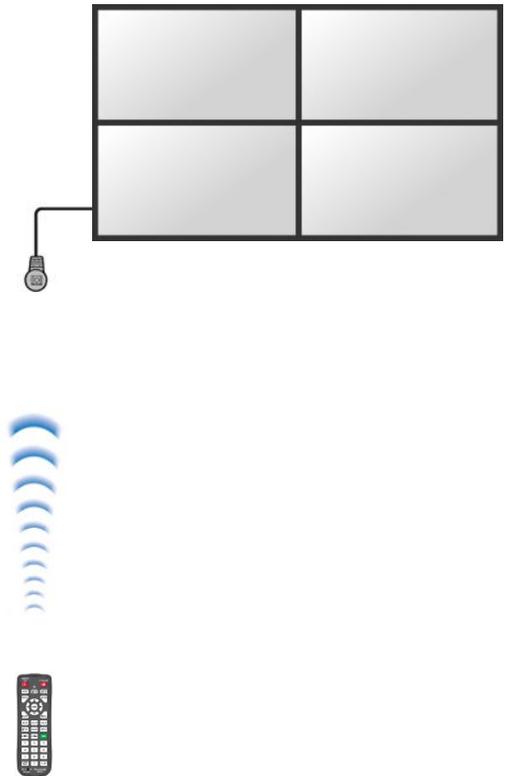


We recommend to use LAN or RS232C
to control the monitor.

◆ Support color calibration

Please refer operation manual of Video Wall Manager Software and TY-VUK10.

Video Wall Manager Software

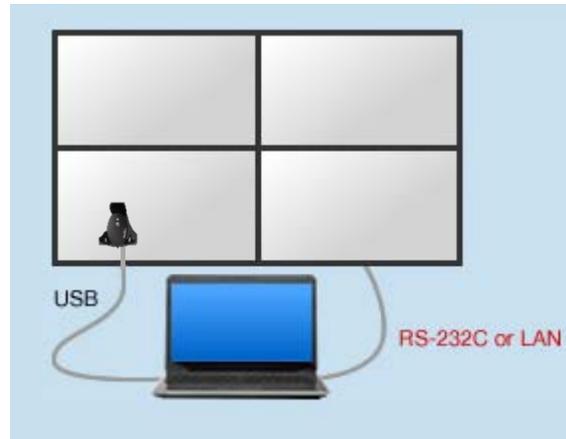

Color adjustment using color sensor

TY-VUK10 (Auto color adjustment Upgrade Kit)



Auto color adjustment using camera

About maintenance

To maintain normal operation, check for the following regularly.

- Remove dust if it collects at the air vents (part indicated in pink) of the monitor. If left as is, a malfunction may occur due to temperature rise caused by insufficient ventilation.

