

## List of Compatible Device Models

### Multi Monitoring & Control Software 3.1

- As of May 2021 -

In using this software, bear in mind that the items whose settings must be selected for the projectors and the functions that can be used may differ from one projector model to another. While referring to the table below, check out that projector models are compatible with the software before using them.

■ A list of compatible flat panel display models is available for download from the Panasonic website (<https://panasonic.net/cns/prodisplays/download/software/>).

#### List of device models

##### ■ Projector\*1

NTN91000*2	62	PT-DW730	28
NTN91001*2	62	PT-DW740	27
NTN91002*2	61	PT-DW750	16
NTN91003*2	61	PT-DW830	16
PT-D10000*3	30	PT-DW8300	26
PT-D12000	25	PT-DW90XE*3	26
PT-D3500*3	32	PT-DX100	16
PT-D4000	32	PT-DX500	29
PT-D5000	28	PT-DX610	27
PT-D5600*3	32	PT-DX800	28
PT-D5700	32	PT-DX810	27
PT-D6000	28	PT-DX820	16
PT-D7700*3	31	PT-DZ10K	15
PT-DS100XE*3	26	PT-DZ110XE*3	26
PT-DS12K	15	PT-DZ12000	25
PT-DS20K	15	PT-DZ13K	15
PT-DS20K2	14	PT-DZ16K	15
PT-DS8500	26	PT-DZ16K2	14
PT-DW100	25	PT-DZ21K	15
PT-DW10000*3	30	PT-DZ21K2	14
PT-DW105XEA*4	26	PT-DZ570	29
PT-DW11K	15	PT-DZ6700	28
PT-DW17K	15	PT-DZ6710	28
PT-DW17K2	14	PT-DZ680	27
PT-DW5000*3	32	PT-DZ770	27
PT-DW5100	32	PT-DZ780	16
PT-DW530	29	PT-DZ870	16
PT-DW6300	28	PT-DZ8700	26
PT-DW640	27	PT-EW530	36
PT-DW7000*3	31	PT-EW540	33

PT-EW550	34	PT-LB356*4	54
PT-EW551*4	35	PT-LB360	57
PT-EW630	36	PT-LB382	56
PT-EW640	33	PT-LB383	56
PT-EW650	34	PT-LB385*4	55
PT-EW651*4	35	PT-LB386*4	54
PT-EW730	33	PT-LB412	56
PT-EX12K	37	PT-LB423	56
PT-EX16K	37	PT-LB425	55
PT-EX500	36	PT-LB426	54
PT-EX510*4	33	PT-LB90NT	59
PT-EX520*4	34	PT-LRW35*4	53
PT-EX521*4	35	PT-LRZ35*4	53
PT-EX600	36	PT-LW25H	58
PT-EX610	33	PT-LW280	57
PT-EX620	34	PT-LW312	56
PT-EX621*4	35	PT-LW330	57
PT-EX800	33	PT-LW333*4	56
PT-EZ57*4	34	PT-LW335*4	55
PT-EZ570	36	PT-LW336*4	54
PT-EZ580	33	PT-LW362	56
PT-EZ590	34	PT-LW373	56
PT-EZ591*4	35	PT-LW375	55
PT-EZ770	33	PT-LW376	54
PT-F100NT	51	PT-LX26H	58
PT-F200NT	51	PT-LX30H	58
PT-F300	50	PT-LZ370	52
PT-F300NT	50	PT-MW530	19
PT-FRZ50	13	PT-MW630	19
PT-FRZ55	13	PT-MW730	19
PT-FRZ60*4	13	PT-MZ10K	17
PT-FW100NT	51	PT-MZ13K	17
PT-FW300	50	PT-MZ16K	17
PT-FW300NT	50	PT-MZ570	19
PT-FW430	49	PT-MZ670	19
PT-FW530	35	PT-MZ680	18
PT-FX400	49	PT-MZ770	19
PT-FX500*4	35	PT-MZ780	18
PT-FZ570	35	PT-MZ880	18
PT-JW130F*4	62	PT-RCQ10	9
PT-JW130G*4	62	PT-RCQ80	9
PT-JW130H*4	62	PT-RQ13K	7
PT-JX200F*4	61	PT-RQ22K	9
PT-JX200G*4	61	PT-RQ32K	7
PT-JX200H*4	61	PT-RQ35K	6
PT-LB1	60	PT-RQ50K	5
PT-LB1V	60	PT-RS11K	7
PT-LB2	60	PT-RS20K	9
PT-LB2V	60	PT-RS30K	7
PT-LB3	60	PT-RW330	24
PT-LB330	57	PT-RW430	23
PT-LB332*4	56	PT-RW620	11
PT-LB353*4	56	PT-RW630	12
PT-LB355*4	55	PT-RW730	11

PT-RW930	11	PT-VW350*4	47
PT-RX110	11	PT-VW355N	39
PT-RZ12K	7	PT-VW360	46
PT-RZ120	9	PT-VW430	43
PT-RZ16K	8	PT-VW431D	43
PT-RZ21K	9	PT-VW435N	45
PT-RZ31K	7	PT-VW440	43
PT-RZ34K	6	PT-VW530*4	41
PT-RZ370	24	PT-VW535N	39
PT-RZ470	23	PT-VW540*4	40
PT-RZ475	22	PT-VW545N	38
PT-RZ570	21	PT-VX400	44
PT-RZ575	21	PT-VX400NT	45
PT-RZ660	11	PT-VX405*4	43
PT-RZ670	12	PT-VX406*4	48
PT-RZ690	10	PT-VX41	44
PT-RZ770	11	PT-VX410*4	47
PT-RZ790*4	10	PT-VX415N	39
PT-RZ870	12	PT-VX42*4	47
PT-RZ890	10	PT-VX420*4	47
PT-RZ970	11	PT-VX421*4	48
PT-RZ990*4	10	PT-VX425N	39
PT-ST10	60	PT-VX430	46
PT-TW230	58	PT-VX431K	46
PT-TW231R	58	PT-VX45*4	43
PT-TW250*4	57	PT-VX46*4	48
PT-TW340*4	57	PT-VX50*4	41
PT-TW341R	57	PT-VX500	43
PT-TW342*4	57	PT-VX501*4	43
PT-TW343R	57	PT-VX505N	45
PT-TW350*4	56	PT-VX51*4	40
PT-TW351R	56	PT-VX510	43
PT-TW370*4	55	PT-VX60*4	41
PT-TW371R	55	PT-VX600*4	41
PT-TW380*4	54	PT-VX605N	39
PT-TW381R	54	PT-VX61*4	40
PT-TX310*4	57	PT-VX610	40
PT-TX312*4	57	PT-VX615N	38
PT-TX320*4	56	PT-VZ470*4	42
PT-TX340*4	55	PT-VZ570*4	41
PT-TX350*4	54	PT-VZ575N	39
PT-TX400*4	57	PT-VZ580*4	40
PT-TX402*4	57	PT-VZ585N	38
PT-TX410*4	56	TH-D10000	30
PT-TX430*4	55	TH-D3500	32
PT-TX440*4	54	TH-D5600	32
PT-VMW50	20	TH-D7700	31
PT-VMW60*4	20	TH-DW10000	30
PT-VMZ40*4	20	TH-DW5000	32
PT-VMZ50	20	TH-DW7000	31
PT-VMZ60	20		
PT-VW330	44		
PT-VW340*4	47		
PT-VW345N	39		

\*1: Note on model groups

Devices are categorized into one of two groups depending on the type of information that can be accessed from them by the each software of the monitoring, control functions and the early warning function (paid).

The difference in the type of information that can be accessed for “rich information models” and “basic information models” is as follows.

○: Supported    ×: Not supported

Item	Model categorization based on accessible information difference	
	Rich information model	Basic information model
Group Name	○	○
IP Address	○	○
Shutter (AV Mute)	○	○
Model Name	○	○
Serial Number	○*	×
Selected input	○	○
Power	○	○
Selected LIGHT	○*	×
LIGHT Power / Operating mode	○	×
Signal Freq.	○	×
Main Version	○	×
Network Version	○*	×
Power on hours	○	○*
Temperature	○*	×
LIGHT status	○*	○*
Fan status	○*	×

\* May not be accessible depending on the device.

\*2: Model number of product sold in Japan. This will differ for products sold in other regions.

\*3: Model number of product sold in regions other than Japan. This will differ for products sold in Japan.

\*4: Not sold in Japan.

## Notes

The software is not compatible with any device models not appearing in this “Device model list.”

## Peripheral device list

### ■ Peripheral devices

#### DIGITAL LINK Switcher

ET-YFB200 ..... 63

#### Network camera

Panasonic BB-S Series, DG-S Series, WV-S Series, AW-UN70 Series, AW-HN130 Series, AW-HN40 Series, AW-HE130 Series, AW-HE40 Series, and AW-HR140 network cameras are supported. Allows the video shown on a display (projector or flat-panel display) to be checked remotely through a camera.

# PT-RQ50K

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/E/X/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards		Not used
Connection to projector	IP address		Only fixed IP address supported
	WEB control screen login	User name	dispadmin*1
		Password	@Panasonic*2
	PJLink	Password	@Panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby		—
	Network control		
		WEB control	ON
		Command control	—
		WEB port / Command port	1024
		PJLink control	ON
		ECO management	
	Standby mode	—	
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	○
		ECO management function	×
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	Light ID control function	×	
	Remote Preview function	○	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		○	
Display of WEB control screen for devices function		○	
Maintenance log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

## PT-RQ35K / PT-RZ34K

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/E/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards		Not used
Connection to projector	IP address		Only fixed IP address supported
	WEB control screen login	User name	Set by user* <sup>1</sup>
		Password	Set by user* <sup>1</sup>
	PJLink	Password	Set by user* <sup>1</sup>
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby		—
	Network control		
		WEB control	ON
		Command control	—
		WEB port / Command port	1024
		PJLink control	ON
		ECO management	
	Standby mode	—	
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	○
		ECO management function	×
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	Light ID control function	×	
	Remote Preview function	○	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		○	
Display of WEB control screen for devices function		○	
Maintenance log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

\*1: The user name and password settings are required at the time of initial configuration.

■ PT-RQ32K / PT-RZ31K / PT-RS30K

■ PT-RQ13K / PT-RZ12K / PT-RS11K

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: A/D/E/J/T/U/(blank), lens: (blank)/L, cabinet color: B/K/W/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	1024	
	PJLink control	ON	
	ECO management		
	Standby mode	—	
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	○
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
	Light ID control function	X	
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
Filter clog prediction		X	
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		○	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		○	
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

# PT-RZ16K

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: (blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards		Not used
Connection to projector	IP address		Only fixed IP address supported
	WEB control screen login	User name	Set by user* <sup>1</sup>
		Password	Set by user* <sup>1</sup>
	PJLink	Password	Set by user* <sup>1</sup>
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby		—
	Network control		
		WEB control	ON
		Command control	—
		WEB port / Command port	1024
		PJLink control	ON
	ECO management		
		Standby mode	—
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	○
		ECO management function	×
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
		Light ID control function	×
		Remote Preview function	×
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		○	
Display of WEB control screen for devices function	○		
Maintenance log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

\*1: The user name and password settings are required at the time of initial configuration.



■ PT-RCQ10 / PT-RCQ80

■ PT-RQ22K / PT-RZ21K / PT-RS20K

■ PT-RZ120

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: A/D/E/J/T/U/X/(blank), lens: (blank)/L, cabinet color: B/K/W/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	dispadmin*1
		Password	@Panasonic*2
	PJLink	Password	@Panasonic*2
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	1024	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	○
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
		Light ID control function	X
		Remote Preview function	X
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function	○		
Display of WEB control screen for devices function	○		
Maintenance log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

## PT-RZ990 / PT-RZ890 / PT-RZ790 / PT-RZ690

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/J/(blank), lens: (blank)/L, cabinet color: B/W/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	Set by user* <sup>1</sup>
		Password	Set by user* <sup>1</sup>
	PJLink	Password	Set by user* <sup>1</sup>
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	1024	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	○
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
	Wireless settings display function	X	
	Light ID control function	X	
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
Filter clog prediction		X	
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		○	
Display of WEB control screen for devices function	○		
Maintenance log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

\*1: The user name and password settings are required at the time of initial configuration.

**PT-RZ970 / PT-RW930 / PT-RX110 / PT-RZ770 / PT-RW730 / PT-RZ660 / PT-RW620**

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: A/D/E/J/T/U/(blank), lens: (blank)/L, cabinet color: B/K/W/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	1024	
	PJLink control	ON	
	ECO management		
Standby mode	—		
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	○
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
		Light ID control function	X
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		X	
Display of WEB control screen for devices function	○		
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

# PT-RZ670 / PT-RW630

# PT-RZ870

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: A/D/E/J/T/U/(blank), lens: (blank)/L, cabinet color: B/K/W/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	1024	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	○
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
	Wireless settings display function	X	
	Light ID control function	X	
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
Filter clog prediction		X	
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

## PT-FRZ60 / PT-FRZ50 / PT-FRZ55

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/J/T/(blank), cabinet color: B/W)

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	Set by user* <sup>1</sup>
		Password	Set by user* <sup>1</sup>
	PJLink	Password	Set by user* <sup>1</sup>
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	○
		ECO management function	○
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
	Light ID control function	X	
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

\*1: The user name and password settings are required at the time of initial configuration.

## PT-DZ21K2 / PT-DS20K2 / PT-DW17K2 / PT-DZ16K2

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: A/D/E/J/T/U/(blank), lens: (blank)/L, cabinet color: B/K/W/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	1024	
	PJLink control	ON	
	ECO management		
Standby mode	—		
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	○
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
	Light ID control function	X	
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		○	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-DZ21K / PT-DS20K / PT-DW17K / PT-DZ16K

■ PT-DZ13K / PT-DS12K / PT-DW11K / PT-DZ10K

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: A/D/E/J/T/U/(blank), lens: (blank)/L, cabinet color: B/K/W/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	1024	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	○
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
	Light ID control function	X	
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
Filter clog prediction		X	
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		○	
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-DZ870 / PT-DW830 / PT-DX100

■ PT-DZ780 / PT-DW750 / PT-DX820

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: A/D/E/J/T/U/(blank), lens: (blank)/L, cabinet color: B/K/W/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	1024	
	PJLink control	ON	
	ECO management		
	Standby mode	—	
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	○
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
	Light ID control function	X	
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
Filter clog prediction		X	
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		○	
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.



## PT-MZ16K / PT-MZ13K / PT-MZ10K

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/E/J/X/(blank), lens: L, cabinet color: B/W)

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	dispadmin*1
		Password	@Panasonic*2
	PJLink	Password	@Panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	1024	
	PJLink control	ON	
	ECO management		
Standby mode	—		
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
	Light ID control function	X	
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		○	
Display of WEB control screen for devices function		○	
Maintenance log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

# PT-MZ880 / PT-MZ780 / PT-MZ680

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/J/T/(blank), cabinet color: B/W)

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards		Not used
Connection to projector	IP address		Only fixed IP address supported
	WEB control screen login	User name	Set by user* <sup>1</sup>
		Password	Set by user* <sup>1</sup>
	PJLink	Password	Set by user* <sup>1</sup>
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby		—
	Network control		
		WEB control	ON
		Command control	—
		WEB port / Command port	1024
		PJLink control	ON
		ECO management	
	Standby mode	—	
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	○
		Distribution image deletion function	○
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	○
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
	Early warning function (paid)	Wireless settings display function	×
		Light ID control function	×
		Remote Preview function	×
		Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
Filter clog prediction	×		
Maintenance prediction function	○		
Temperature information graph display function	○		
Voltage information graph display function	×		
Display of WEB control screen for devices function	○		
Maintenance log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

\*1: The user name and password settings are required at the time of initial configuration.

■ PT-MZ670 / PT-MW630 / PT-MZ570 / PT-MW530

■ PT-MZ770 / PT-MW730

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: A/D/J/(blank), lens: (blank)/L, cabinet color: (blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	dispadmin*1
		Password	@Panasonic*2
	PJLink	Password	@Panasonic*2
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	1024	
	PJLink control	ON	
	ECO management		
	Standby mode	—	
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	○
		Distribution image deletion function	○
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	○
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	○
		ECO Power Level Monitor Function	X
		Wireless settings display function	○*3
	Light ID control function	○	
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
Filter clog prediction		X	
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
Maintenance log acquisition (automatic acquisition only when error, warning, or notification occurs)		○	
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

\*3: Optional wireless module (ET-WM300) is required.

## PT-VMZ60 / PT-VMZ50 / PT-VMZ40 / PT-VMW60 / PT-VMW50

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/J/T/(blank), cabinet color: B/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	dispadmin*1
		Password	@Panasonic*2
	PJLink	Password	@Panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	○
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	Light ID control function	×	
	Remote Preview function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

## PT-RZ575 / PT-RZ570

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: A/D/J/T/(blank), cabinet color: B/W)

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	○
		ECO management function	○
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
	Early warning function (paid)	Wireless settings display function	X
		Light ID control function	X
		Remote Preview function	X
		Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function	X		
Display of WEB control screen for devices function	○		
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

# PT-RZ475

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/EA/U/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards		Not used
Connection to projector	IP address		Only fixed IP address supported
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby		—
	Network control		
		WEB control	ON
		Command control	—
		WEB port / Command port	—
		PJLink control	ON
		ECO management	
	Standby mode	—	
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	○*3
		ECO management function	○
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	Light ID control function	×	
	Remote Preview function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

\*3: If the temperature of the projector's surroundings is elevated, light output may be reduced in order to protect the projector unit. If this software is used for the brightness control of multiple projectors, please ensure that as far as possible the temperature of the surroundings is the same for all projectors.

## PT-RZ470 / PT-RW430

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/EA/U/(blank), cabinet color: K/W/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1* <sup>1</sup>
		Password	panasonic* <sup>2</sup>
	PJLink	Password	panasonic* <sup>2</sup>
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	○* <sup>3</sup>
		ECO management function	○
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	○
		Wireless settings display function	X
	Light ID control function	X	
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	X
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

\*3: If the temperature of the projector's surroundings is elevated, light output may be reduced in order to protect the projector unit. If this software is used for the brightness control of multiple projectors, please ensure that as far as possible the temperature of the surroundings is the same for all projectors.

## PT-RZ370 / PT-RW330

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/EA/U/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards		Not used
Connection to projector	IP address		Only fixed IP address supported
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby		—
	Network control		
		WEB control	ON
		Command control	—
		WEB port / Command port	—
		PJLink control	ON
		ECO management	
	Standby mode	—	
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	X
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	○
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	○
	Wireless settings display function	X	
	Light ID control function	X	
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	X
Filter clog prediction		X	
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.



# PT-DZ12000 / PT-D12000 / PT-DW100

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/U/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not required (LAN terminal installed)*1	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*2
		Password	panasonic*3
	PJLink	Password	panasonic*3
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	ON	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	1024	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Functions	Auto search (local network) function	×	
	Device status monitoring function (Simplified)	○	
	Device location information registering function (Map monitoring function)	○	
	Command transmission function	○	
	Simultaneous image distribution function	×	
	Distribution image deletion function	×	
	Interrupting delivery function	×	
	Brightness control function	×	
	ECO management function	×	
	Signage schedule acquisition and delivery functions	×	
	Maintenance log save function	○	
	Contents list delivery function	×	
	ECO Power Level Monitor Function	×	
	Wireless settings display function	×	
	Light ID control function	×	
	Remote Preview function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
		Voltage information graph display function	×
		Display of WEB control screen for devices function	○
		System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○
	Stopped camera image detecting function	○	

\*1: Of the commercially available expansion boards, the ET-MD77NT network board is not supported. With expansion boards other than the ET-MD77NT, the network function on the expansion board side cannot be used (DVI, SDI, and other inputs are enabled). The ET-MD100SD4 digital signal input board (for dual link HD-SDI) is supported.

\*2: This is the user name provided at the time of shipment.

\*3: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

**PT-DZ8700 / PT-DS8500 / PT-DW8300 / PT-DZ110XE / PT-DS100XE / PT-DW90XE / PT-DW105XEA**

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/U/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	○
		ECO management function	×
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	Light ID control function	×	
	Remote Preview function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		○	
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-DZ770 / PT-DW740 / PT-DX810

■ PT-DZ680 / PT-DW640 / PT-DX610

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/U/(blank), cabinet color: K/S/(blank), lens: (blank)/L)

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	X
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
	Light ID control function	X	
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
Filter clog prediction		X	
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		○	
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-DZ6710 / PT-DZ6700 / PT-DW6300 / PT-D6000 / PT-D5000

■ PT-DW730 / PT-DX800

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/U/(blank), cabinet color: K/S/(blank), lens: (blank)/L)

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
	Standby mode	—	
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	X
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
	Light ID control function	X	
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
Filter clog prediction		X	
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		○	
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

# PT-DZ570 / PT-DW530 / PT-DX500

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/U/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	○
		Distribution image deletion function	○
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	×
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	Light ID control function	×	
	Remote Preview function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

# TH-DW10000 / TH-D10000 / PT-DW10000 / PT-D10000

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/U)

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not required (LAN terminal installed)*1	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	user1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
Standby mode	—		
Functions	Auto search (local network) function	×	
	Device status monitoring function (Simplified)	○	
	Device location information registering function (Map monitoring function)	○	
	Command transmission function	○	
	Simultaneous image distribution function	×	
	Distribution image deletion function	×	
	Interrupting delivery function	×	
	Brightness control function	×	
	ECO management function	×	
	Signage schedule acquisition and delivery functions	×	
	Maintenance log save function	×	
	Contents list delivery function	×	
	ECO Power Level Monitor Function	×	
	Wireless settings display function	×	
	Light ID control function	×	
	Remote Preview function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
Filter clog prediction		×	
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		×	
Stopped camera image detecting function	○		

\*1: Of the commercially available expansion boards, the ET-MD77NT network board is not supported.

With expansion boards other than the ET-MD77NT, the network function on the expansion board side cannot be used (DVI, SDI, and other inputs are enabled).

The ET-MD100SD4 digital signal input board (for dual link HD-SDI) is supported. (except for TH-D10000 and PT-D10000)

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

# TH-D7700 / TH-DW7000 / PT-D7700 / PT-DW7000

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/U, cabinet color: K/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards		Expansion board required* <sup>1</sup>
Connection to projector	IP address		Only fixed IP address supported
	WEB control screen login	User name	user1
		Password	panasonic* <sup>2</sup>
	PJLink	Password	panasonic* <sup>2</sup>
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby		—
	Network control		
		WEB control	—
		Command control	—
		WEB port / Command port	—
		PJLink control	—
	ECO management		
		Standby mode	—
Functions	Monitoring and control functions	Auto search (local network) function	×
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	×
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	×
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
		Light ID control function	×
		Remote Preview function	×
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
		Voltage information graph display function	×
Display of WEB control screen for devices function	○		
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	×		
Stopped camera image detecting function	○		

\*1: One of the following commercially available expansion boards with a network function is required.

Network board: ET-MD77NT

Digital signal input board (for SD-SDI): ET-MD77SD1

Digital signal input board (for HD-SDI): ET-MD77SD3

Digital signal input board (for DVI): ET-MD77DV

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-D5700 / PT-D4000 / PT-DW5100

■ TH-D5600 / PT-D5600 / TH-DW5000 / PT-DW5000

■ TH-D3500 / PT-D3500

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/U/(blank), lens: (blank)/L)

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	user1
		Password	panasonic*1
	PJLink	Password	panasonic*1
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control		
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
Standby mode	—		
Functions	Auto search (local network) function	X	
	Device status monitoring function (Simplified)	○	
	Device location information registering function (Map monitoring function)	○	
	Command transmission function	○	
	Simultaneous image distribution function	X	
	Distribution image deletion function	X	
	Interrupting delivery function	X	
	Brightness control function	X	
	ECO management function	X	
	Signage schedule acquisition and delivery functions	X	
	Maintenance log save function	X	
	Contents list delivery function	X	
	ECO Power Level Monitor Function	X	
	Wireless settings display function	X	
	Light ID control function	X	
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	X
Filter clog prediction		X	
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		X	
Stopped camera image detecting function	○		
Monitoring and control functions	Auto search (local network) function	X	
	Device status monitoring function (Simplified)	○	
	Device location information registering function (Map monitoring function)	○	
	Command transmission function	○	
	Simultaneous image distribution function	X	
	Distribution image deletion function	X	
	Interrupting delivery function	X	
	Brightness control function	X	
	ECO management function	X	
	Signage schedule acquisition and delivery functions	X	
	Maintenance log save function	X	
	Contents list delivery function	X	
	ECO Power Level Monitor Function	X	
	Wireless settings display function	X	
Light ID control function	X		

\*1: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.



■ PT-EZ770 / PT-EW730 / PT-EX800

■ PT-EZ580 / PT-EW640 / PT-EW540 / PT-EX610 / PT-EX510

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: A/D/J/K/T/Z/(blank), lens: (blank)/L)

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
	Standby mode	—	
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	X
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	○
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
	Light ID control function	X	
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
Filter clog prediction		X	
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		○	
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

**PT-EZ590\*3 / PT-EW650\*3 / PT-EW550\*3 / PT-EX620\*3 / PT-EX520\*3 / PT-EZ57\*3**

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/J/K/T/(blank), lens: (blank)/L)

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	×
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	○
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	Light ID control function	×	
	Remote Preview function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

\*3: Devices for which the main microcomputer version is below Ver.1.08 do not support the early warning function. You can check the version on the following page as [Projector Information] --> [Main Version] in the WEB control screen.

■ PT-EZ591 / PT-EW651 / PT-EW551 / PT-EX621 / PT-EX521

■ PT-FZ570\*3 / PT-FW530\*3 / PT-FX500\*3

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/J/K/T/(blank), lens: (blank)/L)

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Functions	Standby mode	Normal	
	Auto search (local network) function	X	
	Device status monitoring function (Simplified)	○	
	Device location information registering function (Map monitoring function)	○	
	Command transmission function	○	
	Simultaneous image distribution function	X	
	Distribution image deletion function	X	
	Interrupting delivery function	X	
	Brightness control function	X	
	ECO management function	○	
	Signage schedule acquisition and delivery functions	X	
	Maintenance log save function	○	
	Contents list delivery function	X	
	ECO Power Level Monitor Function	X	
	Wireless settings display function	X	
	Light ID control function	X	
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
Fan failure prediction function		○	
Filter clog prediction		X	
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		○	
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

\*3: Devices for which the main microcomputer version is below Ver.1.08 do not support the early warning function. You can check the version on the following page as [Projector Information] --> [Main Version] in the WEB control screen.

# PT-EZ570 / PT-EW630 / PT-EW530 / PT-EX600 / PT-EX500

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/EA/U/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal, Network	
Functions	Monitoring and control functions	Auto search (local network) function	×
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	○
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	Light ID control function	×	
	Remote Preview function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	×		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-EX16K

■ PT-EX12K

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/U/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Functions	Standby mode	—	
	Auto search (local network) function	×	
	Device status monitoring function (Simplified)	○	
	Device location information registering function (Map monitoring function)	○	
	Command transmission function	○	
	Simultaneous image distribution function	×	
	Distribution image deletion function	×	
	Interrupting delivery function	×	
	Brightness control function	×	
	ECO management function	×	
	Signage schedule acquisition and delivery functions	×	
	Maintenance log save function	○	
	Contents list delivery function	×	
	ECO Power Level Monitor Function	×	
	Wireless settings display function	×	
	Light ID control function	×	
	Remote Preview function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
Fan failure prediction function		×	
Filter clog prediction		×	
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		×	
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

# PT-VZ585N / PT-VW545N / PT-VX615N

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/J/T/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	Normal		
Functions	Standby mode	—	
	Auto search (local network) function	○	
	Device status monitoring function (Simplified)	○	
	Device location information registering function (Map monitoring function)	○	
	Command transmission function	○	
	Simultaneous image distribution function	○	
	Distribution image deletion function	○	
	Interrupting delivery function	×	
	Brightness control function	×	
	ECO management function	○	
	Signage schedule acquisition and delivery functions	×	
	Maintenance log save function	○	
	Contents list delivery function	×	
	ECO Power Level Monitor Function	×	
	Wireless settings display function	○	
	Light ID control function	×	
	Remote Preview function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
Fan failure prediction function		○	
Filter clog prediction		×	
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		×	
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-VZ575N / PT-VW535N / PT-VX605N

■ PT-VW355N / PT-VX425N

■ PT-VW345N / PT-VX415N

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/J/T/Z/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control	ON	
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
	Standby mode	—	
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	○
		Distribution image deletion function	○
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	○
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	○
	Light ID control function	X	
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	X
Filter clog prediction		X	
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		X	
Display of WEB control screen for devices function	○		
	System log acquisition (automatic acquisition only when error, warning, or notification occurs)	X	
	Stopped camera image detecting function	○	

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

# PT-VZ580 / PT-VW540 / PT-VX610 / PT-VX61 / PT-VX51

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/J/K/K1/T/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	ON	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	X
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	○
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
	Light ID control function	X	
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	X		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.



■ PT-VZ570 / PT-VW530 / PT-VX600

■ PT-VX60 / PT-VX50

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/T/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control	ON	
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
	Standby mode	—	
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	X
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	○
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
	Light ID control function	X	
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	X
Filter clog prediction		X	
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		X	
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

# PT-VZ470

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards		Not used
Connection to projector	IP address		Only fixed IP address supported
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby		—
	Network control		ON
	WEB control		—
	Command control		—
	WEB port / Command port		—
	PJLink control		—
	ECO management		
Standby mode		—	
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	X
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	○
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
		Light ID control function	X
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		X	
Display of WEB control screen for devices function	○		
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	X		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-VW440 / PT-VX510

■ PT-VW431D

■ PT-VW430 / PT-VX501 / PT-VX500 / PT-VX405 / PT-VX45

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/EA/KEA/U/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control	ON	
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
Standby mode	—		
Standby mode	Network		
Functions	Monitoring and control functions	Auto search (local network) function	X
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
	Light ID control function	X	
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	X
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		X	
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

# PT-VW330 / PT-VX400

# PT-VX41

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/EA/KEA/U/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control	ON	
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
Standby mode	—		
Standby mode	Network		
Functions	Monitoring and control functions	Auto search (local network) function	X
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
	Wireless settings display function	X	
	Light ID control function	X	
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	X
Filter clog prediction		X	
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	X		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

# PT-VW435N / PT-VX505N

# PT-VX400NT

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/EA/U/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control	ON	
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
Standby mode	—		
Standby mode	Network		
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	○
		Distribution image deletion function	○
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
	Wireless settings display function	X	
	Light ID control function	X	
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	X
Filter clog prediction		X	
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	X		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

# PT-VW360 / PT-VX430 / PT-VX431K

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/J/T/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards		Not used
Connection to projector	IP address		Only fixed IP address supported
	WEB control screen login	User name	dispadmin*1
		Password	@Panasonic*2
	PJLink	Password	@Panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby		—
	Network control		ON
	WEB control		—
	Command control		—
	WEB port / Command port		—
	PJLink control		—
	ECO management		
Standby mode		—	
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	X
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	○
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
		Light ID control function	X
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	X
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		X	
Display of WEB control screen for devices function	○		
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		X	
Stopped camera image detecting function		○	

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-VW350 / PT-VX420

■ PT-VW340 / PT-VX410 / PT-VX42

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/EA/J/T/Z/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control	ON	
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
	Standby mode	—	
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	X
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	○
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
	Light ID control function	X	
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	X
Filter clog prediction		X	
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		X	
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-VX421

■ PT-VX406 / PT-VX46

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/EA/J/T/Z/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control	ON	
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
	Standby mode	—	
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	X
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	○
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
	Light ID control function	X	
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	X
Filter clog prediction		X	
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		X	
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.



## PT-FW430 / PT-FX400

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/EA/U/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards		Not used
Connection to projector	IP address		Only fixed IP address supported
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby		—
	Network control		ON
	WEB control		—
	Command control		—
	WEB port / Command port		—
	PJLink control		—
	ECO management		
Standby mode		—	
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	○
		Distribution image deletion function	○
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	○
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	Light ID control function	×	
	Remote Preview function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	×		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

## PT-FW300NT / PT-FW300 / PT-F300NT / PT-F300

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/EA/U/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards		Not used
Connection to projector	IP address		Only fixed IP address supported
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby		ON
	Network control		ON
	WEB control		—
	Command control		—
	WEB port / Command port		—
	PJLink control		—
	ECO management		
Standby mode		—	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	○
		Distribution image deletion function	○
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
	Wireless settings display function	X	
	Light ID control function	X	
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	X
Filter clog prediction		X	
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	X		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

# PT-FW100NT / PT-F100NT

# PT-F200NT

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/EA/U/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	user1
		Password	No password set* <sup>1</sup>
	PJLink	Password	No password set* <sup>1</sup>
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	ON	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
Standby mode	—		
Functions	Standby mode	—	
	Auto search (local network) function	×	
	Device status monitoring function (Simplified)	○	
	Device location information registering function (Map monitoring function)	○	
	Command transmission function	○	
	Simultaneous image distribution function	×	
	Distribution image deletion function	×	
	Interrupting delivery function	×	
	Brightness control function	×	
	ECO management function	×	
	Signage schedule acquisition and delivery functions	×	
	Maintenance log save function	×	
	Contents list delivery function	×	
	ECO Power Level Monitor Function	×	
	Wireless settings display function	×	
	Light ID control function	×	
	Remote Preview function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
Fan failure prediction function		×	
Filter clog prediction		×	
Maintenance prediction function		○	
Temperature information graph display function		×	
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		×	
Stopped camera image detecting function	○		

\*1: This is the setting provided at the time of shipment. Use the same password as for WEB control of the projector unit.

# PT-LZ370

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/EA/U/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control	ON	
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
Standby mode	—		
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	×
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	○
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	Light ID control function	×	
	Remote Preview function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
Filter clog prediction		×	
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	×		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

## PT-LRZ35 / PT-LRW35

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: U/(blank))

Model group: **Basic information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards		Not used
Connection to projector	IP address		Only fixed IP address supported
	WEB control screen login	User name	dispadmin* <sup>1</sup>
		Password	Set by user* <sup>1</sup>
	PJLink	Password	Set by user* <sup>1</sup>
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby		—
	Network control		
		WEB control	—
		Command control	—
		WEB port / Command port	—
		PJLink control	—
		ECO management	
	Standby mode	—	
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	X
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	X
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	X
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
	Wireless settings display function	X	
	Light ID control function	X	
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	X
Filter clog prediction		X	
Maintenance prediction function		X	
Temperature information graph display function		X	
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	X		
Stopped camera image detecting function	○		

\*1: The user name and password settings are required at the time of initial configuration.

■ PT-LB426 / PT-LB386 / PT-LB356 / PT-LW376 / PT-LW336

■ PT-TW381R / PT-TW380 / PT-TX440 / PT-TX350

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/J/T/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	Set by user*1
		Password	Set by user*1
	PJLink	Password	Set by user*1
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control	ON	
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
	Standby mode	—	
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	X
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	○
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
	Light ID control function	X	
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	X
Filter clog prediction		X	
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		X	
Stopped camera image detecting function	○		

\*1: The user name and password settings are required at the time of initial configuration.

■ PT-LW375 / PT-LW335 / PT-LB425 / PT-LB385 / PT-LB355

■ PT-TW371R / PT-TW370 / PT-TX430 / PT-TX340

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/J/K/T/U/(blank))

Model group: **Basic information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin
		Password	admin1* <sup>1</sup>
	PJLink	Password	admin1* <sup>1</sup>
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control		
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
	Standby mode	—	
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	X
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	X
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	X
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
	Light ID control function	X	
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	X
Filter clog prediction		X	
Maintenance prediction function		X	
Temperature information graph display function		X	
Voltage information graph display function		X	
Display of WEB control screen for devices function	○		
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	X		
Stopped camera image detecting function	○		

\*1: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-LW373 / PT-LW333 / PT-LB423 / PT-LB383 / PT-LB353

■ PT-TW351R / PT-TW350 / PT-TX410 / PT-TX320

■ PT-LW362 / PT-LW312 / PT-LB412 / PT-LB382 / PT-LB332

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/J/(blank))

Model group: **Basic information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin
		Password	admin1* <sup>1</sup>
	PJLink	Password	admin1* <sup>1</sup>
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control		
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	X
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	X
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	X
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
	Light ID control function	X	
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	X
		Filter clog prediction	X
		Maintenance prediction function	X
Temperature information graph display function		X	
Voltage information graph display function		X	
Display of WEB control screen for devices function	○		
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	X		
Stopped camera image detecting function	○		

\*1: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.



■ PT-LW330\*2 / PT-LW280\*2 / PT-LB360\*2 / PT-LB330\*2

■ PT-TW343R / PT-TW342 / PT-TX402 / PT-TX312

■ PT-TW341R\*2 / PT-TW340\*2 / PT-TW250\*2 / PT-TX400\*2 / PT-TX310\*2

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/J/(blank))

Model group: **Basic information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin
		Password	admin1*1
	PJLink	Password	admin1*1
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control		
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	X
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	X
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	X
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
		Light ID control function	X
		Remote Preview function	X
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	X
		Filter clog prediction	X
		Maintenance prediction function	X
		Temperature information graph display function	X
Voltage information graph display function		X	
Display of WEB control screen for devices function	○		
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	X		
Stopped camera image detecting function	○		

\*1: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

\*2: Only devices with serial numbers that start with "B" or "DB53" are supported.

■ PT-LW25H / PT-LX30H / PT-LX26H

■ PT-TW231R / PT-TW230

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/EA/U/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control	ON	
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
Standby mode	—		
	Standby mode	Network	
Functions	Monitoring and control functions	Auto search (local network) function	X
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
	Wireless settings display function	X	
	Light ID control function	X	
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	X
Filter clog prediction		X	
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	X		
	Stopped camera image detecting function	○	

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

# PT-LB90NT

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/EA/U/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards		Not used
Connection to projector	IP address		Only fixed IP address supported
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby		—
	Network control		ON
	WEB control		—
	Command control		—
	WEB port / Command port		—
	PJLink control		—
	ECO management		
Standby mode		—	
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	○
		Distribution image deletion function	○
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	×
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	Light ID control function	×	
	Remote Preview function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	×		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

# PT-LB3 / PT-LB2V / PT-LB2 / PT-LB1V / PT-LB1 / PT-ST10

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/EA/U/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control	ON	
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
Standby mode	—		
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	×
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	×
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	Light ID control function	×	
	Remote Preview function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	×		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

# NTN91003 / NTN91002

# PT-JX200F / PT-JX200G / PT-JX200H

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/E/K/T/U, cabinet color: B/W)

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	admin1*1
Password		panasonic*3	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal*4	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	○
		Distribution image deletion function	○
		Interrupting delivery function	○
		Brightness control function	X
		ECO management function	○
		Signage schedule acquisition and delivery functions	○
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
	Wireless settings display function	○	
	Light ID control function	X	
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
Filter clog prediction		X	
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

\*3: This is the password provided at the time of shipment. Use the same password as for Content Manager supplied with the projector.

\*4: When set to "Network" or "ECO", information acquisition and control will be disabled.

# ■ NTN91001 / NTN91000

# ■ PT-JW130F / PT-JW130G / PT-JW130H

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/E/K/T/U, cabinet color: B/W)

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	PJLink	Password	panasonic*2
	Content Manager login	User name	admin1*1
		Password	panasonic*3
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal*4	
Functions	Monitoring and control functions		
	Auto search (local network) function	○	
	Device status monitoring function (Simplified)	○	
	Device location information registering function (Map monitoring function)	○	
	Command transmission function	○	
	Simultaneous image distribution function	○	
	Distribution image deletion function	○	
	Interrupting delivery function	○	
	Brightness control function	X	
	ECO management function	○	
	Signage schedule acquisition and delivery functions	○	
	Maintenance log save function	X	
	Contents list delivery function	X	
	ECO Power Level Monitor Function	X	
	Wireless settings display function	○	
	Light ID control function	X	
	Remote Preview function	X	
	Early warning function (paid)		
	Status monitoring function (Details)	○	
	Error, warning, and notification guidance displays function	○	
Basic control functions (power, Shutter / AV muting)	○		
Fan failure prediction function	○		
Filter clog prediction	X		
Maintenance prediction function	○		
Temperature information graph display function	○		
Voltage information graph display function	X		
Display of WEB control screen for devices function	○		
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	X		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

\*3: This is the password provided at the time of shipment. Use the same password as for Content Manager supplied with the projector.

\*4: When set to "Network" or "ECO", information acquisition and control will be disabled.

## ET-YFB200

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: G/(blank))

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility
Connection to DIGITAL LINK Switcher	IP address	Only fixed IP address supported
	User name	admin1*1
	Password	panasonic*2
DIGITAL LINK Switcher settings	Network standby	—
	Network control	—
	WEB control	ON
	WEB port / Command port	1024
	PJLink control	ON
Functions	DIGITAL LINK Switcher I/O status display	○
	Fan status display	○
	WEB control screen display	×

\*1: This is the user name provided at the time of shipment. Connect using a user with administrator privileges.

\*2: This is the password provided at the time of shipment. The password is identical to that used for WEB control of the DIGITAL LINK switcher unit.