

## Operating Instructions

### Network Camera

---

Model No. **WV-SW158**  
**WV-SF138**



WV-SW158



WV-SF138

Before attempting to connect or operate this product, please read these instructions carefully and save this manual for future use.

The model number is abbreviated in some descriptions in this manual.



# Preface

## About the user manuals

There are 2 sets of operating instructions as follows.

- Operating Instructions: Explains how to perform the settings and how to operate this camera.
- Installation Guide: Explains how to install and connect devices.

The screens used in these operating instructions show the case of WV-SW158. Depending on the model used, the screens shown in the explanations may differ to the actual camera screens.

## About notations

The following notations are used when describing the functions limited for specified models.

The functions without the notations are supported by all models.

**SW158**: The functions with this notation are available when using the model WV-SW158.

**SF138**: The functions with this notation are available when using the model WV-SF138.

## Trademarks and registered trademarks

- Microsoft, Windows, Windows Vista, Windows Media, Internet Explorer, ActiveX and DirectX are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Microsoft product screen shot(s) reprinted with permission from Microsoft Corporation.
- iPad, iPhone, iPod touch, and QuickTime are trademarks of Apple Inc., registered in the U.S. and other countries.
- Android is a trademark of Google Inc.
- Firefox is a registered trademark of the Mozilla Foundation.
- SDXC Logo is a trademark of SD-3C, LLC.
- All other trademarks identified herein are the property of their respective owners.

## Abbreviations

The following abbreviations are used in these operating instructions.

Microsoft® Windows® 8 is described as Windows 8.

Microsoft® Windows® 7 is described as Windows 7.

Microsoft® Windows Vista® is described as Windows Vista.

Microsoft® Windows® XP SP3 is described as Windows XP.

Windows® Internet Explorer® 10.0, Windows® Internet Explorer® 9.0, Windows® Internet Explorer® 8.0, and


Windows® Internet Explorer® 7.0 are described as Internet Explorer.

SDXC/SDHC/SD memory card is described as SD card or SD memory card.

Universal Plug and Play is described as UPnP™.

## Viewer software

It is necessary to install the viewer software “Network Camera View 4S” (ActiveX®) to display images on a PC. This software can be installed directly from the camera or by selecting the [Install] button next to [Viewer Software] on the menu of the CD-ROM provided, and then following the on-screen instructions.

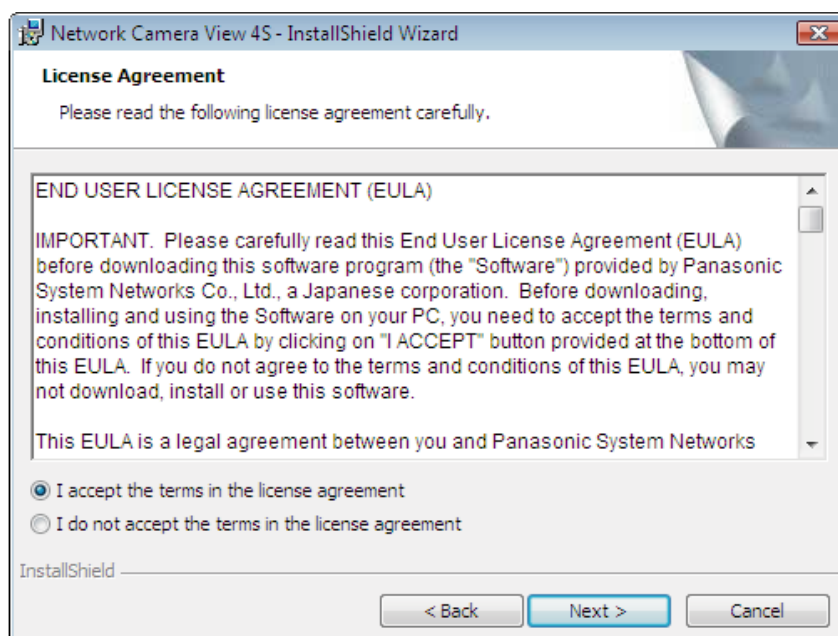

### **IMPORTANT**

- The default setting of “Automatic installation of viewer software” is “On”. Follow the instructions on page 197 when the message is displayed on the information bar of the browser.
- When the “Live” page is displayed for the first time, the install wizard of the ActiveX control required to display images from the camera will be displayed. Follow the instructions of the wizard.
- When the install wizard is displayed again even after completing the installation of the ActiveX, restart the PC.
- The viewer software used on each PC should be licensed individually. The number of installations of the viewer software from the camera can be checked on the [Upgrade] tab of the “Maintenance” page (→page 172). Refer to your dealer for the software licensing.

# Table of Contents

|           |                                                                                                                         |           |
|-----------|-------------------------------------------------------------------------------------------------------------------------|-----------|
| <b>1</b>  | <b>Monitor images on a PC .....</b>                                                                                     | <b>7</b>  |
| 1.1       | Monitor images from a single camera .....                                                                               | 7         |
| 1.2       | About the “Live” page .....                                                                                             | 9         |
| 1.3       | Monitor cropping images .....                                                                                           | 12        |
| 1.4       | Monitor picture in picture images .....                                                                                 | 13        |
| 1.5       | Monitor images from multiple cameras .....                                                                              | 15        |
| <b>2</b>  | <b>Monitor images on a cellular phone/mobile terminal .....</b>                                                         | <b>16</b> |
| 2.1       | Monitor images on a cellular phone .....                                                                                | 16        |
| 2.2       | Monitor images on a mobile terminal .....                                                                               | 18        |
| <b>3</b>  | <b>Record images on the SD memory card manually .....</b>                                                               | <b>21</b> |
| <b>4</b>  | <b>Action at an alarm occurrence .....</b>                                                                              | <b>23</b> |
| 4.1       | Alarm type .....                                                                                                        | 23        |
| 4.2       | Action at an alarm occurrence .....                                                                                     | 23        |
| <b>5</b>  | <b>Transmit images onto an FTP server .....</b>                                                                         | <b>25</b> |
| 5.1       | Transmit an alarm image at an alarm occurrence (Alarm image transmission) .....                                         | 25        |
| 5.2       | Transmit images at a designated interval or period (FTP periodic image transmission) .....                              | 25        |
| 5.3       | Save images on the SD memory card when images fail to transmit using the FTP periodic image transmission function ..... | 26        |
| <b>6</b>  | <b>Display the log list .....</b>                                                                                       | <b>27</b> |
| 6.1       | When “JPEG” is selected for “Recording format” of the SD memory card .....                                              | 27        |
| 6.2       | When “H.264(1)” or “H.264(2)” is selected for “Recording format” of the SD memory card .....                            | 30        |
| <b>7</b>  | <b>Playback of images on the SD memory card .....</b>                                                                   | <b>34</b> |
| 7.1       | When “JPEG” is selected for “Recording format” of the SD memory card .....                                              | 34        |
| 7.2       | When “H.264(1)” or “H.264(2)” is selected for “Recording format” of the SD memory card .....                            | 37        |
| <b>8</b>  | <b>About the network security .....</b>                                                                                 | <b>39</b> |
| 8.1       | Equipped security functions .....                                                                                       | 39        |
| <b>9</b>  | <b>Display the setup menu from a PC .....</b>                                                                           | <b>40</b> |
| 9.1       | How to display the setup menu .....                                                                                     | 40        |
| 9.2       | How to operate the setup menu .....                                                                                     | 42        |
| 9.3       | About the setup menu window .....                                                                                       | 44        |
| <b>10</b> | <b>Configure the basic settings of the camera [Basic] .....</b>                                                         | <b>46</b> |
| 10.1      | Configure the basic settings [Basic] .....                                                                              | 46        |
| 10.2      | Configure the Internet settings [Internet] .....                                                                        | 49        |
| 10.3      | Configure the settings relating to the SD memory card [SD memory card] .....                                            | 51        |
| 10.4      | Access copy images saved on the SD memory card onto the PC [SD memory card images] .....                                | 60        |
| 10.5      | Configure the settings relating to the logs [Log] .....                                                                 | 69        |
| 10.5.1    | How the logs and images are saved depending on the settings for “Alarm” .....                                           | 71        |

|           |                                                                                                                                         |            |
|-----------|-----------------------------------------------------------------------------------------------------------------------------------------|------------|
| 10.5.2    | How the logs and images are saved depending on the settings for “Manual/Schedule” .....                                                 | 72         |
| 10.5.3    | How the logs and images are saved depending on the settings for “FTP error” .....                                                       | 74         |
| <b>11</b> | <b>Configure the settings relating to images and audio [Image/Audio] .....</b>                                                          | <b>75</b>  |
| 11.1      | Configure the settings relating to the image capture mode [JPEG/H.264] .....                                                            | 75         |
| 11.2      | Configure the settings relating to JPEG images [JPEG/H.264] .....                                                                       | 76         |
| 11.3      | Configure the settings relating to H.264 images [JPEG/H.264] .....                                                                      | 78         |
| 11.4      | Configure the settings relating to image adjust, extra zoom, privacy zone, VIQS, and lens distortion compensation [Image quality] ..... | 85         |
| 11.4.1    | Configure the settings relating to image quality (“Image adjust” setup menu) .....                                                      | 86         |
| 11.4.2    | Set mask areas .....                                                                                                                    | 92         |
| 11.5      | Adjust the angular field of view using the extra zoom function .....                                                                    | 96         |
| 11.6      | Configure the settings relating to the privacy zone (“Privacy zone” setup menu) .....                                                   | 97         |
| 11.7      | Configure the VIQS setting .....                                                                                                        | 99         |
| 11.8      | Configure the settings relating to lens distortion compensation .....                                                                   | 101        |
| 11.9      | Configure the settings relating to audio [Audio] .....                                                                                  | 102        |
| <b>12</b> | <b>Configure the multi-screen settings [Multi-screen] .....</b>                                                                         | <b>104</b> |
| <b>13</b> | <b>Configure the alarm settings [Alarm] .....</b>                                                                                       | <b>106</b> |
| 13.1      | Configure the settings relating to the alarm action [Alarm] .....                                                                       | 106        |
| 13.2      | Configure the settings relating to the alarm image [Alarm] .....                                                                        | 107        |
| 13.3      | Configure the settings relating to H.264 recording [Alarm] .....                                                                        | 109        |
| 13.4      | Configure the VMD settings [VMD area] .....                                                                                             | 110        |
| 13.4.1    | Set the VMD areas [VMD area] .....                                                                                                      | 111        |
| 13.5      | Configure the settings relating to the audio detection [Audio detection] .....                                                          | 113        |
| 13.6      | Configuration of the settings relating to the E-mail notification [Notification] .....                                                  | 115        |
| 13.7      | Configure the settings relating to Panasonic alarm protocol [Notification] .....                                                        | 117        |
| <b>14</b> | <b>Configure the settings related to advanced view [Advanced view] .....</b>                                                            | <b>120</b> |
| 14.1      | Configure the settings relating to cropping [Cropping] .....                                                                            | 120        |
| 14.2      | Configure the picture in picture settings [PiP] .....                                                                                   | 121        |
| <b>15</b> | <b>Configure the settings relating to the authentication [User mng.] .....</b>                                                          | <b>126</b> |
| 15.1      | Configure the settings relating to the user authentication [User auth.] .....                                                           | 126        |
| 15.2      | Configure the settings relating to the host authentication [Host auth.] .....                                                           | 127        |
| 15.3      | Configure the settings relating to the priority stream [System] .....                                                                   | 128        |
| <b>16</b> | <b>Configure the settings of the servers [Server] .....</b>                                                                             | <b>131</b> |
| 16.1      | Configure the settings relating to the E-mail server [E-mail] .....                                                                     | 131        |
| 16.2      | Configure the settings relating to the FTP server [FTP] .....                                                                           | 132        |
| 16.3      | Configure the settings relating to the NTP server [NTP] .....                                                                           | 133        |
| <b>17</b> | <b>Configuring the network settings [Network] .....</b>                                                                                 | <b>136</b> |
| 17.1      | Configure the network settings [Network] .....                                                                                          | 136        |
| 17.2      | Configure the HTTPS settings .....                                                                                                      | 144        |
| 17.2.1    | Generation of the CRT key (SSL encryption key) .....                                                                                    | 145        |
| 17.2.2    | Generation of the self-signed certificate (security certificate) .....                                                                  | 146        |
| 17.2.3    | Generation of CSR (Certificate Signing Request) .....                                                                                   | 148        |

|             |                                                                                                       |            |
|-------------|-------------------------------------------------------------------------------------------------------|------------|
| 17.2.4      | Installation of the server certificate .....                                                          | 149        |
| 17.2.5      | Configuration of the connection protocol .....                                                        | 150        |
| <b>17.3</b> | <b>Access the camera using the HTTPS protocol .....</b>                                               | <b>151</b> |
| 17.3.1      | Install the security certificate .....                                                                | 151        |
| <b>17.4</b> | <b>Configure the settings relating to DDNS [DDNS] .....</b>                                           | <b>158</b> |
| 17.4.1      | Configuration of the DDNS service (Example of the "Viewnetcam.com" service) .....                     | 159        |
| 17.4.2      | When using the "Viewnetcam.com" service .....                                                         | 160        |
| 17.4.3      | Procedure to register information for the "Viewnetcam.com" service .....                              | 161        |
| 17.4.4      | Checking the information registered for the "Viewnetcam.com" service .....                            | 162        |
| 17.4.5      | When using "Dynamic DNS Update" .....                                                                 | 162        |
| 17.4.6      | When using "Dynamic DNS Update(DHCP)" .....                                                           | 163        |
| <b>17.5</b> | <b>Configure the settings relating to SNMP [SNMP] .....</b>                                           | <b>163</b> |
| <b>17.6</b> | <b>Configure the settings relating to the FTP periodic image transmission [FTP img. trans.] .....</b> | <b>164</b> |
| <b>17.7</b> | <b>Configure the schedule settings of the FTP periodic image transmission [FTP img. trans.] .....</b> | <b>166</b> |
| 17.7.1      | How to set the schedules .....                                                                        | 167        |
| 17.7.2      | How to delete the set schedule .....                                                                  | 168        |
| <b>18</b>   | <b>Configure the settings relating to the schedules [Schedule] .....</b>                              | <b>169</b> |
| <b>19</b>   | <b>Maintenance of the camera [Maintenance] .....</b>                                                  | <b>172</b> |
| 19.1        | Check the system log [System log] .....                                                               | 172        |
| 19.2        | Upgrade the firmware [Upgrade] .....                                                                  | 172        |
| 19.3        | Check the status [Status] .....                                                                       | 174        |
| 19.4        | Reset the settings/Reboot the camera [Default reset] .....                                            | 175        |
| <b>20</b>   | <b>Number of users that can concurrently access the unit .....</b>                                    | <b>177</b> |
| <b>21</b>   | <b>Using the CD-ROM .....</b>                                                                         | <b>178</b> |
| 21.1        | About the CD launcher .....                                                                           | 178        |
| 21.2        | Installing Panasonic "IP Setting Software" .....                                                      | 179        |
| 21.3        | Installing the manuals .....                                                                          | 180        |
| 21.4        | Installing the Viewer software .....                                                                  | 180        |
| 21.5        | Configure the network settings of the camera using the Panasonic "IP Setting Software" .....          | 181        |
| <b>22</b>   | <b>About the displayed system log .....</b>                                                           | <b>184</b> |
| <b>23</b>   | <b>Troubleshooting .....</b>                                                                          | <b>188</b> |
| <b>24</b>   | <b>Directory structure of drive B .....</b>                                                           | <b>199</b> |


# 1 Monitor images on a PC

The following are descriptions of how to monitor images from the camera on a PC.

## 1.1 Monitor images from a single camera

1. Start up the web browser.
2. Enter the IP address designated using the Panasonic "IP Setting Software" in the address box of the browser.
  - **Example when entering an IPv4 address:** http://URL registered using IPv4 address  
http://192.168.0.10/
  - **Example when entering an IPv6 address:** http://[URL registered using IPv6 address]  
http://[2001:db8::10]/

### <Example of IPv4 access>



### <Example of IPv6 access>



### IMPORTANT

- When the HTTP port number is changed from "80", enter "http://IP address of the camera + : (colon) + port number" in the address box of the browser. (Example: http://192.168.0.11:8080)
- When the PC is in a local network, configure the proxy server setting of the web browser (under [Internet Options...] under [Tools] of the menu bar) to bypass the proxy server for the local address.

### Note

- Refer to page 151 for further information about the case in which "HTTPS" is selected for "HTTPS" - "Connection" on the [Network] tab of the "Network" page (→page 136).

## 1 Monitor images on a PC

### 3. Press the [Enter] key on the keyboard.

→ The “Live” page will be displayed. Refer to page 9 for further information about the “Live” page.



When “On” is selected for “User auth.”, the authentication window will be displayed before displaying live images for the user name and password entries. The default user name and password are as follows.

User name: admin

Password: 12345

### IMPORTANT

- To enhance the security, change the password for the user name “admin”. It is recommended to change this password periodically.
- When displaying multiple H.264 images on a PC, images may not be displayed depending on the performance of the PC.

### Note

- The maximum number of concurrent access user is 14 including users who is receiving H.264 images and users who are receiving JPEG images. Depending on the set values for “Bandwidth control(bit rate)” and “Max bit rate (per client)”, the maximum concurrent access number may be 14 or less users. When 14 users are concurrently accessing, the access limit message will be displayed for users who subsequently attempt to access. When “Multicast” is selected for “Transmission type” of “H.264”, only the first user who accessed to monitor H.264 images will be included in the maximum number. The second and subsequent users who are monitoring H.264 images will not be included in the maximum number.
- When “On” is selected for “H.264 transmission” (→page 80), H.264 images will be displayed. When “Off” is selected, a JPEG image will be displayed. It is possible to display a JPEG image even when “On” is selected for “H.264 transmission”. In this case, the refresh interval of JPEG images will be limited to 5 fps.
- The refresh interval may become longer depending on a network environment, PC performance, photographic subject, access traffic, etc.

#### <Refresh interval of JPEG images>


##### When “On” is selected for “H.264 transmission”

- When “2 mega pixel [16:9]” / “1.3 mega pixel [16:9]” / “1.3 mega pixel [4:3]” is selected for “Image capture mode”: max. 5fps
- When “3 mega pixel [4:3]” is selected for “Image capture mode”: max. 5fps

##### When “Off” is selected for “H.264 transmission”

- When “2 mega pixel [16:9]” / “1.3 mega pixel [16:9]” / “1.3 mega pixel [4:3]” is selected for “Image capture mode”: max. 30fps
- When “3 mega pixel [4:3]” is selected for “Image capture mode”: max. 15fps

## 1.2 About the “Live” page

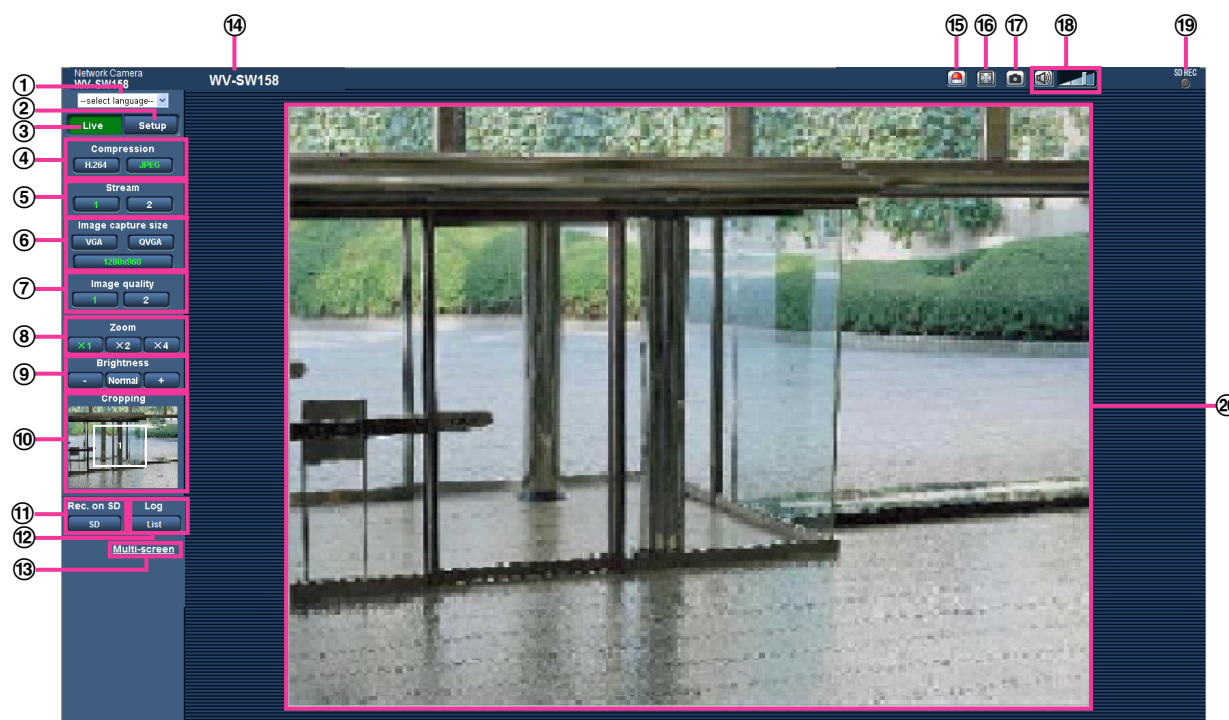

### ① [select language] pull-down-menu

The camera's display language can be selected. The default language can be set in the [Language] in the [Basic] settings. (→page 46)

### ② [Setup] button<sup>1</sup>

Displays the setup menu. The button will turn green and the setup menu will be displayed.

### ③ [Live] button

Displays the “Live” page. The button will turn green and the “Live” page will be displayed.

### ④ [Compression] buttons

- **[H.264] button:** The characters “H.264” on the button will turn green and an H.264 image will be displayed. When “On” is selected for “H.264 transmission” of “H.264(1)”, “H.264(2)”, the [H.264] button will be displayed. (→page 80)
- **[JPEG] button:** The characters “JPEG” on the button will turn green and a JPEG image will be displayed.

### ⑤ [Stream] buttons

These buttons will be displayed only when an H.264 image is displayed.

- **[1] button:** The character “1” will turn green and images in the main area will be displayed in accordance with the setting of “H.264(1)”. (→page 80)
- **[2] button:** The character “2” will turn green and images in the main area will be displayed in accordance with the setting of “H.264(2)”. (→page 80)

### ⑥ [Image capture size] buttons

These buttons will be displayed only when a JPEG image is displayed.

- **[VGA] button:** The characters “VGA” will turn green and images in the main area will be displayed in VGA size.
- **[QVGA] button:** The characters “QVGA” will turn green and images in the main area will be displayed in QVGA size.
- **[1280x960] button:** The characters “1280x960” will turn green and images in the main area will be displayed in 1280 x 960 (pixels).

- **[640x360] button:** The characters “640x360” will turn green and images in the main area will be displayed in 640 x 360 (pixels).
- **[320x180] button:** The characters “320x180” will turn green and images in the main area will be displayed in 320 x 180 (pixels).
- **[1280x720] button:** The characters “1280x720” will turn green and images in the main area will be displayed in 1280 x 720 (pixels).
- **[1920x1080] button:** The characters “1920x1080” will turn green and images in the main area will be displayed in 1920 x 1080 (pixels).
- **[2048x1536] button:** The characters “2048x1536” will turn green and images in the main area will be displayed in 2048 x 1536 (pixels).

### Note

- The buttons [VGA], [QVGA], and [1280x960] are displayed only when “1.3 mega pixel [4:3]” is selected for “Image capture mode”.
- The button [2048x1536] is displayed only when “3 mega pixel [4:3]” is selected for “Image capture mode”.
- The buttons [640x360] and [320x180] are displayed only when “2 mega pixel [16:9]” or “1.3 mega pixel [16:9]” is selected for “Image capture mode”.
- The button [1280x720] is displayed only when “1.3 mega pixel [16:9]” is selected for “Image capture mode”.
- The button [1920x1080] is displayed only when “2 mega pixel [16:9]” is selected for “Image capture mode”.
- When “2048x1536”, “1920x1080”, “1280x960”, or “1280x720” is selected for the image capture size, it may become smaller than the actual size depending on the window size of the web browser.

### ⑦ [Image quality] buttons

These buttons will be displayed only when a JPEG image is displayed.

- **[1] button:** Images in the main area will be displayed in accordance with the setting for “Quality1” of “Image quality setting”. (→page 76)
- **[2] button:** Images in the main area will be displayed in accordance with the setting for “Quality2” of “Image quality setting”. (→page 76)

### ⑧ [Zoom] buttons

Images will be zoomed in on with the electronic zoom by the viewer software “Network Camera View 4S”.

- **[x1] button:** The character “x1” will turn green and images in the main area will be displayed at x1.
- **[x2] button:** The character “x2” will turn green and images in the main area will be displayed at x2.
- **[x4] button:** The character “x4” will turn green and images in the main area will be displayed at x4.

### ⑨ [Brightness] buttons<sup>2</sup>

The brightness is adjustable from 0 to 255.

-  **(darker) button:** Images become darker.
-  **button:** The adjusted brightness will return to the default brightness (64).
-  **(brighter) button:** Images become brighter.

### ⑩ [Cropping] display

Cropping setup display is only displayed when the images set in “Cropping” on the [Cropping] tab of the “Advanced view” page are displayed in the main area. (→page 120)

Within the full angle image, the white outlines display what position the image was cropped from. During sequence operations, the cropping positions used by the sequence function are displayed in multiple white outlines (the display shown in the cropping display is not updated by changes to the position of the sequence or images).

### ⑪ [Rec. on SD] button<sup>2</sup>

This button will be displayed only when “Manual” is selected for “Save trigger” on the setup menu. (→page 54)

Click this button to manually record images on the SD memory card. Refer to page 21 for descriptions of how to manually record images on the SD memory card.

⑫ **[Log] button<sup>1</sup>**

[List] button will become available only when "On" is selected for "Save logs" on the setup menu.

(→page 69)

When this button is clicked, the log list will be displayed and images saved on the SD memory card can be played. Refer to page 27 for further information about the log list and for how to play images on the SD memory card.

⑬ **[Multi-screen]**

Images from multiple cameras can be displayed on a multi-screen by registering cameras on the setup menu. (→page 15)

⑭ **Camera title**

The camera title entered for "Camera title" on the [Basic] tab will be displayed. (→page 46)

⑮ **Alarm occurrence indication button<sup>2</sup>**

This button will be displayed and will blink when an alarm has occurred. When this button is clicked, it will disappear. (→page 23)

⑯ **Full screen button**

Images will be displayed on a full screen. To return to the "Live" page, press the [Esc] key. The aspect ratio of displayed images will be adjusted in accordance with the monitor.

⑰ **Snap shot button**

Click this button to take a picture (a still picture). The picture will be displayed on a newly opened window. When right-clicking on the displayed image, the pop-up menu will be displayed. It is possible to save the image on the PC by selecting "Save" from the displayed pop-up menu.

When "Print" is selected, printer output is enabled.

**Note**

- For the case of using Windows 8, Windows 7, or Windows Vista, the following settings may be required.  
Open Internet Explorer, click [Tools] → [Internet Options] → [Security] → [Trusted Sites] → [Sites]. Register the camera address on [Website] of the displayed trusted widows.
- When it takes longer than the specified period to obtain the snap shot picture due to the network environment, the snap shot picture may not be displayed.

⑱ **Mic input button<sup>3</sup>**

Turns on/off the audio reception (hear audio from the camera on a PC). This button will be displayed only when "Mic input" is selected for "Audio mode" on the setup menu. (→page 102)

When this button is clicked, the button will turn into the  button and audio from the camera will not be heard on the PC.

Audio volume can be adjusted (Low/ Middle/ High) by moving the volume cursor .

**Note**

- The volume cursor is not displayed when "Audio recording" or "Audio detection" is used.

⑲ **SD recording status indicator**

The status of the SD recording can be checked with this indicator.

When the SD recording starts, the SD recording status indicator will light red. It will go off when the SD recording stops.

This indicator will be displayed when "Manual" or "Schedule" is selected for "Save trigger" on the setup menu. (→page 51)

⑳ **Main area**

Images from the camera will be displayed in this area.

The current time and date will be displayed according to the settings configured for "Time display format" and "Date/time display format". (→page 47)

### Note

- When operated by a lower access level user, images displayed on the screen may be changed temporarily. This does not affect operation of the camera.
- Depending on the PC in use, screen tearing\* may occur when the shooting scene drastically changes due to the GDI restrictions of the OS.

\*A phenomenon in which portions of the screen are displayed out of alignment.

<sup>\*1</sup> Only operable by users whose access level is "1. Administrator".

<sup>\*2</sup> Only operable by users whose access level is "1. Administrator" or "2. Camera control" when "On" is selected for "User auth."  
(→page 126)

<sup>\*3</sup> Operable by users who belong to the access level selected for "Permission level of audio trans./recep." on the [Audio] tab of the "Image/Audio" page. Refer to page 102 for the permission level of audio.

## 1.3 Monitor cropping images

Full angle images and cropping images can be transmitted at the same time.

The cropping function must be configured in order to transmit cropping images. (→page 120)

H.264(2) or JPEG (VGA/QVGA/640x360/320x180) images can be set as cropping images.

By matching the settings of the [Compression] and [Stream] buttons on the "Live" page to the "Cropping" settings ("H.264", "JPEG(VGA)/JPEG(640x360)", or "JPEG(QVGA)/JPEG(320x180)") configured on the [JPEG/H.264] tab, cropping images will be displayed on the [Cropping] display of the "Live" page and the main area.

### Cropping





①

- ① You can crop areas that you want to monitor.

By setting multiple cropping areas, up to 4 areas can be displayed in a sequence.

### Sequence display using the cropping function

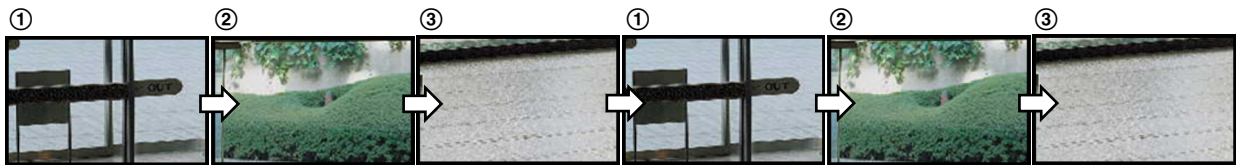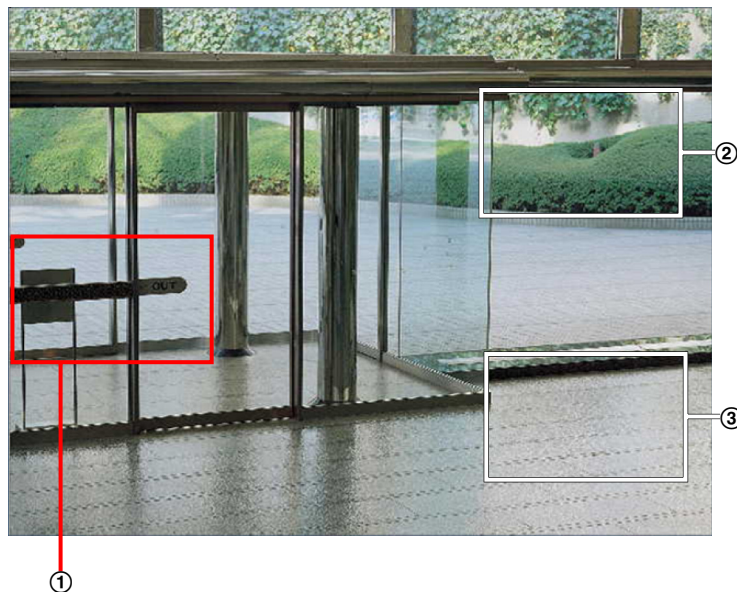

#### Note

- The cropping function can be used only when “2 mega pixel [16:9]”, “1.3 mega pixel [16:9]”, or “1.3 mega pixel [4:3]” is selected for “Image capture mode”.

## 1.4 Monitor picture in picture images

By using the picture in picture function, a cropping image or an alarm image can be added to an image and transmitted.

The picture in picture function must be configured before it can be used. (→page 121)

When the picture in picture function is used, combined JPEG and H.264 images with the following image capture sizes are transmitted.

- When “2 mega pixel [16:9]” is selected for “Image capture mode”: 1920x1080
- When “1.3 mega pixel [16:9]” is selected for “Image capture mode”: 1280x720
- When “1.3 mega pixel [4:3]” is selected for “Image capture mode”: 1280x960

#### Note

- The picture in picture function can only be used when “2 mega pixel [16:9]”, “1.3 mega pixel [16:9]”, or “1.3 mega pixel [4:3]” is selected for “Image capture mode”.

The type of images to be combined can be selected from “Picture in picture mode” on the [PiP] tab (→page 121).

When “Live” is selected in “Picture in picture mode”, a predetermined area is combined as a sub image and transmitted.

## 1 Monitor images on a PC

---

When an alarm action is selected in “Picture in picture mode”, a predetermined area is transmitted as a sub image according to each setting.



- ① Main image
- ② Sub image

## 1.5 Monitor images from multiple cameras

Images from multiple cameras can be displayed on a multi-screen. Images from 4 cameras (up to 16 cameras) can be displayed simultaneously. To display images on a multi-screen, it is necessary to register cameras in advance. 4 cameras can be registered as a group and up to 4 groups (16 cameras) can be registered. (→page 104)

### IMPORTANT


- When displaying images on a 16-screen, panning, tilting and zooming operations become unavailable for images from cameras with Pan/Tilt/Zoom functions.
- When the power is turned off or the LAN cable is disconnected while displaying images, displaying images on a multi-screen from the “Live” page will become unavailable.

### Note

- When displaying images on a 4-screen, panning, tilting and zooming operations become available only for images from cameras with Pan/Tilt/Zoom functions. Refer to our website (<http://security.panasonic.com/pss/security/support/info.html>) for further information about the compatible cameras and their versions.
- Only JPEG images can be displayed on a multi-screen. Audio will not be heard.
- When displaying the image on a multi-screen and “16:9” is selected for the aspect ratio, the image will be displayed altered vertically to the aspect ratio of “4:3”.
- “Network Camera Recorder with Viewer Software Lite” which supports live monitoring and recording images from multiple cameras is available. For further information, refer to our website (<http://security.panasonic.com/pss/security/support/info.html>).

#### 1. Click the desired [Multi-screen] on the “Live” page.

→ Images from the registered cameras will be displayed on a selected multi-screen (screen can be split up to 16 areas). The following are instructions when displaying on a 4-split screen.

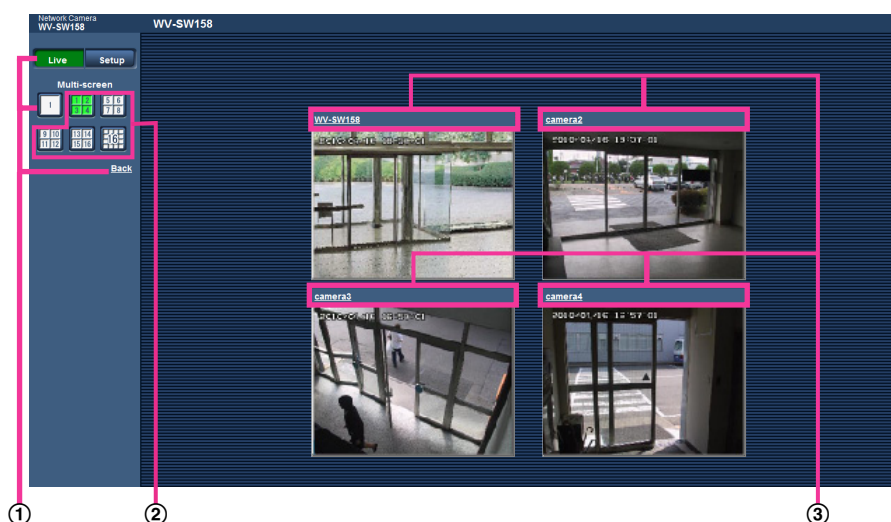

- ① To show 1 camera screen, click the [Live] button.  
You can also click “1” below “Multi-screen” or “Back” to display 1 screen of the camera.
- ② Click the [Multi-screen] button to display images from cameras in a multi-screen of 4 to 16 screens.
- ③ Click a camera title. Live images from the camera corresponding to the clicked camera title will be displayed on the “Live” page of the newly opened window.

## 2 Monitor images on a cellular phone/mobile terminal

### 2.1 Monitor images on a cellular phone


It is possible to connect to the camera using a cellular phone via the Internet and monitor images (JPEG only) from the camera on the screen of the cellular phone.

#### **IMPORTANT**

- When the authentication window is displayed, enter the user name and password. The default user name and password are as follows.  
User name: admin  
Password: 12345  
To enhance the security, change the password for the user “admin”. (→page 126)
- If the cellular phone in use is not compatible with UTF-8 encode, it is impossible to display the screen correctly.
- When “3 mega pixel [4:3]” is selected for “Image capture mode”, images cannot be monitored on a cellular phone. Select “2 mega pixel [16:9]”, “1.3 mega pixel [16:9]”, or “1.3 mega pixel [4:3]” for “Image capture mode” to monitor images.

#### **Note**

- It is necessary to configure the network settings of the cellular phone in advance to connect to the Internet and monitor images from the camera. (→page 136)
1. Access to “http://IP address/mobile”<sup>1</sup> or “http://Host name registered in the DDNS server/mobile” using a cellular phone.  
→ Images from the camera will be displayed.

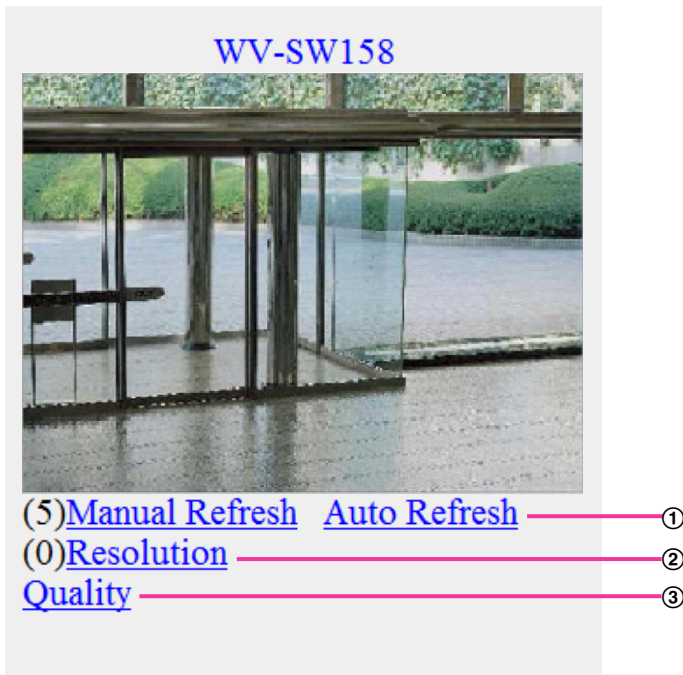

| Functions                             | Outline of functions                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |                                      |                                                                       |                                       |                                                                       |
|---------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------|-----------------------------------------------------------------------|---------------------------------------|-----------------------------------------------------------------------|
| ① Refresh control                     | <p>Press the dial key “5” or the [Manual Refresh] button to refresh the camera images.</p> <p>Press the [Auto Refresh] button to refresh the images from the camera in 5-second intervals.</p> <p>When the dial key “5” or the [Manual Refresh] button is pressed again, the refresh mode of the camera will return to manual refresh.</p> <p><b>IMPORTANT</b></p> <ul style="list-style-type: none"> <li>Transmission will be periodically performed when “Auto Refresh” is selected for the camera image. Confirm the contract plan of the cellular phone in use before using this function.</li> <li>Depending on the cellular phone in use, “Auto Refresh” may be unavailable.</li> </ul> |                                      |                                                                       |                                       |                                                                       |
| ② Resolution control                  | <p>Changes the image capture size by pressing the dial key “0”.</p> <table border="0"> <tr> <td>• Image in the aspect ratio of “4:3”</td><td>Changes the image capture size between 320x240 (default) and 640x480.</td></tr> <tr> <td>• Image in the aspect ratio of “16:9”</td><td>Changes the image capture size between 320x180 (default) and 640x360.</td></tr> </table>                                                                                                                                                                                                                                                                                                                  | • Image in the aspect ratio of “4:3” | Changes the image capture size between 320x240 (default) and 640x480. | • Image in the aspect ratio of “16:9” | Changes the image capture size between 320x180 (default) and 640x360. |
| • Image in the aspect ratio of “4:3”  | Changes the image capture size between 320x240 (default) and 640x480.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |                                      |                                                                       |                                       |                                                                       |
| • Image in the aspect ratio of “16:9” | Changes the image capture size between 320x180 (default) and 640x360.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |                                      |                                                                       |                                       |                                                                       |
| ③ Image quality control               | It is possible to change the image quality between “Quality1” and “Quality2”. (→page 76)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |                                      |                                                                       |                                       |                                                                       |

**Note**

- Some cellular phones cannot change the image capture size even when resolution is changed by resolution control.
- When the HTTP port number is changed from “80”, enter “http://IP address: (colon) + port number/mobile”<sup>\*1</sup> in the address box of the browser. When using the DDNS function, access to “http://Host name registered in the DDNS server: (colon) + port number/mobile”.
- When “HTTPS” is selected for “HTTPS” - “Connection” on the [Network] tab of the “Network” page, enter as follows.  
“https://IP address: (colon) + port number/mobile” or “https://Host name registered in the DDNS server: (colon) + port number/mobile”
- When the authentication window is displayed, enter the user name of an administrator or user and password. Depending on the cellular phone in use, password entry may be required each time the screen is switched.
- It is impossible to transmit/receive audio using a cellular phone.
- Depending on the cellular phone in use, larger size images may not be displayed. In this case, selecting “9 Low” for “Image quality setting” of “JPEG” (→page 76) may sometimes solve this problem.
- Depending on the cellular phone in use or its contract plan, it may be impossible to access.

<sup>\*1</sup> IP address is the global WAN IP address of the router that can be accessed via the Internet.

# 2.2 Monitor images on a mobile terminal

It is possible to connect to the camera using a mobile terminal via the Internet and monitor images (MJPEG only) from the camera on the screen of the mobile terminal. Images are refreshed automatically to display the latest image.

The compatible mobile terminals are shown as follows. (As of February, 2013)

- iPad, iPhone, iPod touch (iOS 4.2.1 or later)
- Android™ mobile terminals

When an Android terminal is used, an MJPEG format image is displayed by the Firefox® browser, but a JPEG format image is displayed by the standard browser.

For further information about compatible devices, refer to our website (<http://security.panasonic.com/pss/security/support/info.html>).


### **IMPORTANT**

- When the authentication window is displayed, enter the user name and password. The default user name and password are as follows.  
User name: admin  
Password: 12345  
To enhance the security, change the password for the user “admin”. (→page 126)
- When “3 mega pixel [4:3]” is selected for “Image capture mode”, images cannot be monitored on a mobile terminal. Select “2 mega pixel [16:9]”, “1.3 mega pixel [16:9]”, or “1.3 mega pixel [4:3]” for “Image capture mode” to monitor images.
- When “2 mega pixel [16:9]” is selected for “Image capture mode”, the maximum image capture size is 640x360.

### **Note**

- It is necessary to configure the network settings of the mobile terminal in advance to connect to the Internet and monitor images from the camera. (→page 136)

1. Access to "http://IP address/cam"<sup>1</sup> or "http://Host name registered in the DDNS server/cam"<sup>2</sup> using a mobile terminal.  
→ Images from the camera will be displayed.

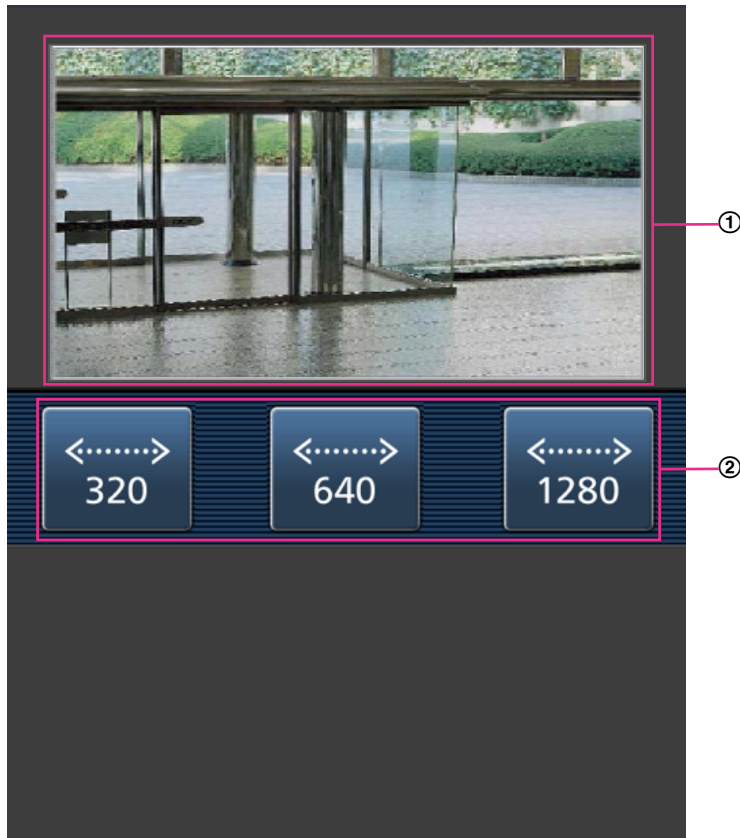

- ① Live images area  
Displays images from the camera.
- ② Resolution ratio control area  
Displays the available resolution ratio buttons.  
Switch the resolution ratio by selecting the appropriate resolution ratio button.  
Image capture mode
  - "2 mega pixel [16:9]" images: 320x180/640x360 (default)
  - "1.3 mega pixel [16:9]" images: 320x180/640x360 (default)/1280x720
  - "1.3 mega pixel [4:3]" images: 320x240/640x480 (default)/1280x960

### Note

- You can change the image size displayed on the mobile terminal by accessing the following addresses.
  - Large display: <http://IP address/cam/dl>
  - Medium display: <http://IP address/cam/dm>
  - Small display: <http://IP address/cam/ds>
- When the resolution is changed by the resolution control, the displayed resolution changes but the image size remains the same.
- When the HTTP port number is changed from "80", enter "http://IP address: (colon) + port number/cam"<sup>1</sup> in the address box of the browser. When using the DDNS function, access to "http://Host name registered in the DDNS server: (colon) + port number/cam"<sup>2</sup>.
- When "HTTPS" is selected for "HTTPS" - "Connection" on the [Network] tab of the "Network" page, enter as follows.

## 2 Monitor images on a cellular phone/mobile terminal

---

“https://IP address: (colon) + port number/cam” or “https://Host name registered in the DDNS server: (colon) + port number/cam”

- When the authentication window is displayed, enter the user name of an administrator or user and password. Depending on the mobile terminal in use, password entry may be required each time the screen is switched.
- It is impossible to transmit/receive audio using a mobile terminal.
- Depending on the mobile terminal in use, larger size images may not be displayed. In this case, selecting “9 Low” for “Image quality setting” of “JPEG” (→page 76) may sometimes solve this problem.
- Depending on the mobile terminal in use or its contract plan, it may be impossible to access.

---

<sup>\*1</sup> IP address is the global WAN IP address of the router that can be accessed via the Internet. However, when accessing the same LAN as the camera with a wireless compatible mobile terminal, the IP address is the local IP address.

<sup>\*2</sup> Only when accessing the camera via the Internet.

## 3 Record images on the SD memory card manually

Images displayed on the “Live” page can be recorded on the SD memory card manually. This button is operable only when “Manual” is selected for “Save trigger” on the [SD memory card] tab on the “Basic” page of the setup menu. (→page 54)

It is possible to select “JPEG”, “H.264(1)”, or “H.264(2)” on “Recording format” of the setup menu.

(→page 53) When “JPEG” is selected for “Recording format”, still image data are recorded. When “H.264(1)” or “H.264(2)” is selected, video data are recorded.

Images recorded on the SD memory card can be copied onto the PC. (→page 60)

1. Display the “Live” page. (→page 7)



2. Click the [SD] button.  
→ The SD recording window will open.



3. Click the [Start] button to start recording images on the SD memory card. The SD recording status indicator will light red (→page 9) while images are being recorded on the SD memory card. The image saving interval can be configured on the [SD memory card] tab of the “Basic” page. (→page 51)
4. Click the [Stop] button to stop saving images on the SD memory card.  
→ The SD recording status indicator will turn off.
5. Click the [Close] button to close the window.

### 3 Record images on the SD memory card manually

---

#### **Note**

- Image data saved on Drive B can be obtained by executing “Access img.” on the [SD memory card] tab and logging in from the user authentication window (→page 60).  
The destination to save image data is a fixed directory on Drive B. (→page 199)
- When the [Start] button is clicked immediately after the [Stop] button is clicked, saving of images may not start. In this case, click the [Start] button again.

## 4 Action at an alarm occurrence

The alarm action (camera action at an alarm occurrence) will be performed when the following alarms occur.

### 4.1 Alarm type

- **VMD alarm:** When motion is detected in the set VMD area, the alarm action will be performed.  
\*VMD stands for "Video Motion Detection".
- **Command alarm:** When a Panasonic alarm protocol is received from the connected device via a network, the alarm action will be performed.
- **Audio detection alarm:** When the configured audio detection level is exceeded, the alarm action will be performed.

### 4.2 Action at an alarm occurrence

#### Display the alarm occurrence indication button on the "Live" page

The alarm occurrence indication button will be displayed on the "Live" page at an alarm occurrence.  
(→page 9)

#### **IMPORTANT**

- When "Polling(30s)" is selected for "Alarm status update mode" (→page 46), the Alarm occurrence indication button will be refreshed in 30-second intervals. For this reason, it may take a maximum of 30 seconds until the alarm occurrence indication button is displayed on the "Live" page at an alarm occurrence.

#### Save images on the SD memory card

When an alarm occurs, images (JPEG/H.264) will be saved on the SD memory card. The settings to save images on the SD memory card can be configured on the [SD memory card] tab (→page 51) of the "Basic" page and the [Alarm] tab of the "Alarm" page. (→page 107)

#### Transmit an image onto a server automatically

An alarm image can be transmitted at an alarm occurrence to the server designated in advance. The settings required to transmit an alarm image to a server can be configured in the "Alarm image" section on the [Alarm] tab of the "Alarm" page (→page 107) and the [FTP] tab of the "Server" page (→page 132).

#### **IMPORTANT**

- Select "FTP error" for "Save trigger" on the [SD memory card] tab when using the SD memory card. When "Alarm input" or "Manual" is selected for "Save trigger", an alarm image will not be transmitted at an alarm occurrence to the FTP server.

#### Notify of alarm occurrences by E-mail

Alarm E-mail (alarm occurrence notification) can be sent at an alarm occurrence to the E-mail addresses registered in advance. Up to 4 addresses can be registered as recipients of the alarm E-mail. An alarm image (still picture) can be sent with the alarm E-mail as an attached file. The settings for alarm E-mail can be

configured in the “E-mail notification” section on the [Notification] tab of the [Alarm] page (→page 115) and the [E-mail] tab of the “Server” page (→page 131).

### **Notify of alarm occurrences to the designated IP addresses (Panasonic alarm protocol notification)**

This function is available only when a Panasonic device, such as the network disk recorder, is connected to the system. When “On” is selected for “Panasonic alarm protocol notification”, the connected Panasonic device will be notified that the camera is in the alarm state. The settings for Panasonic alarm protocol can be configured in the Panasonic alarm protocol section of the [Notification] tab of the [Alarm] page. (→page 117)

## 5 Transmit images onto an FTP server

Images can be transmitted to an FTP server. By configuring the following settings, transmission of images captured at an alarm occurrence or captured at a designated interval to an FTP server will become available.

### **IMPORTANT**

- When using this function, set the user name and the password to access the FTP server to restrict users who can log into the FTP server.
- To transmit images to the FTP server, select “Not use” for “SD memory card”, or set “Save trigger” to “FTP error” on the [SD memory card] tab of the “Basic” page when “JPEG” is selected for [Recording format]. (→page 53)

### 5.1 Transmit an alarm image at an alarm occurrence (Alarm image transmission)

An alarm image can be transmitted at an alarm occurrence to the FTP server. To transmit alarm images to an FTP server, it is necessary to configure the settings in advance.

The settings for the FTP server can be configured on the [FTP] tab of the “Server” page. (→page 132)

The alarm image transmission function can be turned on/off in the “Alarm image” section of the [Alarm] tab of the “Alarm” page. (→page 107)

#### **Note**

- Depending on the line speed or the traffic, the number of the transmitted images may not reach the set number of images to be transmitted.
- Alarm images failed to be transmitted to the FTP server at an alarm occurrence will not be saved on the SD memory card. However, images that fail to be transmitted with the FTP periodic image transmission will be saved.

### 5.2 Transmit images at a designated interval or period (FTP periodic image transmission)

Images can be transmitted at a designated interval or period. To transmit images at a designated interval or period, it is necessary to configure the settings in advance.

The settings for the FTP server can be configured on the [FTP] tab of the “Server” page. (→page 132)

It is possible to determine whether or not to use the FTP periodic image transmission function and to configure the settings relating to alarm images and the schedule on the [FTP img. trans.] tab of the “Network” page. (→page 164)

#### **Note**

- Depending on the line speed or the traffic, images may not be transmitted at the designated interval.
- When “On” is selected for both the alarm image transmission function and the FTP periodic image transmission function, the alarm image transmission function will be given priority over the FTP periodic image transmission function. Therefore, images may not be transmitted at the interval designated on the “FTP periodic image transmission” setting.

## 5.3 Save images on the SD memory card when images fail to transmit using the FTP periodic image transmission function

Images that have failed to transmit using the FTP periodic image transmission can be saved automatically on the SD memory card. It is possible to select a trigger to save images on the SD memory card on the [SD memory card] tab of the “Basic” page. (→page 51)

To use the SD memory recording function featured in Panasonic network disk recorder, select “Off” for “FTP periodic image transmission” (→page 165) and “FTP error” for “Save trigger” (→page 54).

### **IMPORTANT**

- We make no guarantee for any damages of files on the SD memory card incurred by malfunction or error occurrence in files saved in the SD memory card regardless of what the cause may be.

### **Note**

- To refer to images of “FTP error”, “Save logs” needs to be set to “On” (→page 69).

## 6 Display the log list

The history of various logs will be displayed in list form.

The display format varies depending on the “Recording format” of the SD memory card.


### 6.1 When “JPEG” is selected for “Recording format” of the SD memory card

The history of the following logs will be displayed in list form.

- **Alarm log:** Logs of the alarm occurrences such as time and date of the alarm occurrences and the alarm type will be displayed.
- **Manual/Schedule log:** Logs filed when images have been recorded manually or during the period of the schedule on the SD memory card will be displayed.
- **FTP trans. error log:** Logs filed when the FTP periodic image transmission function has failed will be displayed.

Each log list can be displayed only when “On” is selected for “Save logs” on the [Log] tab of the “Basic” page (→page 69) respectively.


1. Display the “Live” page. (→page 7)

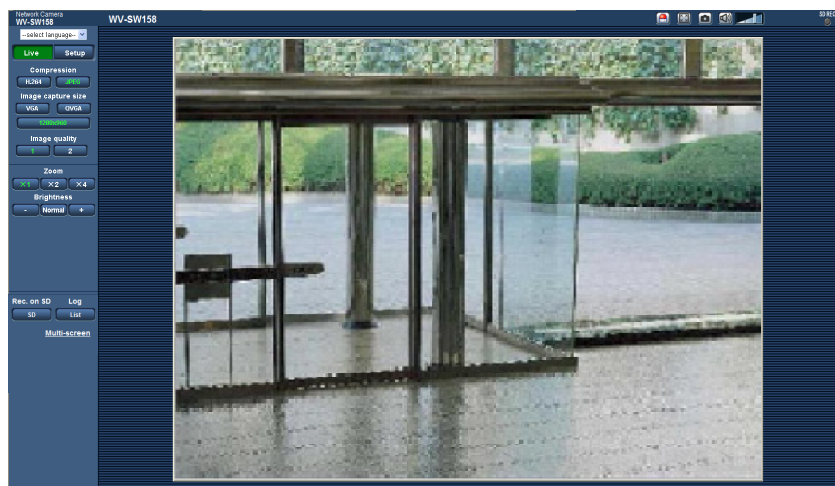

## 6 Display the log list

- Click the [List] button.

→ The log list will be displayed in a newly opened window (log list window).

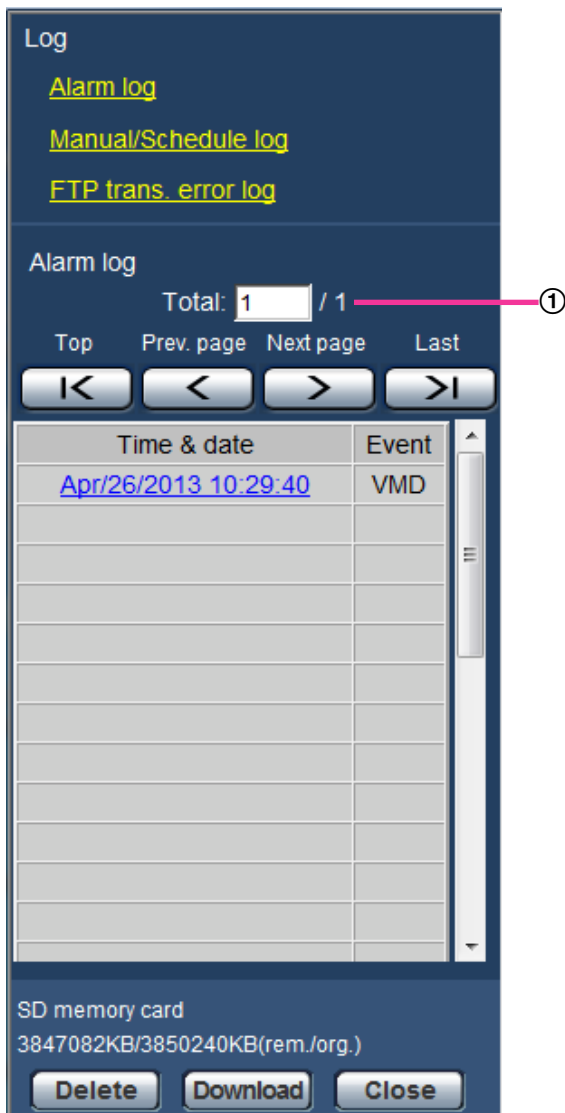

- ① Number of the listed logs

### IMPORTANT

- Only a single user can operate the log list window. Other users cannot access the log list window.

### Note

- When “Not use” is selected for “SD memory card”, the “Manual/Schedule log” list and the “FTP trans. error log” list will not be displayed.

- Click the desired log type listed below “Log” to display the log list.

→ The log list of the selected log type will be displayed.

### Note

- When any images are saved on the SD memory card, the image can be displayed by clicking Time and Date. (→page 51)

## About the log list window

### Number of the listed logs

Total number of the logs of the selected log type and a number of the log being displayed on the top of the log list will be displayed.

#### Note

- Enter the desired log number and press the [Enter] key on the keyboard. The log of the designated number will be displayed on the top of the log list.

### [Top] button

Click this button to display the log listed at the top.

### [Prev. page] button

Click this button to display the previous page of the log list.

#### Note

- When the mouse button is held down while placing the mouse pointer on the [Prev. page] button, the displayed log number will be decreased. When the mouse button is released, the decrement of the log number will stop and the log number displayed at the moment when the mouse button is released will be the top of the currently displayed page.

### [Next page] button

Click this button to display the next page of the log list.

#### Note

- When the mouse button is held down while placing the mouse pointer on the [Next page] button, the displayed log number will be increased. When the mouse button is released, the increment of the log number will stop and the log number displayed at the moment when the mouse button is released will be the top of the currently displayed page.

### [Last] button

Click this button to display the log listed at the bottom.

### [Time & date]

Time and date when each log has been filed will be displayed.

#### Note

- When "Off" is selected for "Time display format" (→page 46), time and date of alarm occurrence will be displayed in 24-hour format.
- The recording timing of logs is as follows.
  - **Alarm log:** Alarm occurrence time and date will be filed as a log.
  - **Manual/Schedule log:** Time and date when recording of images onto the SD memory card started manually or during the period of the schedule will be filed as a log. When images are recorded sequentially, logs will be filed on the hour every hour (12:00, 1:00, 2:00, etc.). However, depending on the photographic subject and the setting used, logs may be filed in periods of over on hour.
  - **FTP trans. error log:** Logs will be filed every one hour.

### [Event]

The event type will be displayed. The event types will be displayed only when displaying the alarm log list.

- **VMD:** Alarm by VMD alarm
- **COM:** Alarm by command alarm
- **AUD:** Alarm by audio detection alarm

### [SD memory card]

Available capacity and the original capacity of the SD memory card will be displayed.

The displayed descriptions are the same descriptions displayed as “Remaining capacity” on the [SD memory card] tab. (→page 58)

### [Delete] button

Click this button to delete the currently displayed log list.

When using the SD memory card, images associated with the log list will also be deleted.

### **IMPORTANT**

- When many images are saved on an SD memory card, complete deletion may take several hours. (For example, to delete 2 GB of data, approx. 2 hours may be needed.) In such a case, format the SD memory card. Be aware that formatting the SD memory card causes all the images to be deleted. (→page 58)
- In the process of the deletion, only logs will be saved, and it is impossible to save images newly.
- Do not turn off the power of the camera until the deletion is complete. When the power of the camera is turned off in the process of the deletion, some images may remain on the SD memory card. In this case, click the [Delete] button on the same log list window used to delete the logs.

### [Download] button

Click this button to download all logs of the selected log list as a file onto the PC.

### [Close] button


Click this button to close the log list window.

## 6.2 When “H.264(1)” or “H.264(2)” is selected for “Recording format” of the SD memory card

The history of various logs will be displayed in list form.


- **Alarm log:** Logs of the alarm occurrences such as time and date of the alarm occurrences, the image recording period and the alarm type will be displayed.
- **Manual/Schedule log:** Logs filed when images have been recorded manually or during the period of the schedule on the SD memory card, and the image recording period will be displayed.

## 1. Display the "Live" page.

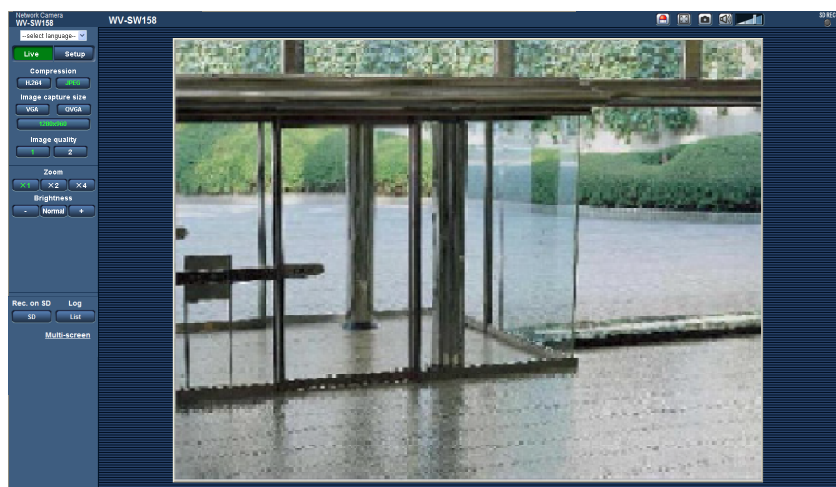

## 2. Click the [List] button.

→ The log list will be displayed in a newly opened window (log list window).

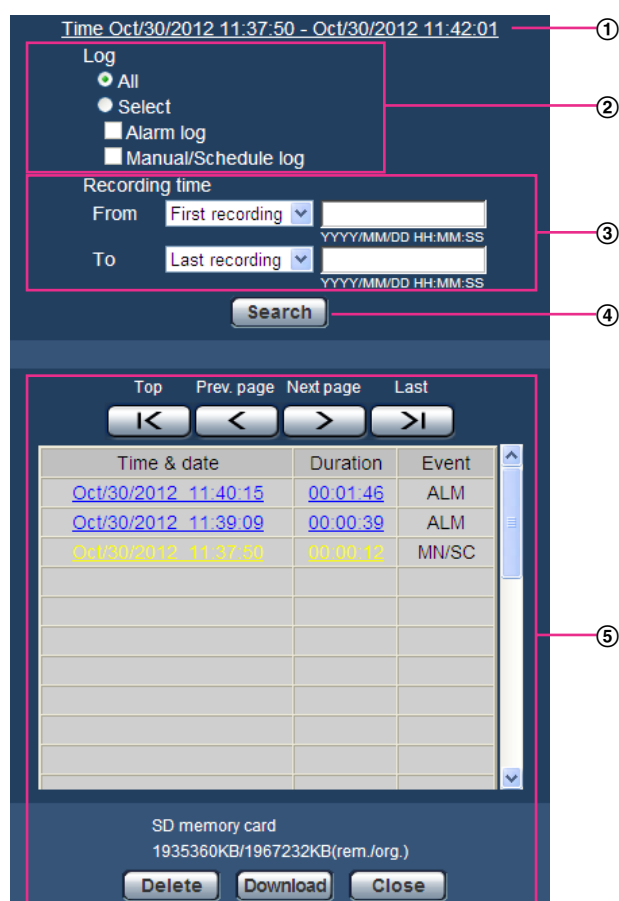**IMPORTANT**

- Only a single user can operate the log list window. Other users cannot access the log list window.

### ① Time

Displays the time period of the data recorded on the SD memory card.

### ② Log

Select a log type to display on the log list.

- **All:** All logs will be displayed.
- **Select:** Only the logs of the selected log type will be displayed.
  - **Alarm log:** The log when an alarm is detected will be displayed.
  - **Manual/Schedule log:** Manual and Schedule logs will be displayed.
- **Default:** All

### ③ Recording time

Configure the time period of logs displayed on the log list.

- **From:** Configure the starting period of logs displayed on the log list.
  - **First recording:** Displays from the first log recorded on the SD memory card.
  - **Today:** Displays the logs recorded today.
  - **Yesterday:** Displays the logs recorded yesterday.
  - **Last 7 days:** Displays the logs recorded from 6 days ago to the present day.
  - **Last 30 days:** Displays the logs recorded from 29 days ago to the present day.
  - **Date/time:** Displays the logs recorded from the entered date and time on “Date/time” box.
- **To:** Configure the ending period of logs displayed on the log list when “First recording” or “Date/time” is selected for “From”.
  - **Last recording:** Displays until the last log recorded on the SD memory card.
  - **Date/time:** Displays the logs recorded until the entered date and time on “Date/time” box.

### ④ [Search] button

Searches for logs according to the conditions specified in “Log” and “Recording time”.

The search result will be displayed on the log list.

### ⑤ Log list

Displays the log search results.

You can play back recorded data by clicking on the time or duration of the recorded data displayed under [Time & date] and [Duration].

- **[Top] button:** Click this button to display the log listed at the top.
- **[Prev. page] button:** Click this button to display the previous page of the log list.
- **[Next page] button:** Click this button to display the next page of the log list.
- **[Last] button:** Click this button to display the log listed at the bottom.
- **[Time & date]:** Time and date when each log has been recorded will be displayed.

#### Note

- When “Off” is selected for “Time display format”, the alarm occurrence times are displayed in 24 hour time format.
- The recording timing of logs is as follows.
  - **Alarm log:** When “Alarm input” is selected for “Save trigger”, the alarm occurrence time, date, and recording time will be filed as a log.
  - **Manual/Schedule log:** Time and date when recording of images onto the SD memory card started manually or during the period of the schedule will be filed as a log. When images are recorded sequentially, logs will be filed on the hour every hour (12:00, 1:00, 2:00, etc.). However, depending on the photographic subject and the setting used, logs may be filed in periods of over an hour.
- **[Duration]:** Displays the period of time that the data has been recorded on the SD memory card.
- **[Event]:** The event type will be displayed.
  - **ALM:** Log by “Alarm”
  - **MN/SC:** Log by “Manual/Schedule”

- **[SD memory card]:** Available capacity and the original capacity of the SD memory card will be displayed.
- **[Delete] button:** Click this button to delete the currently displayed log list. When using the SD memory card, images associated with the log list will also be deleted.

### **IMPORTANT**

- If there are too many recorded data files, it may take time to delete all of them. (For example, to delete 2 GB of data, approx. 2 hours may be needed.) Formatting the SD memory card can shorten the time to delete all the data.
- In the process of the deletion, “Alarm” and “Manual/Schedule” can not be operated.
- Do not turn off the power of the camera until the deletion is complete. When the power of the camera is turned off in the process of the deletion, some images may remain on the SD memory card. In this case, click the [Delete] button on the same log list window used to delete the logs.
- **[Download] button:** Click this button to download all logs of the selected log list onto the PC.
- **[Close] button:** Click this button to close the log list window.

## 7 Playback of images on the SD memory card


When clicking a time and date listed on the log list window, the “Live” page will turn to the “Playback” page. When images associated with the clicked time and date are on the SD memory card, the first image of them will be displayed.

The display format varies depending on the “Recording format” of the SD memory card.

### **IMPORTANT**

- Refresh interval of images may become slow during playback or download.
- When many images are saved on the SD memory card, it may take time to display images on the “Playback” page.
- Even when the size of the images saved on the SD memory card is “QVGA”, “1280x960”, or “2048x1536”, the images will be displayed in VGA size on the “Playback” page. When “16:9” is selected for the aspect ratio, images will be displayed in an image capture size of “640x360”, even “320x180”, “1280x720”, or “1920x1080” is selected. Therefore, images may look coarse on the “Playback” page.
- When playing images by selecting an FTP error log on the log list, images may not be played in order of images recorded on the SD memory card if they have been recorded on the SD memory card with selected value for the “Transmission interval” setting on the [FTP img. trans.] tab is “1min” or less.

### 7.1 When “JPEG” is selected for “Recording format” of the SD memory card

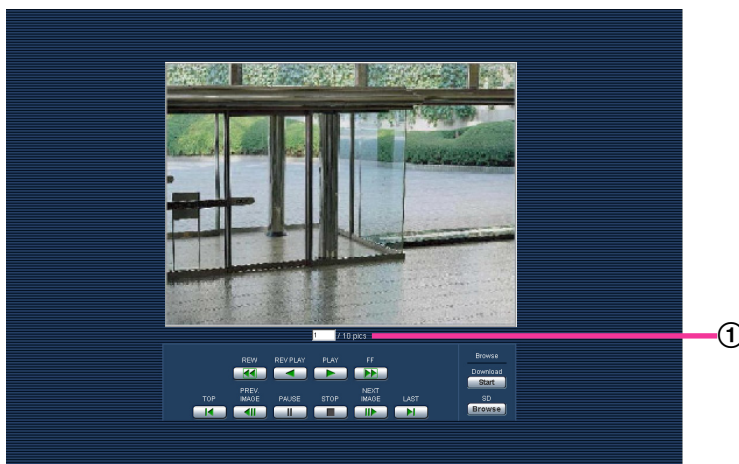

#### ① Number of images

When clicking a time and date listed on the log list window, total number of images associated with the clicked time and date, and the number of the currently displayed image will be displayed.

#### **Note**

- Enter the desired number of image and press the [Enter] key on the keyboard. The image of the designated number will be displayed.

#### **[REW] button**

Each time the button is clicked, the playback speed will change.

When the [PLAY] button or the [REV PLAY] button is clicked during fast reverse playback, playback speed will return to the normal playback speed.

**[REV PLAY] button**

Images will be played in reverse sequential order.

**[PLAY] button**

When this button is clicked, images will be played in sequential order.

**[FF] button**

Each time the button is clicked, the playback speed will change.

When the [PLAY] button or the [REV PLAY] button is clicked during fast playback/fast reverse playback, playback speed will return to the normal playback speed.

**[TOP] button**

The first image will be displayed.

**[PREV. IMAGE] button**

The previous frame will be displayed and paused when this button is clicked during playback.

Each time this button is clicked during pausing, the frame previous to the currently displayed frame will be displayed.

**Note**

- When the mouse button is held down while the mouse pointer is on this button, the image number will be decreased.  
When the mouse button is released, the decreasing of the image number will stop and the image corresponding to the currently displayed number will be displayed.

**[PAUSE] button**

Playback will be paused when this button is clicked during playback.

Playback will resume when this button is clicked during pausing.

**[STOP] button**

Playback will stop and the "Playback" window will turn to the "Live" page.

**[NEXT IMAGE] button**

The next frame will be displayed and paused when this button is clicked during playback.

Each time this button is clicked during pausing, the frame next to the currently displayed frame will be displayed.

**Note**

- When the mouse button is held down while the mouse pointer is on this button, the image number will be increased.  
When the mouse button is released, the increment of the image number will stop and the image number displayed at the moment when the mouse button is released will be displayed.

**[LAST] button**

The last image will be displayed.

**Browse****[Start] button**


The selected image will be downloaded onto the PC. Before downloading images, designate the destination directory in advance. (→page 69)

The following window will be displayed when the [Start] button is clicked.

## 7 Playback of images on the SD memory card

---

Select the image to be downloaded, and then click the [OK] button.

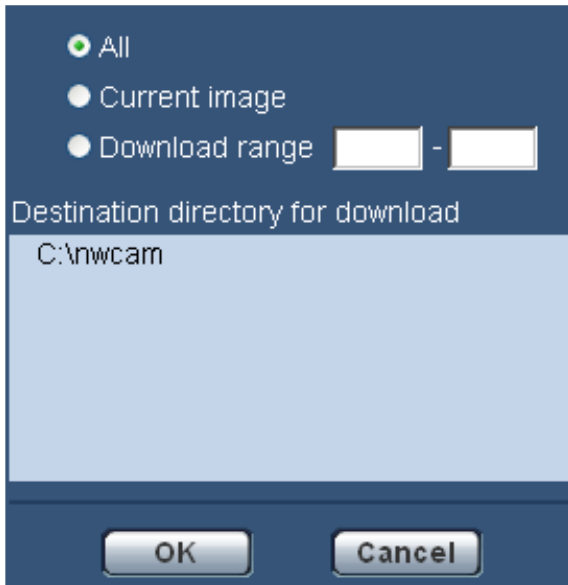

- **All:** All images saved at the selected time and date will be downloaded.
- **Current image:** Only the currently displayed image will be downloaded.
- **Download range:** Images in the designated range of number of images will be downloaded.

### **Note**

- When the [Cancel] button is clicked in the process of the download, the download will be canceled. In this case, images already downloaded before clicking the [Cancel] button will be saved on the PC.
- When downloading data, the operation buttons on the “Playback” window cannot be operated.


### **[Browse] button**

When successfully logged in after the user authentication process, a folder on the SD memory card in which images are saved will be displayed. (→page 60)

## 7.2 When “H.264(1)” or “H.264(2)” is selected for “Recording format” of the SD memory card

### **IMPORTANT**

- Depending on the network environment, download of video data may fail.

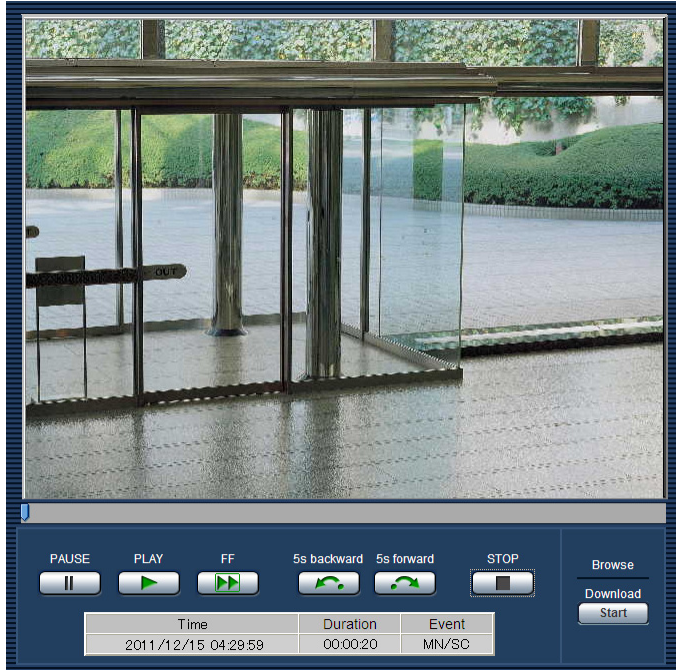

### **[PAUSE] button**

Playback will be paused when this button is clicked during playback.

### **[PLAY] button**

When this button is clicked, recorded data will be played.

### **Note**

- Audio will not be played. Recorded audio must be downloaded in order to be played back.

### **[FF] button**

Each time this button is clicked, the playback speed will change. When the [PLAY] button is clicked during fast playback, playback speed will return to the normal playback speed.

### **Note**

- The maximum speed of the fast playback varies depending on the setting of “Max bit rate” - “H.264 recording” of the SD memory card.

### **[5s backward] button**

Each time this button is clicked, the recorded data goes back by 5 seconds and starts playing.

### **[5s forward] button**

Each time this button is clicked, the recorded data goes forward by 5 seconds and starts playing.

### [STOP] button

Playback will stop and the “Playback” window will turn to the “Live” page.

### [Time]

Time and date when each log has been recorded will be displayed.

### [Duration]

Displays the period of time that the data has been recorded on the SD memory card.

### [Event]

The event type will be displayed.

- **ALM:** Log by “Alarm”
- **MN/SC:** Log by “Manual/Schedule”

## Browse

### [Start] button

The selected image will be downloaded onto the PC.

Before downloading images, designate the destination directory in advance. (→page 69)

The message window will be displayed to ask if it is OK to start download when the [Start] button is clicked. Click the [OK] button.

### Note

- When the [Cancel] button is clicked in the process of the download, the download will be canceled. In this case, video data already downloaded before clicking the [Cancel] button will be saved on the PC.
- Video data is saved in files of approx. 2 MB or 20 MB depending on the settings. When the file size of video data is more than the configured value, multiple files will be downloaded.
- It is possible to play back video data saved on the PC using such applications as QuickTime Player or Windows Media® Player<sup>\*1</sup>. However, we are not liable for performance relating to these applications.
- Depending on the status of the SD memory card, QuickTime Player, or Windows Media Player, video data may not be able to be played back.
- When “On” is selected for “Audio recording”, audio is recorded. If audio is recorded, it can be played back with video by downloading the video data.
- When downloading data, the operation buttons on the “Playback” window cannot be operated.

---

<sup>\*1</sup> The supported operating systems are Windows 8 and Windows 7 only.

## 8 About the network security

### 8.1 Equipped security functions

The following security functions are featured in this camera.

- ① Access restrictions by the host authentication and the user authentication  
It is possible to restrict users from accessing the camera by setting the host authentication and/or the user authentication to "On". (→page 126, page 127)
- ② Access restrictions by changing the HTTP port  
It is possible to prevent illegal access such as port scanning, etc. by changing the HTTP port number. (→page 139)
- ③ Access encryption by the HTTPS function  
It is possible to enhance the network security by encrypting the access to cameras using the HTTPS function. (→page 144)

#### **IMPORTANT**

- Design and enhance security countermeasures to prevent leakage of information such as image data, authentication information (user name and password), alarm E-mail information, FTP server information, DDNS server information, etc. Perform the countermeasure such as access restriction (using the user authentication) or access encryption (using the HTTPS function).
- After the camera is accessed by the administrator, make sure to close all the browsers for added security.
- Change the administrator password periodically for added security.

#### **Note**

- When user authentication (authentication error) has failed to pass 8 times within 30 seconds using the same IP address (PC), access to the camera will be denied for a while.

## 9 Display the setup menu from a PC

The settings of the camera can be configured on the setup menu.

### **IMPORTANT**

- The setup menu is only operable by users whose access level is “1. Administrator”. Refer to page 126 for how to configure the access level.

### 9.1 How to display the setup menu


1. Display the “Live” page. (→page 7)
2. Click the [Setup] button on the “Live” page.  
→ The window with the user name and password entry fields will be displayed.




3. Click the [OK] button after entering the user name and the password.  
The default user name and password are as follows.  
User name: admin  
Password: 12345



→ The setup menu will be displayed. Refer to page 44 for further information about this menu.

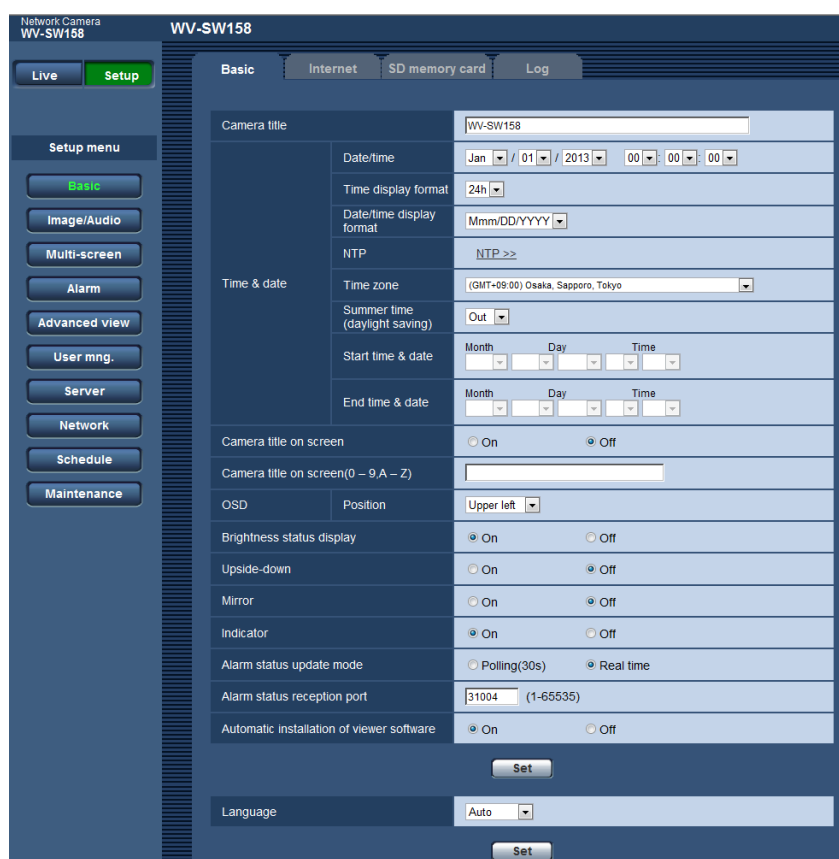

## 9.2 How to operate the setup menu

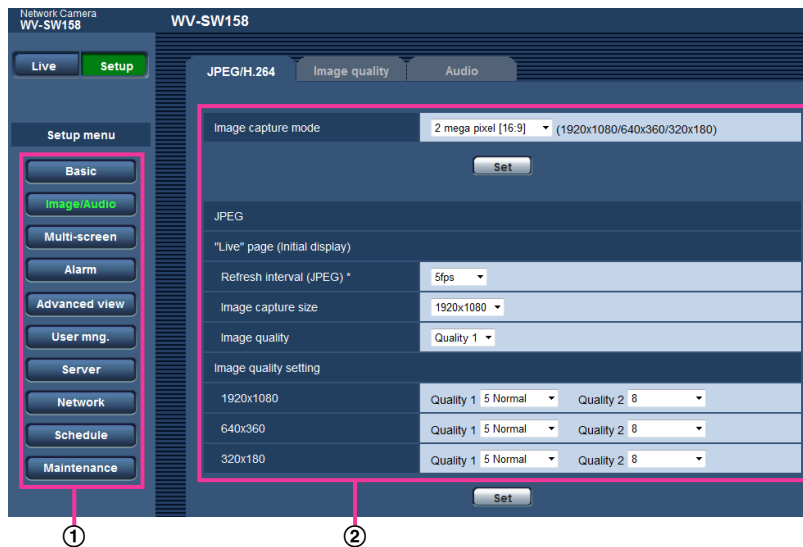


- ① Menu buttons
- ② Setup page

1. Click the desired button in the frame on the left of the window to display the respective setup menu. When there are tabs at the top of the “Setup” page displayed in the frame on the right of the window, click the desired tab to display and configure the setting items relating to the name of the tab.
2. Complete each setting item displayed in the frame on the right of the window.
3. After completing each setting item, click the [Set] button to apply them.

### IMPORTANT


- When there are two or more [Set] and [Execute] buttons on the page, click the respective button to the edited setting item.

#### <Example>

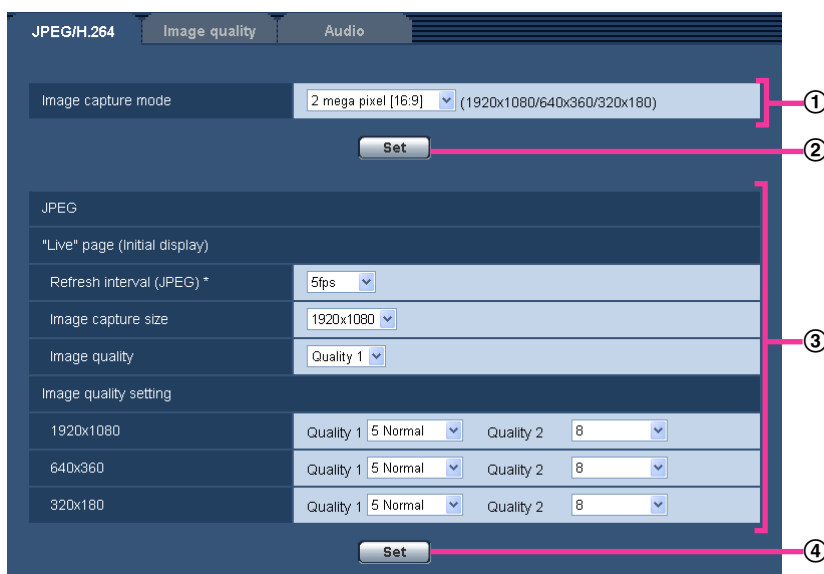

When completing the setting items in field ①, click the [Set] button (②) below field (①).  
The edited settings in field ① will not be applied unless the [Set] button (②) below field (①) is clicked.  
In the same manner as above, click the [Set] button (④) below field ③ when completing the setting items in field ③.

## 9.3 About the setup menu window

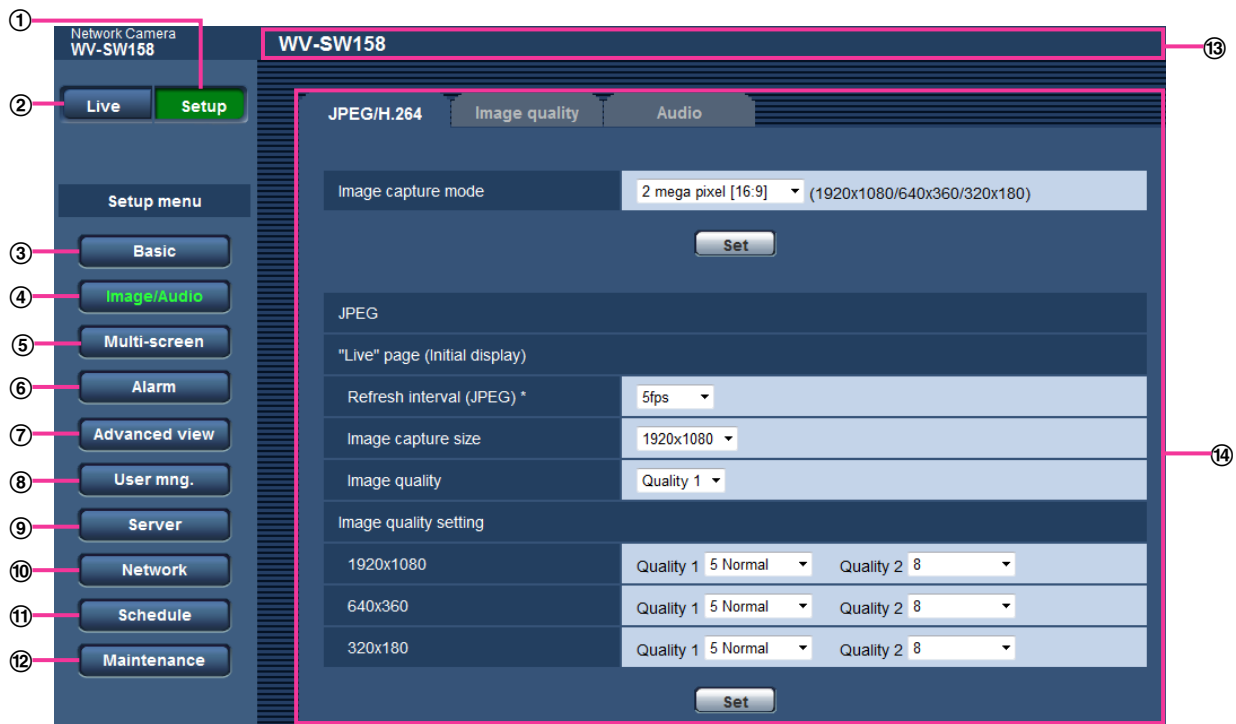

① **[Setup] button**

Displays the “Setup” page.

② **[Live] button**

Displays the “Live” page.

③ **[Basic] button**

Displays the “Basic” page. The basic settings such as time and date and camera title, and the settings relating to the SD memory card can be configured on the “Basic” page. (→page 46)

④ **[Image/Audio] button**

Displays the “Image/Audio” page. The settings relating to image quality, image capture size, etc. of JPEG/H.264 camera images can be configured on the “Image/Audio” page. (→page 75)

⑤ **[Multi-screen] button**

Displays the “Multi-screen” page. The cameras from which images are to be displayed on a multi-screen can be registered on the “Multi-screen” page. (→page 104)

⑥ **[Alarm] button**

Displays the “Alarm” page. The settings relating to alarm occurrences such as settings for the alarm action at an alarm occurrence, the alarm occurrence notification, and the VMD area settings can be configured on the “Alarm” page. (→page 106)

⑦ **[Advanced view] button**

Displays the “Advanced view” page. The settings relating to cropping and picture in picture (PiP) can be configured on the “Advanced view”. (→page 120)

⑧ **[User mng.] button**

Displays the “User mng.” page. The settings relating to the authentication such as users and PCs restrictions for accessing the camera can be configured on the “User mng.” page. (→page 126)

⑨ **[Server] button**

Displays the “Server” page. The settings relating to the E-mail server, the FTP server and the NTP server to which the camera accesses can be configured on the “Server” page. (→page 131)

- ⑩ **[Network] button**  
Displays the “Network” page. The network settings and the settings relating to DDNS (Dynamic DNS), SNMP (Simple Network Management Protocol) and the FTP (File Transfer Protocol) periodic transmission can be configured on the “Network” page. (→page 136)
- ⑪ **[Schedule] button**  
Displays the “Schedule” page. On the “Schedule” page, it is possible to designate time zones to allow to receive alarm input or to allow to activate the VMD detection function. (→page 169)
- ⑫ **[Maintenance] button**  
Displays the “Maintenance” page. System log check, firmware upgrade, status check and initialization of settings can be carried out on the “Maintenance” page. (→page 172)
- ⑬ **Camera title**  
The title of the camera whose settings are currently being configured will be displayed.
- ⑭ **Setup page**  
Pages of each setup menu will be displayed. There are tabs for some setup menus.

# 10 Configure the basic settings of the camera [Basic]

The basic settings such as camera title, time and date, SD memory card and the logs can be configured on the “Basic” page. The “Basic” page has the [Basic] tab, the [Internet] tab, the [SD memory card] tab, and the [Log] tab.

## 10.1 Configure the basic settings [Basic]

Click the [Basic] tab on the “Basic” page. (→page 40, page 42)

The settings such as the camera title, time and date, etc. can be configured on this page.

### [Camera title]

Enter the title of the camera. Click the [Set] button after entering the title of the camera. The entered title will be displayed in the camera title field.

- **Available number of characters:** 0 - 20 characters
- **Unavailable characters:** " &
- **Default:** Varies as follows depending on the model in use.  
WV-SW158 **SW158** / WV-SF138 **SF138**

### [Date/time]

Enter the current time and date. When “12h” is selected for “Time display format”, “AM” or “PM” can be selected.

- **Available range:** Jan/01/2010 00:00:00 - Dec/31/2035 23:59:59

### **IMPORTANT**

- Use an NTP server when the more accurate time & date setting is required for the system operation. (→page 133)

### **[Time display format]**

Select the time display format from “24h”, “12h” and “Off”. Enter the current hour reflecting this setting when entering the current time and date for “Date/time”. To hide time and date, select “Off”.

- **Default:** 24h

### **[Date/time display format]**

Select a date/time display format. When “2013/04/01 13:10:00” is set for “Date/time” after selecting “24h” for “Date/time display format”, time & date will be respectively displayed as follows.

- **DD/MM/YYYY:** 01/04/2013 13:10:00
- **MM/DD/YYYY:** 04/01/2013 13:10:00
- **DD/Mmm/YYYY:** 01/Apr/2013 13:10:00
- **YYYY/MM/DD:** 2013/04/01 13:10:00
- **Mmm/DD/YYYY:** Apr/01/2013 13:10:00
- **Default:**
  - Mmm/DD/YYYY

### **[NTP]**

When “NTP >>” is clicked, the [NTP] tab of the “Server” page will be displayed. (→page 133)

### **[Time zone]**

Select a time zone corresponding to the location where the camera is in use.

- **Default:** (GMT +09:00) Osaka, Sapporo, Tokyo

### **[Summer time (daylight saving)]**

Select “In”, “Out” or “Auto” to determine whether or not to apply daylight saving time. Configure this setting if the summer time (daylight saving time) is applied in the location where the camera is in use.

- **In:** Applies summer time. An asterisk (\*) will be displayed on the left side of the displayed time and date.
- **Out:** Does not apply summer time.
- **Auto:** Applies summer time in accordance with the settings for “Start time & date” and “End time & date” (month, week, day of the week, time).
- **Default:** Out

### **[Start time & date] [End time & date]**

When “Auto” is selected for “Summer time (daylight saving)”, select the time & date for the start time and the end time (month, week, day of the week, time).

### **[Camera title on screen]**

Select “On” or “Off” to determine whether or not to display the camera title on the screen. When “On” is selected, the character string entered for “Camera title on screen (0-9, A-Z)” will be displayed at the position selected for “OSD”.

- **Default:** Off

### **[Camera title on screen (0-9, A-Z)]**

Enter a character string to be displayed on the image.

- **Available number of characters:** 0 - 20 characters
- **Available characters:** 0-9, A-Z and the following marks.  
! " # \$ % & ' ( ) \* + , - . / : ; = ?

- **Default:** None (blank)

### [OSD] - [Position]

Select the position where the time and date and a character string to be displayed on the image of the “Live” page.

- **Upper left:** The information will be displayed at the upper left corner of the main area on the “Live” page.
- **Lower left:** The information will be displayed at the lower left corner of the main area on the “Live” page.
- **Upper right:** The information will be displayed at the upper right corner of the main area on the “Live” page.
- **Lower right:** The information will be displayed at the lower right corner of the main area on the “Live” page.
- **Default:** Upper left

### [Brightness status display]

Select “On” or “Off” to determine whether or not to display the status of brightness on images displayed on the “Live” page when adjusting brightness.

- **Default:** On

### [Upside-down]

Select “On” or “Off” to determine whether or not to turn the image upside-down.

- **Default:** Off

### [Mirror]

Select “On” or “Off” to determine whether or not to turn the image over horizontally.

**Default:** Off

### [Indicator]

Determine whether or not to use the following indicators. Select “On” to use the following indicators to check the operational status. Select “Off” to turn off the indicators at all times.

- Link indicator
- Access indicator
- SD memory card error indicator
- **Default:** On

### Note

- **Link indicator (orange):** This indicator will light when communication with the connected device is available.
- **Access indicator (green):** This indicator will light when accessing a network.
- **SD memory card error indicator:** Lights when an error occurred in the SD memory card.

### [Alarm status update mode]

Select an interval of the camera status notification from the following.

When the status of the camera changes, the alarm occurrence indication button or the SD saving status indicator will be displayed to notify of the camera status.

- **Polling(30s):** Updates the status each 30 seconds and provide notification of the camera status.
- **Real time:** Provide notification of the camera status when the status has changed.
- **Default:** Real time

### Note

- Depending on the network environment, notification may not be provided in real time.
- When multiple cameras are using the same “Alarm status reception port”, even if “Real time” is selected for “Alarm status update mode”, status notification is not provided in real time. In this case, change the “Alarm status reception port” settings.

**[Alarm status reception port]**

When selecting “Real time” for “Alarm status update mode”, designate a port number to which the status change notification is to be sent.

- **Available port number:** 1 - 65535
- **Default:** 31004

The following port numbers are unavailable since they are already in use.

20, 21, 23, 25, 42, 53, 67, 68, 69, 80, 110, 123, 161, 162, 443, 995, 10669, 10670

**[Automatic installation of viewer software]**

Determine whether or not to install the viewer software from this camera.

- **On:** Installs the viewer software from the camera automatically.
- **Off:** The viewer software cannot be installed from the camera.
- **Default:** On

**IMPORTANT**

- It is impossible to display images and to receive/transmit audio between the camera and the PC when the viewer software “Network Camera View 4S” is not installed on the PC.
- The number of the viewer software installations can be checked on the [Upgrade] tab of the “Maintenance” page. (→page 172)

**[Language]**

Select the language to initially display when the camera is accessed from the following.

Auto/English/Japanese/Italian/French/German/Spanish/Chinese/Russian

- **Auto:** The language used by the browser is automatically selected. If the language used by the browser is not supported by the camera, English is selected.
- **Default:** Auto

The language displayed on the “Live” page can also be changed. (→page 9)

## 10.2 Configure the Internet settings [Internet]

Click the [Internet] tab of the “Basic” page. (→page 40, page 42)

The settings relating to UPnP (Auto port forwarding), DDNS (Viewnetcam.com), and network settings for the Internet can be configured on this page.

The screenshot shows the 'Internet' configuration page. At the top, there are four tabs: 'Basic', 'Internet' (selected), 'SD memory card', and 'Log'. Below the tabs, the 'UPnP(Auto port forwarding)' section has two radio buttons: 'On' and 'Off', with 'Off' being selected. The 'DDNS' section has two dropdown menus: 'Area' (showing '--Select the service area--') and 'Service'. Below these is a 'Set' button. At the bottom, there is a section titled 'Recommended network setting for internet' with a message 'A setup suitable for internet environment is carried out.' and another 'Set' button.

**[UPnP (Auto port forwarding)]**

Select “On” or “Off” to determine whether or not to use the port forwarding function of the router.

To use the auto port forwarding function, the router in use must support UPnP and the UPnP must be enabled.

- **Default:** Off

### Note

- Due to auto port forwarding, the port number may sometimes be changed. When the number is changed, it is necessary to change the port numbers registered in the PC and recorders, etc.
- The UPnP function is available when the unit is connected to the IPv4 network. IPv6 is not supported.
- To check if auto port forwarding is properly configured, click the [Status] tab on the “Maintenance” page, and check that the “Enable” is displayed for “Status” of “UPnP”. (→page 174)  
When “Enable” is not displayed, refer to “Cannot access the unit via the Internet.” in 23 Troubleshooting.
- When the “UPnP (Auto port forwarding)” setting is changed, the “Auto port forwarding” setting under “UPnP” on the [Network] tab of the “Network” page also changes to the same setting.

### [Area]

Select the region where the camera is installed. If the camera is used outside of Japan, select “Global”. If the camera is used in Japan, select “Japan”.

Japan/Global

### [Service]

Select “Viewnetcam.com” or “Off” to determine whether or not to use “Viewnetcam.com”.

By selecting “Viewnetcam.com” and clicking the [Set] button, the registration window for “Viewnetcam.com” will be displayed in a newly opened window.

Follow the on-screen instructions to register with “Viewnetcam.com”.

Refer to page 161 or the “Viewnetcam.com” website (<http://www.viewnetcam.com/>) for further information.

- **Default:** Off

### Note

- When the “DDNS” setting is changed, the “DDNS” setting on the [DDNS] tab of the “Network” page also changes to the same setting.

### [Recommended network setting for internet]

The recommended settings for connecting to the Internet are performed here.

By clicking the [Set] button, a dialog displaying how the following settings will change is displayed.

Click the [OK] button after checking the settings to change the settings to the displayed values.

- [JPEG/H.264] tab on the “Image/Audio” page

#### JPEG

[Image capture size]: VGA/640x360

#### [H.264(1)]/[H.264(2)]

[Internet mode (over HTTP)]: On

[Transmission priority]: Best effort

[Max bit rate (per client)\*]: Max. 1024 kbps, Min. 128 kbps

#### [H.264(1)]

[Image capture size]: VGA/640x360

#### [H.264(2)]

[Image capture size]: QVGA/320x180

- [Network] tab on the “Network” page

#### [Common]

[Max RTP packet size]: Limited(1280byte)

[HTTP max segment size(MSS)]: Limited(1280byte)

### Note

- When “H.264(1)” is selected for “Recording format” of the SD memory card, the “Transmission priority” setting for “H.264(1)” will not change. If “H.264(2)” is selected for “Recording format”, the “Transmission priority” setting for “H.264(2)” will not change.
- When “3 mega pixel [4:3]” is selected for “Image capture mode”, the “Image capture size” setting will not change, but “Max bit rate (per client)\*” will change to Max. 1024 kbps and Min. 256 kbps.

## 10.3 Configure the settings relating to the SD memory card [SD memory card]

Click the [SD memory card] tab on the “Basic” page. (→page 40, page 42)  
The settings relating to the SD memory card can be configured on this page.

## 10 Configure the basic settings of the camera [Basic]

|                                                                |  |                                                                    |  |                              |  |     |  |
|----------------------------------------------------------------|--|--------------------------------------------------------------------|--|------------------------------|--|-----|--|
| Basic                                                          |  | Internet                                                           |  | SD memory card               |  | Log |  |
| SD memory card                                                 |  | <input checked="" type="radio"/> Use <input type="radio"/> Not use |  |                              |  |     |  |
|                                                                |  | <input type="button" value="Set"/>                                 |  |                              |  |     |  |
| Recording format                                               |  | H.264(1)                                                           |  |                              |  |     |  |
|                                                                |  | <input type="button" value="Set"/>                                 |  |                              |  |     |  |
| Common                                                         |  |                                                                    |  |                              |  |     |  |
| Remaining capacity notification                                |  | 50%                                                                |  |                              |  |     |  |
| Save trigger                                                   |  | Alarm input                                                        |  |                              |  |     |  |
| Overwrite                                                      |  | <input checked="" type="radio"/> On <input type="radio"/> Off      |  |                              |  |     |  |
|                                                                |  | <input type="button" value="Set"/>                                 |  |                              |  |     |  |
| JPEG recording                                                 |  |                                                                    |  |                              |  |     |  |
| File name                                                      |  | img_                                                               |  |                              |  |     |  |
| Image saving interval/Number of images to be saved(Pre alarm)  |  | Image saving interval                                              |  | Number of images to be saved |  |     |  |
|                                                                |  | 1fps                                                               |  | Off                          |  |     |  |
| Image saving interval/Number of images to be saved(Post alarm) |  | Image saving interval                                              |  | Number of images to be saved |  |     |  |
|                                                                |  | 1fps                                                               |  | 100 pics                     |  |     |  |
| Image capture size                                             |  | 640x360                                                            |  |                              |  |     |  |
|                                                                |  | <input type="button" value="Set"/>                                 |  |                              |  |     |  |
| H.264 recording                                                |  |                                                                    |  |                              |  |     |  |
| Image capture size                                             |  | 1920x1080                                                          |  |                              |  |     |  |
| Recording priority                                             |  | Frame rate                                                         |  |                              |  |     |  |
| Frame rate*                                                    |  | 30fps *                                                            |  |                              |  |     |  |
| Control time period                                            |  | 24h                                                                |  |                              |  |     |  |
| Max bit rate                                                   |  | 2048kbps *                                                         |  |                              |  |     |  |
| Image quality                                                  |  | Normal                                                             |  |                              |  |     |  |
| Refresh interval                                               |  | 1s                                                                 |  |                              |  |     |  |
| Maximum file size                                              |  | <input type="radio"/> 2 MB <input checked="" type="radio"/> 20 MB  |  |                              |  |     |  |
| Audio recording                                                |  | <input type="radio"/> On <input checked="" type="radio"/> Off      |  |                              |  |     |  |
|                                                                |  | <input type="button" value="Set"/>                                 |  |                              |  |     |  |
| SD memory card information                                     |  |                                                                    |  |                              |  |     |  |
| Remaining capacity                                             |  | -----KB/-----KB(Remaining capacity/Original capacity)              |  |                              |  |     |  |
| Format                                                         |  | <input type="button" value="Execute"/>                             |  |                              |  |     |  |
| SD memory card images                                          |  |                                                                    |  |                              |  |     |  |
| Access img.                                                    |  | <input type="button" value="Execute"/>                             |  |                              |  |     |  |

## SD memory card

### [SD memory card]

Select “Use” or “Not use” to determine whether or not to use the SD memory card.

- **Default:** Use

### **IMPORTANT**

- Select “Not use” when operating without an SD memory card.
- Before removing the SD memory card from the camera, it is necessary to select “Not use” first. The recorded data may be corrupted if the SD memory card is removed when “Use” is selected.
- When an SD memory card is inserted when “Use” is selected, data will be saved in accordance with the setting of “Save trigger”.
- After inserting the SD memory card, it is necessary to select “Use” to use the SD memory card.
- When playing or downloading images saved on the SD memory card, it is necessary to select “On” for “Save logs” on the [Log] tab (→page 69) in advance.
- When the image refresh interval is short, notification/recording timing or interval may become incorrect. Notification/recording may also not be performed correctly as configured when multiple users are receiving images. In this case, set the refresh interval longer.
- There are limited times to overwrite on an SD memory card. When having a high frequency of overwriting, the lifetime of the SD memory card may become shorter.
- A lifetime of an SD memory card should be influenced by the number of the image files stored and log savings on the SD memory card. Selecting “H.264(1)” or “H.264(2)” for “Recording format” can reduce the number of files to be stored on the SD memory card.
- If the data writing speed goes down after data is repeatedly written on an SD memory card, we recommend replacing the SD memory card.

### [Recording format]

Select “JPEG”/“H.264(1)”/“H.264(2)” for the video encoding format of image data to be recorded on the SD memory card.

- **JPEG:** Records still image data.
- **H.264(1):** Records video data (H.264(1)) in the MP4 video encoding format. Audio will not be recorded. The data is recorded in accordance with the settings of “H.264(1)” on the [JPEG/H.264] tab of the “Image/Audio” page.
- **H.264(2):** Records video data (H.264(2)) in the MP4 video encoding format. Audio will not be recorded. The data is recorded in accordance with the settings of “H.264(2)” on the [JPEG/H.264] tab of the “Image/Audio” page.
- **Default:** JPEG

### **Note**

- When recording the same data as the “Live” pages, it is recommended that the same settings be configured for both the “Live” pages and “Recording format”. When recording data other than the “Live” pages (for example, to reduce the data volume by lowering the image quality and image resolution), select image data other than the “Live” page from “Recording format”, and configure the settings for recording video data.
- When “H.264(1)” is selected, the settings for “H.264(1)” on the [JPEG/H.264] tab of the “Image/Audio” page will be changed to the settings for “H.264(1) & recording”. When “H.264(2)” is selected, the settings for “H.264(2)” on the [JPEG/H.264] tab of the “Image/Audio” page will be changed to the settings for “H.264(2) & recording”.
- When using the SD memory recording function of a Panasonic network disk recorder, select “JPEG” for “Recording format”.
- When the setting of “Recording format” is changed between “JPEG” and “H.264(1)” or “H.264(2)”, format the SD memory card. (→page 58)

## 10 Configure the basic settings of the camera [Basic]

- Due to the difference in file formats, the indication of remaining capacity of the SD memory card differs between the cases when "JPEG" is selected and when "H.264(1)" or "H.264(2)" is selected for "Recording format".
- When "H.264(1)" or "H.264(2)" is selected for "Recording format", the following settings in "H.264 recording"; Image capture size, Frame rate, Control time period, Max bit rate, Image quality, and Refresh interval will be read from the settings in "H.264(1)" or "H.264(2)".
- When "H.264(1)" or "H.264(2)" is selected for "Recording format", the settings of the following functions may be corrected.
  - When "Best effort" is selected for "Transmission priority", "Frame rate" is set.
  - When "High" or "Middle" is selected for "Burst tolerance level", "Low" is set.
  - When "2s", "3s", "4s" or "5s" is selected for "Refresh interval", "1s" is set.
  - When "3072kbps", "4096kbps", "6144kbps", "8192kbps", "10240kbps", "12288kbps" or "14336kbps" is selected for "Max bit rate", "2048kbps" is set.
- When the selection for "Recording format" is changed to "H.264(1)" or "H.264(2)", the setting of "Save logs" (the [Log] tab on the "Basic" page →page 69) is changed together.
- When "H.264(1)" or "H.264(2)" is selected for "Recording format", alarm images are saved in accordance with the settings of "Pre alarm" and "Post alarm (recording) duration" on the [Alarm] tab of the "Alarm" page.
- When "H.264(1)" or "H.264(2)" is selected for "Recording format", the name of the saved file will be given automatically.
- When "H.264(1)" or "H.264(2)" is selected for "Recording format", the number of users that can access the camera may be reduced.
- When "3 mega pixel [4:3]" is selected for "Image capture mode", "H.264(2)" is unavailable.

## Common

### [Remaining capacity notification]

When the E-mail notification function or the Panasonic alarm protocol function is used to provide notification of the remaining capacity of the SD memory card, select a level to be notified at from the following.

50%/ 20%/ 10%/ 5%/ 2%

- **Default:** 50%

### Note

- Notification will be provided each time the remaining capacity of the SD memory card reached the values above.  
For example, notification will be provided each time the remaining capacity reaches 50%, 20%, 10%, 5% and 2% when "50%" is selected. Notification may not always be made at the very moment when the remaining capacity of the SD memory card has reached each value.

### [Save trigger]

Select a trigger to save images on the SD memory card from the following.

- **FTP error:** Saves images when images have failed to transmit to the FTP server by the FTP periodic image transmission function. Available only for JPEG images.
- **Alarm input:** Saves images at an alarm occurrence.
- **Manual:** Saves images manually.
- **Schedule:** Saves images in accordance with the settings for "Schedule" (→page 169). Available only for H.264 images.
- **Default:** FTP error

### Note

- When "H.264(1)" or "H.264(2)" is selected for "Recording format", "FTP error" is unavailable.
- Select "FTP error" when images are to be transmitted to the FTP server at an alarm occurrence.

- When “Manual” or “Schedule” is selected when “H.264(1)” or “H.264(2)” is selected for “Recording format”, even if “Save logs” (→page 69) of “Alarm” is set to “On”, detected alarm logs are not recorded in the log list.
- When “JPEG” is selected for “Recording format”, “Schedule” is unavailable.
- When “3 mega pixel [4:3]” is selected for “Image capture mode”, “FTP error” is unavailable.

### [Overwrite]

Determine whether or not to overwrite when the remaining capacity of the SD memory card becomes insufficient.

This setting is available only when “Manual” or “Schedule” is selected for “Save trigger”.

- **On:** Overwrites when the remaining capacity of the SD memory card becomes insufficient. (The oldest image is the first to be overwritten.)
- **Off:** Stops saving images on the SD memory card when the SD memory card becomes full.
- **Default:** Off

### Note

- The overwrite setting will be as follows according to the “Save trigger” setting.
  - **FTP error:** Will not be overwritten.
  - **Alarm input:** Will be overwritten.
  - **Manual, Schedule:** Can be determined by selecting “On” or “Off” for “Overwrite”.

## JPEG recording

This setting is available only when “JPEG” is selected for “Recording format” of the SD memory card.

### [File name]

Enter the file name used for the image to be saved on the SD memory card. The file name will be as follows.

- **File name:** [“Entered file name” + “Time and date (year/ month/ day/ hour/ minute/ second)”] + “Serial number”
- **Available number of characters:** 1 - 8 characters
- **Unavailable characters:** " & \* / : ; < > ? \ |

### Note

- When “H.264(1)” or “H.264(2)” is selected for “Recording format”, the name of the saved file will be given automatically.
- When “FTP error” is selected for “Save trigger”, the file name entered for “File name” on the [FTP img. trans.] tab of the “Network” page will be used for the file name of the image saved on the SD memory card.
- When “3 mega pixel [4:3]” is selected for “Image capture mode”, “Pre alarm” cannot be used.

### [Image saving interval/Number of images to be saved(Pre alarm)] - [Image saving interval]

When “Alarm input” is selected for “Save trigger”, select a pre alarm interval (frame rate) of saving images on the SD memory card from the following.

0.1fps/0.2fps/0.33fps/0.5fps/1fps

- **Default:** 1fps

### Note

- When “1920x1080” is selected for the image capture size of the JPEG images to be saved, “1fps” cannot be selected.

### [Image saving interval/Number of images to be saved(Pre alarm)] - [Number of images to be saved]

Select a number of pre alarm images to be saved on the SD memory card from the following.

Off/1pic/2pics/3pics/4pics/5pics

- **Default:** Off

### **Note**

- When “1920x1080” is selected for the image capture size of the JPEG images to be saved, “4pics” and “5pics” cannot be selected.

### **[Image saving interval/Number of images to be saved(Post alarm)] - [Image saving interval]**

When “Alarm input” or “Manual” is selected for “Save trigger”, select an interval (frame rate) of saving images on the SD memory card from the following.

0.1fps/ 0.2fps/ 0.33fps/ 0.5fps/ 1fps

- **Default:** 1fps

### **Note**

- When “1920x1080” is selected for the image capture size of the JPEG images to be saved, “1fps” cannot be selected.

### **[Image saving interval/Number of images to be saved(Post alarm)] - [Number of images to be saved]**

Select a number of alarm images to be saved on the SD memory card from the following.

10pics/ 20pics/ 30pics/ 50pics/ 100pics/ 200pics/ 300pics/ 500pics/ 1000pics/ 2000pics/ 3000pics

- **Default:** 100pics

### **Note**

- When “H.264(1)” or “H.264(2)” is selected for “Recording format”, “Pre alarm” and “Post alarm” can be set on “H.264 recording” of [Alarm] tab.
- “Number of images to be saved” can be configured only when “Alarm input” is selected for “Save trigger”.

### **[Image capture size]**

When “Manual” is selected for “Save trigger” and “JPEG” is selected for “Recording format”, select the image capture size of the images to be saved on the SD memory card from the following.

**When “2 mega pixel [16:9]” is selected for “Image capture mode”**

1920x1080/640x360/320x180

**When “1.3 mega pixel [16:9]” is selected for “Image capture mode”**

1280x720/640x360/320x180

**When “1.3 mega pixel [4:3]” is selected for “Image capture mode”**

1280x960/VGA/QVGA

**When “3 mega pixel [4:3]” is selected for “Image capture mode”**

2048x1536 fix

- **Default:** 640x360

### **Note**

- When “FTP error” is selected for “Save trigger”, images will be saved with the image capture size selected on the [FTP img. trans.] tab of the “Network” page.
- When “H.264(1)” or “H.264(2)” is selected for “Recording format”, select the image capture size for “H.264 recording” - “Image capture size” on the [SD memory card] tab.
- When “Alarm input” is selected for “Save trigger”, images will be saved with the image capture size selected on the [Alarm] tab of the “Alarm” page.

## H.264 recording

This setting is available only when “H.264(1)” or “H.264(2)” is selected for “Recording format” of the SD memory card.

When the [Set] button is clicked after selecting “H.264(1)” or “H.264(2)” in “Recording format”, “H.264 recording” is displayed on the lower part of the screen.

### [Image capture size]

Select the image capture size from the following.

**When “2 mega pixel [16:9]” is selected for “Image capture mode”**

- H.264(1): 1920x1080/640x360/320x180
- H.264(2): 640x360/320x180

**When “1.3 mega pixel [16:9]” is selected for “Image capture mode”**

1280x720\*/640x360/320x180

**When “1.3 mega pixel [4:3]” is selected for “Image capture mode”**

1280x960\*/VGA/QVGA

**When “3 mega pixel [4:3]” is selected for “Image capture mode”**

1280x960 fix

### [Recording priority]

From the following, select a recording priority for H.264 images to be recorded.

- **Constant bit rate:** H.264 images will be recorded with the bit rate selected for “Max bit rate”.
- **Frame rate:** H.264 images will be recorded with the frame rate selected for “Frame rate\*”.
- **Advanced VBR:** H.264 images will be recorded with the frame rate selected for “Frame rate\*”. Images are recorded so that the average transmission rate during the period specified for “Control time period” becomes the bit rate selected for “Max bit rate”.
- **Default:** Frame rate

### [Frame rate\*]

Select the frame rate for images to be recorded from the following.

1fps/ 3fps/ 5fps\*/ 7.5fps\*/ 10fps\*/ 12fps\*/ 15fps\*/ 20fps\*/ 30fps\*

- **Default:** 30fps\*

### Note

- When “Frame rate” or “Advanced VBR” is selected for “Recording priority”, this setting is available.
- “Frame rate\*” is restricted by “Max bit rate”. For this reason, the frame rate may be lower than the specified value when any value marked with an asterisk (\*) is selected.

### [Control time period]

Select the time period that the bit rate of images to be recorded will be controlled for from the following. Images are recorded so that the average bit rate during the selected period becomes the bit rate selected for “Max bit rate”.

1h/6h/24h/1week

**Default:** 24h

### Note

- This setting is only available when “Advanced VBR” is selected for “Recording priority”.

### [Max bit rate]

Select the bit rate for images to be recorded from the following.

64kbps/ 128kbps/ 256kbps/ 384kbps/ 512kbps/ 768kbps/ 1024kbps/ 1536kbps/ 2048kbps

- **Default:**
  - H.264(1): 2048kbps
  - H.264(2): 1536kbps

### [Image quality]

Select the quality for H.264 images to be recorded from the following.  
Low(Motion priority)/ Normal/ Fine(Image quality priority)

- **Default:** Normal

#### **Note**

- When “Constant bit rate” is selected for “Recording priority”, this setting is available.

### [Refresh interval]

Select an interval (I-frame interval; 0.2 - 1 second) to refresh the H.264 images to be recorded from the following.

0.2s/ 0.25s/ 0.33s/ 0.5s/ 1s

- **Default:** 1s

### [Maximum file size]

Select the maximum file size for recorded H.264 files (MP4 format).

2MB/20MB

**Default:** 20MB

### [Audio recording]

Select whether or not to save audio data at the same time as recording H.264 images.

- **On:** Saves audio data.
- **Off:** Does not save audio data.

**Default:** Off

#### **Note**

- The audio data format used when recording audio is AAC.
- “Audio recording” is only available when “20MB” is selected for “Maximum file size”.
- “Audio recording” is only available when “Mic input” is selected for “Audio mode” on the [Audio] tab of the “Image/Audio” page. (→page 102)
- Even if audio is recorded with images, only the images are played when data is played on the “Playback” page. Recorded audio must be downloaded in order to be played back. (→page 37)
- The volume used when saving audio data can be changed in “Mic input volume (Camera to PC)” on the [Audio] tab of the “Image/Audio” page. (→ page 102)

## SD memory card information

### [Remaining capacity]

Total capacity and remaining capacity of the SD memory card will be displayed.

Depending on the status of the SD memory card, the size indications will differ as follows.

| Indication      | Description                                                                           |
|-----------------|---------------------------------------------------------------------------------------|
| -----KB/-----KB | No SD memory card is inserted. Failed to obtain available capacity due to error, etc. |
| *****KB/*****KB | The SD memory card is unformatted, or locked, etc.                                    |

#### **Note**

- When “Off” is selected for “Overwrite” and the available size of the SD memory card has reached “0 KB”, images will not be saved on the SD memory card. When the notification function is on, a notification E-mail will be sent to the registered addresses when the SD memory card becomes full. (→page 115, page 117)

**[Format]**

To format the SD memory card, click the [Execute] button.

**IMPORTANT**

- Before formatting the SD memory card, it is necessary to select “Use” for “SD memory card” on the [SD memory card] tab of the “Basic” page (→page 51) and “Off” for “FTP periodic image transmission” on the [FTP img. trans.] tab of the “Network” page (→page 165).
- Use the SD memory card after formatting it using the [SD memory card] tab. If using the SD memory card that has not been formatted on the [SD memory card] tab, the following functions may not work correctly.
  - Save/obtain images that failed to transmit to the FTP server using the FTP periodic image transmission function
  - Save/obtain alarm images
  - Save/obtain images saved manually
  - Save/obtain images in accordance with the schedule settings
  - Save/obtain the alarm logs, the manual/schedule logs, the FTP error logs and the system logs
  - Save/obtain images recorded using the SD memory recording function of Panasonic network disk recorder
  - Play/download images on the SD memory card
- When an SD memory card is formatted while another user is in operation, the operation will be canceled.
- It is impossible to access the SD memory card during the process of formatting.
- All data saved on the SD memory card will be deleted when the SD memory card is formatted.
- Do not turn off the power of the camera during the process of formatting.
- When the setting of “Recording format” has been changed, it is recommended to format the SD memory card.
- After formatting the SD memory card, available size may be smaller than the total size since the default directory is automatically created in the SD memory card.
- Recommended SD memory card (SD Speed Class 4 or higher)  
Manufactured by Panasonic (option)
  - SDXC memory card: 64 GB
  - SDHC memory card: 4 GB, 8 GB, 16 GB, 32 GB
  - SD memory card: 2 GB (except miniSD card and microSD card)
- Use an SD memory card formatted compliant with the SD memory card standard at the default.

**SD memory card images****[Access img.]**

Images on the SD memory card can be obtained. Click the [Execute] button. Refer to page 60 for how to access images.

---

<sup>\*1</sup> When “H.264(1)” or “H.264(2)” is selected for “Recording format”, the image capture size that can be selected depends on the image capture size selected for “H.264(1)” or “H.264(2)” in the [JPEG/H.264] tab of the “Image/Audio” page. (→page 78)

## 10.4 Access copy images saved on the SD memory card onto the PC [SD memory card images]

Click the [SD memory card] tab on the “Basic” page. (→page 40, page 42)


The following are descriptions of how to copy images saved on the SD memory card onto the PC. It is necessary in advance to select “Allow” for “FTP access to camera” on the [Network] tab of the “Network” page.

(→page 136)

### IMPORTANT

- It may sometimes be impossible to operate when another user is accessing images on the SD memory card. In this case, retry later.
- Depending on the settings of a proxy server or a firewall, images may not be obtained via a network. In this case, refer to the network administrator.

1. Click the [Execute] button of “Access img.”.  
→ The user authentication window will be displayed.

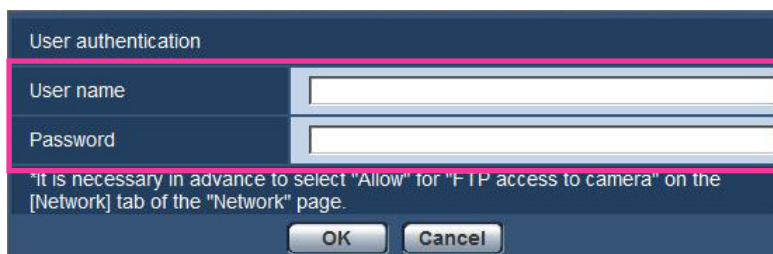A screenshot of a 'User authentication' dialog box. It has a dark blue header with the title 'User authentication'. Below the header, there are two input fields: 'User name' and 'Password'. The 'Password' field has a small eye icon to its right. Below the input fields, there is a line of text: 'It is necessary in advance to select "Allow" for "FTP access to camera" on the [Network] tab of the "Network" page.' At the bottom of the dialog, there are two buttons: 'OK' and 'Cancel'.

2. Click the [OK] button after entering the user name and password of the camera administrator.  
→ The folder in which images are to be saved will be displayed.

### Note

- When the FTP server of the camera is logged to access images, the SD memory card is assigned to Drive B.  
Images are saved in different directories according to “Save trigger”.  
Move to the directory corresponding to the desired images and copy them.  
Refer to page 199 for further information about the directory structure.

## Possible number of JPEG images that can be saved on the SD memory card (as indications)

### IMPORTANT

- The numbers on the following table are just indications. They are not actual numbers of images that can be saved on the SD memory card. Numbers will differ according to photographic subject to be saved.

### Note

- All values are approximate.

### Image capture size: 2048x1536

| Capacity of SD memory card | Image quality |        |        |        |        |
|----------------------------|---------------|--------|--------|--------|--------|
|                            | 0 Super fine  | 1 Fine | 2      | 3      | 4      |
| 64 GB                      | 44,800        | 57,600 | 70,400 | 83,200 | 96,000 |
| 32 GB                      | 22,400        | 28,800 | 35,200 | 41,600 | 48,000 |
| 16 GB                      | 11,200        | 14,400 | 17,600 | 20,800 | 24,000 |
| 8 GB                       | 5,600         | 7,200  | 8,800  | 10,400 | 12,000 |
| 4 GB                       | 2,800         | 3,600  | 4,400  | 5,200  | 6,000  |
| 2 GB                       | 1,400         | 1,800  | 2,200  | 2,600  | 3,000  |

| Capacity of SD memory card | Image quality |         |         |         |         |
|----------------------------|---------------|---------|---------|---------|---------|
|                            | 5 Normal      | 6       | 7       | 8       | 9 Low   |
| 64 GB                      | 121,600       | 166,400 | 192,000 | 217,600 | 243,200 |
| 32 GB                      | 60,800        | 83,200  | 96,000  | 108,800 | 121,600 |
| 16 GB                      | 30,400        | 41,600  | 48,000  | 54,400  | 60,800  |
| 8 GB                       | 15,200        | 20,800  | 24,000  | 27,200  | 30,400  |
| 4 GB                       | 7,600         | 10,400  | 12,000  | 13,600  | 15,200  |
| 2 GB                       | 3,800         | 5,200   | 6,000   | 6,800   | 7,600   |

## 10 Configure the basic settings of the camera [Basic]

### Image capture size: 1920x1080

| Capacity of SD memory card | Image quality |         |         |         |         |
|----------------------------|---------------|---------|---------|---------|---------|
|                            | 0 Super fine  | 1 Fine  | 2       | 3       | 4       |
| 64 GB                      | 89,600        | 115,200 | 147,200 | 160,000 | 192,000 |
| 32 GB                      | 44,800        | 57,600  | 73,600  | 80,000  | 96,000  |
| 16 GB                      | 22,400        | 28,800  | 36,800  | 40,000  | 48,000  |
| 8 GB                       | 11,200        | 14,400  | 18,400  | 20,000  | 24,000  |
| 4 GB                       | 5,600         | 7,200   | 9,200   | 10,000  | 12,000  |
| 2 GB                       | 2,800         | 3,600   | 4,600   | 5,000   | 6,000   |

| Capacity of SD memory card | Image quality |         |         |         |         |
|----------------------------|---------------|---------|---------|---------|---------|
|                            | 5 Normal      | 6       | 7       | 8       | 9 Low   |
| 64 GB                      | 268,800       | 345,600 | 416,000 | 448,000 | 480,000 |
| 32 GB                      | 134,400       | 172,800 | 208,000 | 224,000 | 240,000 |
| 16 GB                      | 67,200        | 86,400  | 104,000 | 112,000 | 120,000 |
| 8 GB                       | 33,600        | 43,200  | 52,000  | 56,000  | 60,000  |
| 4 GB                       | 16,800        | 21,600  | 26,000  | 28,000  | 30,000  |
| 2 GB                       | 8,400         | 10,800  | 13,000  | 14,000  | 15,000  |

**Image capture size: 1280x960**

| Capacity of SD memory card | Image quality |         |         |         |         |
|----------------------------|---------------|---------|---------|---------|---------|
|                            | 0 Super fine  | 1 Fine  | 2       | 3       | 4       |
| 64 GB                      | 128,000       | 160,000 | 192,000 | 224,000 | 256,000 |
| 32 GB                      | 64,000        | 80,000  | 96,000  | 112,000 | 128,000 |
| 16 GB                      | 32,000        | 40,000  | 48,000  | 56,000  | 64,000  |
| 8 GB                       | 16,000        | 20,000  | 24,000  | 28,000  | 32,000  |
| 4 GB                       | 8,000         | 10,000  | 12,000  | 14,000  | 16,000  |
| 2 GB                       | 4,000         | 5,000   | 6,000   | 7,000   | 8,000   |

| Capacity of SD memory card | Image quality |         |         |         |         |
|----------------------------|---------------|---------|---------|---------|---------|
|                            | 5 Normal      | 6       | 7       | 8       | 9 Low   |
| 64 GB                      | 320,000       | 448,000 | 512,000 | 576,000 | 640,000 |
| 32 GB                      | 160,000       | 224,000 | 256,000 | 288,000 | 320,000 |
| 16 GB                      | 80,000        | 112,000 | 128,000 | 144,000 | 160,000 |
| 8 GB                       | 40,000        | 56,000  | 64,000  | 72,000  | 80,000  |
| 4 GB                       | 20,000        | 28,000  | 32,000  | 36,000  | 40,000  |
| 2 GB                       | 10,000        | 14,000  | 16,000  | 18,000  | 20,000  |

**Image capture size: 1280x720**

| Capacity of SD memory card | Image quality |         |         |         |         |
|----------------------------|---------------|---------|---------|---------|---------|
|                            | 0 Super fine  | 1 Fine  | 2       | 3       | 4       |
| 64 GB                      | 135,600       | 204,800 | 256,000 | 281,600 | 332,800 |
| 32 GB                      | 76,800        | 102,400 | 128,000 | 140,800 | 166,400 |
| 16 GB                      | 38,400        | 51,200  | 64,000  | 70,400  | 83,200  |
| 8 GB                       | 19,200        | 25,600  | 32,000  | 35,200  | 41,600  |
| 4 GB                       | 9,600         | 12,800  | 16,000  | 17,600  | 20,800  |
| 2 GB                       | 4,800         | 6,400   | 8,000   | 8,800   | 10,400  |

| Capacity of SD memory card | Image quality |         |         |         |         |
|----------------------------|---------------|---------|---------|---------|---------|
|                            | 5 Normal      | 6       | 7       | 8       | 9 Low   |
| 64 GB                      | 460,800       | 588,800 | 716,800 | 768,000 | 819,200 |
| 32 GB                      | 230,400       | 294,400 | 358,400 | 384,000 | 409,600 |
| 16 GB                      | 115,200       | 147,200 | 179,200 | 192,000 | 204,800 |
| 8 GB                       | 57,600        | 73,600  | 89,600  | 96,000  | 102,400 |
| 4 GB                       | 28,800        | 36,800  | 44,800  | 48,000  | 51,200  |
| 2 GB                       | 14,400        | 18,400  | 22,400  | 24,000  | 25,600  |

**Image capture size: VGA**

| Capacity of SD memory card | Image quality |         |         |         |         |
|----------------------------|---------------|---------|---------|---------|---------|
|                            | 0 Super fine  | 1 Fine  | 2       | 3       | 4       |
| 64 GB                      | 320,000       | 448,000 | 512,000 | 576,000 | 640,000 |
| 32 GB                      | 160,000       | 224,000 | 256,000 | 288,000 | 320,000 |
| 16 GB                      | 80,000        | 112,000 | 128,000 | 144,000 | 160,000 |
| 8 GB                       | 40,000        | 56,000  | 64,000  | 72,000  | 80,000  |
| 4 GB                       | 20,000        | 28,000  | 32,000  | 36,000  | 40,000  |
| 2 GB                       | 10,000        | 14,000  | 16,000  | 18,000  | 20,000  |

| Capacity of SD memory card | Image quality |         |         |         |           |
|----------------------------|---------------|---------|---------|---------|-----------|
|                            | 5 Normal      | 6       | 7       | 8       | 9 Low     |
| 64 GB                      | 704,000       | 832,000 | 896,000 | 960,000 | 1,024,000 |
| 32 GB                      | 352,000       | 416,000 | 448,000 | 480,000 | 512,000   |
| 16 GB                      | 176,000       | 208,000 | 224,000 | 240,000 | 256,000   |
| 8 GB                       | 88,000        | 104,000 | 112,000 | 120,000 | 128,000   |
| 4 GB                       | 44,000        | 52,000  | 56,000  | 60,000  | 64,000    |
| 2 GB                       | 22,000        | 26,000  | 28,000  | 30,000  | 32,000    |

## 10 Configure the basic settings of the camera [Basic]

### Image capture size: 640x360

| Capacity of SD memory card | Image quality |         |         |         |         |
|----------------------------|---------------|---------|---------|---------|---------|
|                            | 0 Super fine  | 1 Fine  | 2       | 3       | 4       |
| 64 GB                      | 384,000       | 563,200 | 665,600 | 716,800 | 819,200 |
| 32 GB                      | 192,000       | 281,600 | 332,800 | 358,400 | 409,600 |
| 16 GB                      | 96,000        | 140,800 | 166,400 | 179,200 | 204,800 |
| 8 GB                       | 48,000        | 70,400  | 83,200  | 89,600  | 102,400 |
| 4 GB                       | 24,000        | 35,200  | 41,600  | 44,800  | 51,200  |
| 2 GB                       | 12,000        | 17,600  | 20,800  | 22,400  | 25,600  |

| Capacity of SD memory card | Image quality |           |           |           |           |
|----------------------------|---------------|-----------|-----------|-----------|-----------|
|                            | 5 Normal      | 6         | 7         | 8         | 9 Low     |
| 64 GB                      | 998,400       | 1,075,200 | 1,254,400 | 1,280,000 | 1,305,600 |
| 32 GB                      | 499,200       | 537,600   | 627,200   | 640,000   | 652,800   |
| 16 GB                      | 249,600       | 268,800   | 313,600   | 320,000   | 326,400   |
| 8 GB                       | 124,800       | 134,400   | 156,800   | 160,000   | 163,200   |
| 4 GB                       | 62,400        | 67,200    | 78,400    | 80,000    | 81,600    |
| 2 GB                       | 31,200        | 33,600    | 39,200    | 40,000    | 40,800    |

**Image capture size: QVGA**

| Capacity of SD memory card | Image quality |         |         |         |         |
|----------------------------|---------------|---------|---------|---------|---------|
|                            | 0 Super fine  | 1 Fine  | 2       | 3       | 4       |
| 64 GB                      | 768,000       | 832,000 | 864,000 | 896,000 | 960,000 |
| 32 GB                      | 384,000       | 416,000 | 432,000 | 448,000 | 480,000 |
| 16 GB                      | 192,000       | 208,000 | 216,000 | 224,000 | 240,000 |
| 8 GB                       | 96,000        | 104,000 | 108,000 | 112,000 | 120,000 |
| 4 GB                       | 48,000        | 52,000  | 54,000  | 56,000  | 60,000  |
| 2 GB                       | 24,000        | 26,000  | 27,000  | 28,000  | 30,000  |

| Capacity of SD memory card | Image quality |           |           |           |           |
|----------------------------|---------------|-----------|-----------|-----------|-----------|
|                            | 5 Normal      | 6         | 7         | 8         | 9 Low     |
| 64 GB                      | 1,024,000     | 1,152,000 | 1,216,000 | 1,280,000 | 1,344,000 |
| 32 GB                      | 512,000       | 576,000   | 608,000   | 640,000   | 672,000   |
| 16 GB                      | 256,000       | 288,000   | 304,000   | 320,000   | 336,000   |
| 8 GB                       | 128,000       | 144,000   | 152,000   | 160,000   | 168,000   |
| 4 GB                       | 64,000        | 72,000    | 76,000    | 80,000    | 84,000    |
| 2 GB                       | 32,000        | 36,000    | 38,000    | 40,000    | 42,000    |

## 10 Configure the basic settings of the camera [Basic]

### Image capture size: 320x180

| Capacity of SD memory card | Image quality |           |           |           |           |
|----------------------------|---------------|-----------|-----------|-----------|-----------|
|                            | 0 Super fine  | 1 Fine    | 2         | 3         | 4         |
| 64 GB                      | 921,600       | 1,049,600 | 1,126,400 | 1,152,000 | 1,228,800 |
| 32 GB                      | 460,800       | 524,800   | 563,200   | 576,000   | 614,400   |
| 16 GB                      | 230,400       | 262,400   | 281,600   | 288,000   | 307,200   |
| 8 GB                       | 115,200       | 131,200   | 140,800   | 144,000   | 153,600   |
| 4 GB                       | 57,600        | 65,600    | 70,400    | 72,000    | 76,800    |
| 2 GB                       | 28,800        | 32,800    | 35,200    | 36,000    | 38,400    |

| Capacity of SD memory card | Image quality |           |           |           |           |
|----------------------------|---------------|-----------|-----------|-----------|-----------|
|                            | 5 Normal      | 6         | 7         | 8         | 9 Low     |
| 64 GB                      | 1,459,200     | 1,510,400 | 1,587,200 | 1,689,600 | 1,715,200 |
| 32 GB                      | 729,600       | 755,200   | 793,600   | 844,800   | 857,600   |
| 16 GB                      | 364,800       | 377,600   | 396,800   | 422,400   | 428,800   |
| 8 GB                       | 182,400       | 188,800   | 198,400   | 211,200   | 214,400   |
| 4 GB                       | 91,200        | 94,400    | 99,200    | 105,600   | 107,200   |
| 2 GB                       | 45,600        | 47,200    | 49,600    | 52,800    | 53,600    |

## 10.5 Configure the settings relating to the logs [Log]

Click the [Log] tab on the “Basic” page. (→page 40, page 42)

The settings relating to the log list can be configured in this section.

| Category        | Save logs                                                     | Name of the destination directory for downloaded images |
|-----------------|---------------------------------------------------------------|---------------------------------------------------------|
| Alarm           | <input checked="" type="radio"/> On <input type="radio"/> Off | C:\nwcaml                                               |
| Manual/Schedule | <input checked="" type="radio"/> On <input type="radio"/> Off | C:\nwcaml                                               |
| FTP error       | <input checked="" type="radio"/> On <input type="radio"/> Off | C:\nwcaml                                               |

**Set**

### Alarm

Settings for the alarm log list can be performed.

#### [Save logs]

Select “On” or “Off” to determine whether to save the alarm logs.

- **On:** Alarm logs will be saved.
- **Off:** Alarm logs will not be saved.
- **Default:** On

#### Note

- When “Recording format” is set to “H.264(1)” or “H.264(2)”, “Save logs” is set to “On” or “Off” depending on the setting of “Save trigger”.
- When “H.264(1)” or “H.264(2)” is selected for “Recording format” and when “Alarm input” is selected for “Save trigger”, only alarm logs will be saved.

#### [Name of the destination directory for downloaded images]

Enter the name of the destination directory to which images associated with the logs are to be downloaded. For example, enter “C:\alarm” to designate the folder “alarm” under drive C.

- **Available number of characters:** 3 - 128 characters
- **Available characters:** Alphanumeric characters, the slash (/), the backslash (\), the colon (:), and the underscore (\_).

### Manual/Schedule

Configure the settings relating to manual saving or schedule saving of the log list.

Select “On” or “Off” and designate the destination folder in the same manner as for “Alarm”.

- **Default:** On

### **Note**

- When “Recording format” is set to “H.264(1)” or “H.264(2)”, “Save logs” is set to “On” or “Off” depending on the setting of “Save trigger”.
- Schedule saving is available only when “H.264(1)” or “H.264(2)” is selected for “Recording format”.

## **FTP error**

Perform the settings for the FTP error log list.

Select “On” or “Off” and designate the destination folder in the same manner as for “Alarm”.

- **Default:** On

### **IMPORTANT**

- When “Name w/o time&date” is selected for “File name” on the [FTP img. trans.] tab on the “Network” page, FTP error log and associated images will not be saved. To save them, select “Name w/time&date”. (→page 164)

### **Note**

- When “H.264(1)” or “H.264(2)” is selected for “Recording format”, “FTP error” is unavailable.
- When “3 mega pixel [4:3]” is selected for “Image capture mode”, “FTP error” is unavailable.

## 10.5.1 How the logs and images are saved depending on the settings for “Alarm”

| [Log] tab        | [SD memory card] tab |                          | Logs and associated images                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|------------------|----------------------|--------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Alarm: Save logs | SD memory card       | Save trigger             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| On               | Use                  | Alarm input              | <ul style="list-style-type: none"> <li><b>Logs:</b> Up to 5,000 logs will be kept. When more than 5,000 logs are filed, the older logs will be overwritten by the newer logs. If “JPEG” is set for “Recording format” when more than 5,000 logs are filed, images associated with the old logs are deleted. If “H.264(1)” or “H.264(2)” is set for “Recording format” when more than 5,000 logs are filed, the oldest images are overwritten, regardless of their association with the logs.</li> <li><b>Images:</b> Will be saved. When the remaining capacity of the SD memory card becomes insufficient, the older images will be overwritten by the newer images.</li> </ul> |
|                  |                      | Other than “Alarm input” | <ul style="list-style-type: none"> <li><b>Logs:</b> Up to 5,000 logs will be kept. When more than 5,000 logs are filed, the older logs will be overwritten by the newer logs.</li> <li><b>Images:</b> Will not be saved.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|                  | Not use              | -                        | <ul style="list-style-type: none"> <li><b>Logs:</b> Up to 1,000 logs will be kept. When more than 1,000 logs are filed, the older logs will be overwritten by the newer logs. In this case, the oldest log is the first to be overwritten. When the power of the camera is turned off, logs will be deleted.</li> <li><b>Images:</b> Will not be saved.</li> </ul>                                                                                                                                                                                                                                                                                                               |
| Off              | Use                  | Alarm input              | <ul style="list-style-type: none"> <li><b>Logs:</b> Will not be saved.</li> <li><b>Images:</b> Will be saved. When the remaining capacity of the SD memory card becomes insufficient, the older images will be overwritten by the newer images.<br/>*To display images on the SD memory card, it is necessary to copy them onto the PC first. (→page 60)</li> </ul>                                                                                                                                                                                                                                                                                                              |
|                  |                      | Other than “Alarm input” | <ul style="list-style-type: none"> <li><b>Logs:</b> Will not be saved.</li> <li><b>Images:</b> Will not be saved.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|                  | Not use              | -                        | <ul style="list-style-type: none"> <li><b>Logs:</b> Will not be saved.</li> <li><b>Images:</b> Will not be saved.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |

### Note

- If “H.264(1)” or “H.264(2)” is selected for “Recording format”, and “Alarm input” is selected for “Save trigger”, “On” will be set for “Alarm” - “Save logs” on the [Log] tab. In this case, “Off” will be set for “Manual/Schedule” - “Save logs” on the [Log] tab.

## 10.5.2 How the logs and images are saved depending on the settings for “Manual/Schedule”

| [Log] tab                         | [SD memory card] tab |                                     |           | Logs and associated images                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|-----------------------------------|----------------------|-------------------------------------|-----------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Manual/<br>Schedule:<br>Save logs | SD memory<br>card    | Save trigger                        | Overwrite |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| On                                | Use                  | Manual/<br>Schedule                 | On        | <ul style="list-style-type: none"> <li>• <b>Logs:</b> Up to 5,000 logs will be kept. When more than 5,000 logs are filed, the older logs will be overwritten by the newer logs. If “JPEG” is set for “Recording format” when more than 5,000 logs are filed, images associated with the old logs are deleted. If “H.264(1)” or “H.264(2)” is set for “Recording format” when more than 5,000 logs are filed, the oldest images are overwritten, regardless of their association with the logs.</li> <li>• <b>Images:</b> Will be saved. When the remaining capacity of the SD memory card becomes insufficient, the older images will be overwritten by the newer images.</li> </ul> |
|                                   |                      |                                     | Off       | <ul style="list-style-type: none"> <li>• <b>Logs:</b> Up to 5,000 logs will be kept. When more than 5,000 logs are filed, no log will be filed newly anymore. Even when available capacity of the SD memory card ran out and it is not enough to save images, logs will be kept on being filed until it reaches 5,000 logs.</li> <li>• <b>Images:</b> Will be saved. When available capacity of the SD memory card ran out, saving of images will become impossible. Even when available capacity of the SD memory card is enough, images associated with logs will be kept on being saved until number of filed logs reaches 5,000.</li> </ul>                                      |
|                                   |                      | Other than<br>“Manual/<br>Schedule” | -         | <ul style="list-style-type: none"> <li>• <b>Logs:</b> Will not be saved.</li> <li>• <b>Images:</b> Will not be saved.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|                                   | Not use              | -                                   | -         | <ul style="list-style-type: none"> <li>• <b>Logs:</b> Will not be saved.</li> <li>• <b>Images:</b> Will not be saved.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |

| [Log] tab                         | [SD memory card] tab |                                     |           | Logs and associated images                                                                                                                                                                                                                                                                                                                                              |
|-----------------------------------|----------------------|-------------------------------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Manual/<br>Schedule:<br>Save logs | SD memory<br>card    | Save trigger                        | Overwrite |                                                                                                                                                                                                                                                                                                                                                                         |
| Off                               | Use                  | Manual/<br>Schedule                 | On        | <ul style="list-style-type: none"> <li>• <b>Logs:</b> Will not be saved.</li> <li>• <b>Images:</b> Will be saved. When the remaining capacity of the SD memory card becomes insufficient, the older images will be overwritten by the newer images.<br/>*To display images on the SD memory card, it is necessary to copy them onto the PC first. (→page 60)</li> </ul> |
|                                   |                      |                                     | Off       | <ul style="list-style-type: none"> <li>• <b>Logs:</b> Will not be saved.</li> <li>• <b>Images:</b> Will be saved. When available capacity of the SD memory card ran out, saving of images will become impossible.<br/>*To display images on the SD memory card, it is necessary to copy them onto the PC first. (→page 60)</li> </ul>                                   |
|                                   |                      | Other than<br>“Manual/<br>Schedule” | -         | <ul style="list-style-type: none"> <li>• <b>Logs:</b> Will not be saved.</li> <li>• <b>Images:</b> Will not be saved.</li> </ul>                                                                                                                                                                                                                                        |
|                                   | Not use              | -                                   | -         | <ul style="list-style-type: none"> <li>• <b>Logs:</b> Will not be saved.</li> <li>• <b>Images:</b> Will not be saved.</li> </ul>                                                                                                                                                                                                                                        |

**Note**

- If “H.264(1)” or “H.264(2)” is selected for “Recording format”, and “Manual” or “Schedule” is selected for “Save trigger”, “On” will be set for “Manual/Schedule” - “Save logs” on the [Log] tab. In this case, “Off” will be set for “Alarm” - “Save logs” on the [Log] tab.

### 10.5.3 How the logs and images are saved depending on the settings for “FTP error”

| [Log] tab               | [SD memory card] tab |                        | Logs and associated images                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|-------------------------|----------------------|------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| FTP error:<br>Save logs | SD memory<br>card    | Save trigger           |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| On                      | Use                  | FTP error              | <ul style="list-style-type: none"> <li>• <b>Logs:</b> Up to 5,000 logs will be kept. When more than 5,000 logs are filed, no log will be filed newly anymore. Even when available capacity of the SD memory card ran out and it is not enough to save images, logs will be kept on being filed until it reaches 5,000 logs.</li> <li>• <b>Images:</b> Will be saved. When available capacity of the SD memory card ran out, saving of images will become impossible. Even when available capacity of the SD memory card is enough, images associated with logs will be kept on being saved until number of filed logs reaches 5,000.</li> </ul> |
|                         |                      | Other than “FTP error” | <ul style="list-style-type: none"> <li>• <b>Logs:</b> Will not be saved.</li> <li>• <b>Images:</b> Will not be saved.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|                         | Not use              | -                      | <ul style="list-style-type: none"> <li>• <b>Logs:</b> Will not be saved.</li> <li>• <b>Images:</b> Will not be saved.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Off                     | Use                  | FTP error              | <ul style="list-style-type: none"> <li>• <b>Logs:</b> Will not be saved.</li> <li>• <b>Images:</b> Will be saved. When available capacity of the SD memory card ran out, saving of images will become impossible.<br/>*To display images on the SD memory card, it is necessary to copy them onto the PC first. (→page 60)</li> </ul>                                                                                                                                                                                                                                                                                                           |
|                         |                      | Other than “FTP error” | <ul style="list-style-type: none"> <li>• <b>Logs:</b> Will not be saved.</li> <li>• <b>Images:</b> Will not be saved.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|                         | Not use              | -                      | <ul style="list-style-type: none"> <li>• <b>Logs:</b> Will not be saved.</li> <li>• <b>Images:</b> Will not be saved.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |

#### Note

- FTP error logs are only saved when “JPEG” is selected for “Recording format”.

# 11 Configure the settings relating to images and audio [Image/Audio]

The settings relating to JPEG and H.264 images such as the settings of image quality, audio, etc. can be configured on this page.

The “Image/Audio” page has the [JPEG/H.264] tab, the [Image quality] tab and the [Audio] tab.

## 11.1 Configure the settings relating to the image capture mode [JPEG/H.264]

Click the [JPEG/H.264] tab on the “Image/Audio” page. (→page 40, page 42)



### [Image capture mode]

Select an image capture mode from the following.

2 mega pixel [16:9]/1.3 mega pixel [16:9]/1.3 mega pixel [4:3]/3 mega pixel [4:3]

- **Default:** 2 mega pixel [16:9]

### IMPORTANT

- The positions of areas may move out of alignment when the “Image capture mode” setting is changed when the following area settings are configured. Therefore we recommend that you configure each area setting after configuring the “Image capture mode”.
  - mask area (→page 92)
  - privacy zone (→page 97)
  - VMD area (→page 110)
  - VIQS area (→page 99)
  - Cropping outlines (→page 120)
  - Picture in picture cropping area (→page 121)

### Note

- When “On” is selected for “VIQS” and the setting value for the aspect ratio is changed from “4:3” to “16:9”, make sure that the VIQS setting value does not exceed the maximum designated range.
- When “3 mega pixel [4:3]” is selected, the following functions become unavailable.
  - “Pre alarm” for JPEG recording
  - “Image quality” for JPEG (the quality becomes “Quality1”)
  - H.264(2)
  - “Alarm image attachment” for E-mail notification
  - “Alarm image FTP transmission” for alarm
  - “FTP periodic image transmission” for periodic FTP transmission
  - “Cropping”
  - “Picture in picture”
  - “Priority stream”

## 11.2 Configure the settings relating to JPEG images [JPEG/H.264]

Click the [JPEG/H.264] tab on the “Image/Audio” page. (→page 40, page 42)

### JPEG

Configure the settings such as “Refresh interval (JPEG)\*”, “Image capture size” and “Image quality” on this section. Refer to page 78 for further information about the settings relating to H.264 images.

#### “Live” page (Initial display)

Configure the settings relating to the JPEG images displayed on the “Live” page.

#### [Refresh interval (JPEG)\*]

Select an interval to refresh the displayed JPEG image from the following.

0.1fps/ 0.2fps/ 0.33fps/ 0.5fps/ 1fps/ 2fps/ 3fps/ 5fps/ 6fps\*/ 10fps\*/ 12fps\*/ 15fps\*/ 30fps\*

- **Default:** 5fps

#### Note

- When “On” is selected for “H.264 transmission”, the refresh interval may be longer than the set value when any value with an asterisk (\*) on the right is selected.
- Depending on factors such as the network environment, the resolution, the image quality, or the number of computers concurrently accessing the camera, the transmission interval may be longer than the set value.
- If images are not delivered in the specified transmission interval, you can make the images be delivered closer to the specified interval by lowering the resolution or image quality.

#### [Image capture size]

Select the image capture size to display the JPEG image on the “Live” page for the first time.

**When “2 mega pixel [16:9]” is selected for “Image capture mode”**

1920x1080/640x360/320x180

**When “1.3 mega pixel [16:9]” is selected for “Image capture mode”**

1280x720/640x360/320x180

**When “1.3 mega pixel [4:3]” is selected for “Image capture mode”**

1280x960/VGA/QVGA

**When “3 mega pixel [4:3]” is selected for “Image capture mode”**

2048x1536 fix

- **Default: 1920x1080**

### **[Image quality]**

Select the image quality of JPEG images displayed initially on the “Live” page.

- **Default:** Quality1

### **[Image quality setting]**

Select two types of image quality of JPEG images for each image capture size.

0 Super fine/ 1 Fine/ 2/ 3/ 4/ 5 Normal/ 6/ 7/ 8/ 9 Low

- **Default:**
  - Quality1: 5 Normal
  - Quality2: 8

The setting for “Quality1” is activated for FTP periodic image transmission, file attachment to E-mails, and SD memory recording of JPEG images.

### **Note**

- When the resolution is “2048x1536”, “Quality1” is fixed.

## 11.3 Configure the settings relating to H.264 images [JPEG/H.264]

Click the [JPEG/H.264] tab on the “Image/Audio” page. (→page 40, page 42)

## 11 Configure the settings relating to images and audio [Image/Audio]

Configure the settings relating to H.264 image such as “Max bit rate (per client)”, “Image capture size”, “Image quality”, etc. in this section. Refer to page 76 for the settings relating to JPEG images.

|                                                        |                                                                   |
|--------------------------------------------------------|-------------------------------------------------------------------|
| H.264(1)                                               |                                                                   |
| H.264 transmission                                     | <input checked="" type="radio"/> On <input type="radio"/> Off     |
| Internet mode (over HTTP)                              | <input type="radio"/> On <input checked="" type="radio"/> Off     |
| Image capture size                                     | 1920x1080 ▾                                                       |
| Transmission priority                                  | Frame rate ▾                                                      |
| Frame rate*                                            | 30fps * ▾                                                         |
| Burst tolerance level                                  | Low ▾                                                             |
| Control time period                                    | 24h ▾                                                             |
| Max bit rate (per client) *                            | Max 4096kbps * ▾ - Min 4096kbps * ▾                               |
| Image quality                                          | Normal ▾                                                          |
| Refresh interval                                       | 1s ▾                                                              |
| Transmission type                                      | Unicast port (AUTO) ▾                                             |
| Unicast port1(Image)                                   | 32004 (1024-50000)                                                |
| Unicast port2(Audio)                                   | 33004 (1024-50000)                                                |
| Multicast address                                      | 239.192.0.20                                                      |
| Multicast port                                         | 37004 (1024-50000)                                                |
| Multicast TTL/HOPLimit                                 | 16 (1-254)                                                        |
| <input type="button" value="Set"/>                     |                                                                   |
| H.264(2)                                               |                                                                   |
| H.264 transmission                                     | <input checked="" type="radio"/> On <input type="radio"/> Off     |
| Internet mode (over HTTP)                              | <input type="radio"/> On <input checked="" type="radio"/> Off     |
| Image capture size                                     | 640x360 ▾                                                         |
| Transmission priority                                  | Frame rate ▾                                                      |
| Frame rate*                                            | 30fps * ▾                                                         |
| Burst tolerance level                                  | Low ▾                                                             |
| Control time period                                    | 24h ▾                                                             |
| Max bit rate (per client) *                            | Max 1536kbps * ▾ - Min 1536kbps * ▾                               |
| Image quality                                          | Normal ▾                                                          |
| Refresh interval                                       | 1s ▾                                                              |
| Transmission type                                      | Unicast port (AUTO) ▾                                             |
| Unicast port1(Image)                                   | 32014 (1024-50000)                                                |
| Unicast port2(Audio)                                   | 33014 (1024-50000)                                                |
| Multicast address                                      | 239.192.0.21                                                      |
| Multicast port                                         | 37004 (1024-50000)                                                |
| Multicast TTL/HOPLimit                                 | 16 (1-254)                                                        |
| <input type="button" value="Set"/>                     |                                                                   |
| Smoother live video display on the browser (buffering) | <input checked="" type="radio"/> On <input type="radio"/> Off     |
| <input type="button" value="Set"/>                     |                                                                   |
| Initial display stream on the browser                  | <input checked="" type="radio"/> H.264 <input type="radio"/> JPEG |
| <input type="button" value="Set"/>                     |                                                                   |

### H.264(1)/H.264(2)

#### [H.264 transmission]

Select “On” or “Off” to determine whether or not to transmit H.264 images.

- **On:** Transmits H.264 images.
- **Off:** Does not transmit H.264 images.
- **Default:** On

#### Note

- When “3 mega pixel [4:3]” is selected for “Image capture mode”, only “H.264(1)” is available.
- When “On” is selected for “H.264 transmission” in “H.264(1)” or “H.264(2)”, displaying of H.264 images or JPEG images on the “Live” page will become available.
- When “On” is selected for “H.264 transmission” in “H.264(1)” and “H.264(2)”, H.264 images are viewable using other devices with each setting.
- When “On” is selected for “H.264 transmission” in “H.264(1)” or “H.264(2)”, the transmission interval of JPEG images may sometimes become longer.

#### [Internet mode (over HTTP)]

Select “On” when transmitting H.264 images via the Internet. It is possible to transmit H.264 images without changing the broadband router settings configured for JPEG image transmission.

- **On:** H.264 images and audio will be transmitted using the HTTP port. Refer to page 139 for further information about the HTTP port number settings.
- **Off:** H.264 images and audio will be transmitted using the UDP port.
- **Default:** Off

#### Note

- When “On” is selected, only “Unicast port (AUTO)” will be available for “Transmission type”.
- When “On” is selected, it may take time to start displaying H.264 images.
- When “On” is selected, H.264 images may not be displayed depending on the number of the concurrent access user and audio data availability, etc.
- When “On” is selected, only IPv4 access is available.

#### [Image capture size]

Select the image capture size from the following.

**When “2 mega pixel [16:9]” is selected for “Image capture mode”**

- H.264(1): 1920x1080/640x360/320x180
- H.264(2): 640x360/320x180

**When “1.3 mega pixel [16:9]” is selected for “Image capture mode”**

1280x720~/640x360/320x180

**When “1.3 mega pixel [4:3]” is selected for “Image capture mode”**

1280x960~/VGA/QVGA

**When “3 mega pixel [4:3]” is selected for “Image capture mode”**

1280x960 fix

- **Default:**
  - H.264(1): 1920x1080
  - H.264(2): 640x360

#### [Transmission priority]

Select a transmission priority for H.264 images from the following.

- **Constant bit rate:** H.264 images will be transmitted with the bit rate selected for “Max bit rate (per client) \*”.
- **Frame rate:** H.264 images will be transmitted with the frame rate selected for “Frame rate\*”.

- **Best effort:** In accordance with the network bandwidth, H.264 images will be transmitted with the bit rate varying between the maximum and minimum bit rates that are set for “Max bit rate (per client)\*”.
- **Advanced VBR:** H.264 images will be transmitted with the frame rate selected for “Frame rate\*”. Images are transmitted so that the average transmission rate during the period specified for “Control time period” becomes the bit rate selected for “Max bit rate (per client)\*”.
- **Default:** Frame rate

**Note**

- When “Frame rate” or “Advanced VBR” is selected for “Transmission priority”, number of users who can access the camera may be limited more (may become less than 10).

**[Frame rate\*]**

Select a frame rate for H.264 images from the following.

1fps/ 3fps/ 5fps\*/ 7.5fps\*/ 10fps\*/ 12fps\*/ 15fps\*/ 20fps\*/ 30fps\*

- **Default:** 30fps\*

**Note**

- When “Frame rate” or “Advanced VBR” is selected for “Transmission priority”, this setting is available.
- “Frame rate\*” is restricted by “Max bit rate (per client)\*”. For this reason, the frame rate may be lower than the specified value when any value marked with an asterisk (\*) is selected.
- For “H.264(1)”, when “Main: 15fps/ Sub: 15fps” is selected for the “Frame rate” of picture in picture, the frame rate is limited to a maximum of 15fps. To enable a maximum frame rate of 30fps, select “Main: 30fps/ Sub: 1fps” for “Frame rate”.
- For “H.264(2)”, when “Alarm action 1”, “Alarm action 2”, or “Alarm action 3” is selected for the “Picture in picture mode” of picture in picture, the frame rate is limited to a maximum of 15fps. To enable a maximum frame rate of 30fps, select “Alarm action 4” or “Off” for “Picture in picture mode”.

**[Burst tolerance level]**

Select how much the bit rate can exceed “Max bit rate (per client)\*” by from the following.

High/Middle/Low

**Default:** Low

**Note**

- This setting is only available when “Advanced VBR” is selected for “Transmission priority”.
- Depending on the H.264 bit rate used, the burst bit rate may only change by a maximum of about x4 for “High”, x2.5 for “Middle”, and x1.5 for “Low”.

**[Control time period]**

Select the time period that the bit rate will be controlled for from the following. Images are transmitted so that the average transmission rate during the selected period becomes the bit rate selected for “Max bit rate (per client)\*”.

1h/6h/24h/1week

**Default:** 24h

**Note**

- This setting is only available when “Advanced VBR” is selected for “Transmission priority”.

**[Max bit rate (per client)\*]**

Select an H.264 bit rate per a client from the following. When “Best effort” is selected for “Transmission priority”, set the maximum and minimum bit rates.

64kbps/ 128kbps\*/ 256kbps\*/ 384kbps\*/ 512kbps\*/ 768kbps\*/ 1024kbps\*/ 1536kbps\*/ 2048kbps\*/ 3072kbps\*/ 4096kbps\*/ 6144kbps\*/ 8192kbps\*/ 10240kbps\*/ 12288kbps\*/ 14336kbps\*

- **Default:**
  - H.264(1): 4096kbps\*

## 11 Configure the settings relating to images and audio [Image/Audio]

- H.264(2): 1536kbps\*

\* The range of bit rates that can be configured for H.264 bit rates differs depending on the “Image capture size”.

- QVGA, VGA, 320x180, and 640x360: 64kbps - 4096kbps \*
- 1280x960 and 1280x720: 256kbps\* - 8192kbps \*
- 1920x1080: 512kbps\* - 14336kbps\*

### Note

- When “14336kbps” is selected, the number of users who can access H.264 images will be limited to “1”. (Only a single user can access H.264 images.)
- The H.264 bit rate is restricted by “Bandwidth control(bit rate)” on the [Network] tab on the “Network” page (→page 136). For this reason, the bit rate may be lower than the value when any value with an asterisk (\*) on the right is selected.

### [Image quality]

Select the image quality of H.264 images from the following.

Low(Motion priority)/ Normal/ Fine(Image quality priority)

- **Default:** Normal

### Note

- When “Constant bit rate” or “Best effort” is selected for “Transmission priority”, this setting is available.

### [Refresh interval]

Select an interval (I-frame interval; 0.2 - 5 seconds) to refresh the displayed H.264 images.

If using under a network environment with frequent error occurrences, shorten the refresh interval for H.264 to diminish image distortions. However, the refresh interval may be longer than the set value.

0.2s/ 0.25s/ 0.33s/ 0.5s/ 1s/ 2s/ 3s/ 4s/ 5s

- **Default:** 1s

### [Transmission type]

Select the transmission type of H.264 images from the following.

- **Unicast port (AUTO):** Up to 14 users can access a single camera concurrently. “Unicast port1(Image)” and “Unicast port2(Audio)” will automatically be selected when transmitting images and audio from the camera. When it is unnecessary to fix the port number for H.264 image transmission such as when using in a particular LAN environment, it is recommended to select “Unicast port (AUTO)”.
- **Unicast port (MANUAL):** Up to 14 users can access a single camera concurrently. It is necessary to select “Unicast port1(Image)” and “Unicast port2(Audio)” manually to transmit images and audio from the camera. It is possible to fix the port number of the router used for H.264 image transmission via the Internet by setting “Unicast port (MANUAL)” (→page 136). Refer to the operating instructions of the router in use.
- **Multicast:** Unlimited number of users can access a single camera concurrently. Complete the entry field of “Multicast address”, “Multicast port” and “Multicast TTL/HOPLimit” when transmitting H.264 images with multicast. Refer to page 7 for further information about the maximum concurrent access number.
- **Default:** Unicast port (AUTO)

### [Unicast port1(Image)]<sup>2</sup>/[Unicast port]<sup>2</sup>

Enter the unicast port number (used to transmit images from the camera).

- **Available port number:** 1024 - 50000 (Only even numbers are available.)
- **Default:**
  - H.264(1): 32004
  - H.264(2): 32014

### [Unicast port2(Audio)]<sup>2</sup>

Enter the unicast port number (used to transmit audio from the camera).

- **Available port number:** 1024 - 50000 (Only even numbers are available.)
- **Default:**
  - H.264(1): 33004
  - H.264(2): 33014

**[Multicast address]<sup>3</sup>**

Enter the multicast IP address. Images and audio will be transmitted to the designated IP address.

- **Available IPv4 address:** 224.0.0.0 - 239.255.255.255
- **Available IPv6 address:** Multicast address starting with "FF"
- **Default:**
  - H.264(1): 239.192.0.20
  - H.264(2): 239.192.0.21

**Note**

- Enter a multicast IP address after checking available multicast address.

**[Multicast port]<sup>3</sup>**

Enter the multicast port number (used to transmit images from the camera).

- **Available port number:** 1024 - 50000 (Only even numbers are available.)
- **Default:** 37004

**Note**

- When audio is transmitted from the unit, the port number to be used will be the multicast port number plus "1000".

**[Multicast TTL/HOPLimit]<sup>3</sup>**

Enter a value for "Multicast TTL/HOPLimit".

- **Available value:** 1-254
- **Default:** 16

**IMPORTANT**

- When transmitting an H.264 image via a network, the transmitted image sometimes may not be displayed depending on the settings of a proxy server or a firewall. In this case, refer to the network administrator.
- When two or more network interface cards are installed on the PC in use, the network interface card(s) not used for receiving images should be invalidated when displaying images using the multicast port.

**[Smoother live video display on the browser (buffering)]**

Perform settings to display camera images on the viewer software.

- **On:** Images are temporarily stored on the computer and are displayed smoother.
- **Off:** Images are displayed in real-time and are not stored on the computer.
- **Default:** On

**[Initial display stream on the browser]**

Configure what type of images are initially displayed on the "Live" page.

- **H.264:** Initially displays H.264 images on the "Live" page.
- **JPEG:** Initially displays JPEG images on the "Live" page.
- **Default:** H.264

## 11 Configure the settings relating to images and audio [Image/Audio]

---

### **Note**

- Even when “H.264” is selected, if “Off” is selected for “H.264 transmission”, only JPEG images are displayed.

---

<sup>\*1</sup> It is not possible to configure this setting for both H.264(1) and H.264(2) simultaneously.

<sup>\*2</sup> It is necessary to designate the unicast port number when “Unicast port (MANUAL)” is selected for “Transmission type”.


<sup>\*3</sup> It is necessary to designate the multicast IP address when “Multicast” is selected for “Transmission type”.

## 11.4 Configure the settings relating to image adjust, extra zoom, privacy zone, VIQS, and lens distortion compensation [Image quality]

Click the [Image quality] tab on the “Image/Audio” page. (→page 40, page 42)

When the [Setup>>] button of each setting item is clicked, the detailed settings menu will be displayed in a newly opened window. The detailed settings can be configured while monitoring images displayed on the [Image quality] tab.

The settings relating to image adjust, extra zoom, privacy zone, VIQS, and lens distortion compensation can be configured in this section.

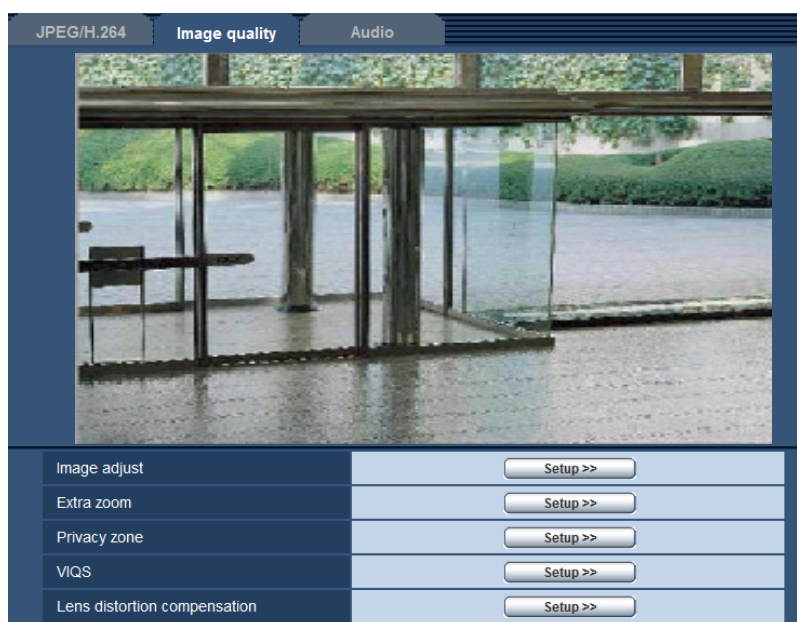

### [Image adjust]

Click the [Setup>>] button to display the setup menu that can configure the settings relating to image quality. The setup menu will be displayed in a newly opened window. (→page 86)

### [Extra zoom]

Click the [Setup>>] button to display the setup menu that can configure the settings relating to extra zoom. The setup menu will be displayed in a newly opened window. (→page 96)

### [Privacy zone]

Click the [Setup>>] button to display the setup menu that can configure the settings relating to the privacy zone. The setup menu will be displayed. (→page 97)

### [VIQS]

Click the [Setup>>] button to display the setup menu that can configure the settings relating to VIQS. The setup menu will be displayed. (→page 99)

VIQS is an abbreviation of Variable Image Quality on Specified area and is a feature that enables you to enhance the image quality of specified areas in images.

### **[Lens distortion compensation]**

Click the [Setup>>] button to display the setup menu that can configure the settings relating to lens distortion compensation. The setup menu will be displayed in a newly opened window. (→page 101)

### **11.4.1 Configure the settings relating to image quality (“Image adjust” setup menu)**

Click the [Setup>>] button of “Image adjust” on the [Image quality] tab of the “Image/Audio” page. (→page 85)

The settings relating to image quality can be configured with the setup menu displayed in a newly displayed window. When the values are changed, the changed values will be applied to the currently displayed image on the [Image quality] tab.

\*Any changes are updated immediately

Image adjust

|                               |                                                                                                              |
|-------------------------------|--------------------------------------------------------------------------------------------------------------|
| Super Dynamic(SD)             | <input type="radio"/> On <input checked="" type="radio"/> Off                                                |
| Face SD                       | <input type="radio"/> On <input checked="" type="radio"/> Off                                                |
| Adaptive black stretch        | <input type="radio"/> On <input checked="" type="radio"/> Off                                                |
| Back light compensation (BLC) | <input type="radio"/> On <input checked="" type="radio"/> Off                                                |
| Mask area                     | <input type="button" value="Start"/> <input type="button" value="End"/> <input type="button" value="Reset"/> |
| Light control mode            | ELC(1/30s) <input type="button" value="v"/>                                                                  |
| AGC                           | On(High) <input type="button" value="v"/>                                                                    |
| Auto slow shutter             | Off(1/30s) <input type="button" value="v"/>                                                                  |
| Day & Night(electrical)       | <input checked="" type="radio"/> Off <input type="radio"/> Auto                                              |
| White balance                 | ATW1 <input type="button" value="Set"/>                                                                      |
| Red gain                      | <input type="button" value="-"/> <input type="button" value="128"/> <input type="button" value="Reset"/>     |
| Blue gain                     | <input type="button" value="-"/> <input type="button" value="128"/> <input type="button" value="Reset"/>     |
| DNR                           | <input checked="" type="radio"/> High <input type="radio"/> Low                                              |
| Chroma gain level             | <input type="button" value="-"/> <input type="button" value="128"/> <input type="button" value="Reset"/>     |
| Aperture level                | <input type="button" value="-"/> <input type="button" value="16"/> <input type="button" value="Reset"/>      |
| Pedestal level                | <input type="button" value="-"/> <input type="button" value="128"/> <input type="button" value="Reset"/>     |
| Fog compensation              | <input type="radio"/> On <input checked="" type="radio"/> Off                                                |
| Level                         | <input type="button" value="-"/> <input type="button" value="64"/> <input type="button" value="Reset"/>      |

### [Super Dynamic(SD)]

Select "On" or "Off" to determine whether or not to activate the super dynamic function. Refer to the description "Super Dynamic function" about the super dynamic function.

- **On:** The super dynamic function will work.
- **Off:** The super dynamic function will not work.
- **Default:** Off


### Note

- When the following are observed depending on the light condition, select “Off” for “Super Dynamic(SD)”.
  - When flickering appears or the color changes on the screen
  - When noise appears in the brighter area on the screen
- When “Outdoor scene” or “Indoor scene” is selected for “Light control mode”, this setting is available.

### Super Dynamic function

When there is wide variation between the illumination of light and dark areas of the location being monitored, the camera adjusts the lens iris in accordance with the brighter areas. This causes loss of detail in darker areas. Conversely, adjusting the lens brightness for the darker areas causes the brighter areas to become washed out.

Super Dynamic digitally combines an image that is set up for a clear view of the brighter areas with an image that is set up for a clear view of the darker areas, creating a final image that preserves overall detail.

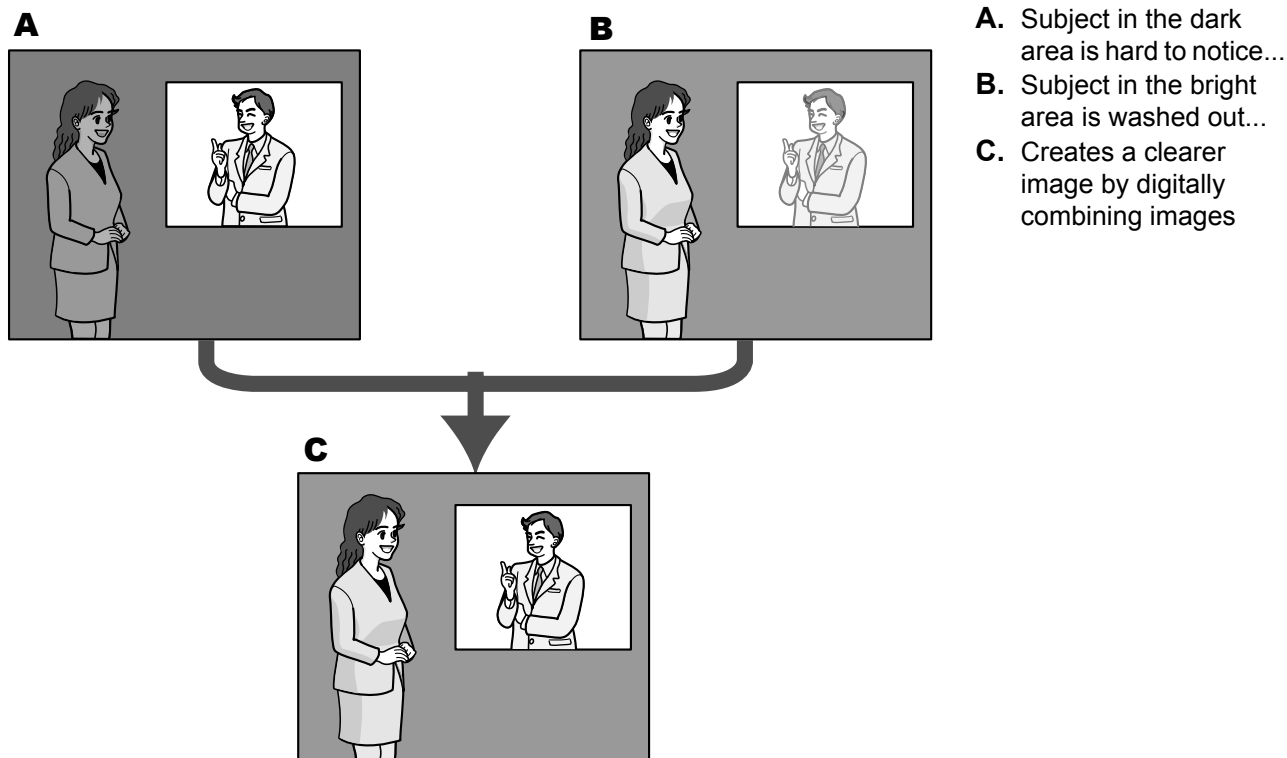

### [Face SD]

With the “Face SD” setting, if a person's face is dark and difficult to see, by combining the face detection and Super Dynamic functions, the area with the face in the image can be corrected to become brighter and easier to see.

Select “On” or “Off” to determine whether or not to interact with the Super Dynamic function.

- **On:** The interactive control with face detection will work.
- **Off:** The interactive control with face detection will not work.
- **Default:** Off

**Note**

- When “Off” is selected for “Super Dynamic(SD)”, the interactive control with face detection is unavailable.

**[Adaptive black stretch]**

Select “On” or “Off” to determine whether or not to activate the darkness compensation function. The darkness compensation function can make darker parts of images brighter by digital image processing.

- **On:** Activates the darkness compensation function.
- **Off:** Deactivates the darkness compensation function.
- **Default:** Off

**IMPORTANT**

- When “On” is selected for “Adaptive black stretch”, noise in the darker parts may be increased, and parts around borders between the darker parts and the brighter parts may become darker/brighter than the other darker/brighter parts.

**[Back light compensation (BLC)]**

Select “On” or “Off” to determine whether or not to activate the back light compensation (BLC) function. When “On” is selected for “Super Dynamic(SD)”, this setting is unavailable.

The back light compensation function can compensate back light by setting mask areas on brighter parts of images.

- **On:** Mask areas will be set automatically.
- **Off:** Mask areas will not be set automatically. It is necessary to set them manually.
- **Default:** Off

**[Mask area]**

When “Off” is selected for “Super Dynamic(SD)” and “Back light compensation (BLC)”, it is possible to compensate for backlight by masking brighter areas.

Refer to page 92 for information on how to set the mask area.

**[Light control mode]**

Select the light control mode from the following.

- **Indoor scene (50 Hz) / Indoor scene (60 Hz):** The shutter speed will automatically be adjusted to prevent flicker caused by fluorescent light. Select 50 Hz or 60 Hz corresponding to the location where the camera is in use.
- **ELC(Maximum exposure time):** The lighting control will be automatically performed by adjusting shutter speed in the range of ELC.  
ELC(1/30s)/ ELC(3/100s)/ ELC(3/120s)/ ELC(2/100s)/ ELC(2/120s)/ ELC(1/100s)/ ELC(1/120s)/  
ELC(1/250s)/ ELC(1/500s)/ ELC(1/1000s)/ ELC(1/2000s)/ ELC(1/4000s)/ ELC(1/10000s)
- **Default:** ELC(1/30s)

**Note**

- The shorter the maximum exposure time is, the more accurately it is possible to capture a fast moving object with less blur.
- When a faster shutter speed is selected, the sensitivity will become lower.
- Flickering may occur depending on the “ELC(Maximum exposure time)” setting.  
In case flickering happens, it may be improved by configuring the following settings.  
In the area of 50 Hz power supply frequency:  
– ELC(3/100s), ELC(2/100s), ELC(1/100s)  
In the area of 60 Hz power supply frequency:  
– ELC(3/120s), ELC(2/120s), ELC(1/120s)  
When flickering still remains, set flicker-less mode.

## 11 Configure the settings relating to images and audio [Image/Audio]

---

- Under extremely strong lighting, flickering may happen even when “Indoor scene” is selected for “Light control mode”.  
When the brightness (illuminance) level on the screen is set to a relatively low level with the [Brightness] buttons, flickering may frequently happen.
- When the setting for “Light control mode” is “Indoor scene (50 Hz)”, “Indoor scene (60 Hz)” or “ELC” whose maximum exposure time is 1/2000s or longer, brightness may not be remarkably changed even when [Brightness] buttons are clicked.
- In such cases, either of the following can reduce flickering.
  - Moderate the illumination intensities of objects by changing the camera direction.
  - Set the brightness (illuminance) level on the screen to a brighter level with the [Brightness] buttons.
- When “On” is selected for “Super Dynamic(SD)”, only “Indoor scene (50 Hz)”, “Indoor scene (60 Hz)” and “ELC(1/30s)” are available.

### [AGC]

Select a method of gain adjustment from the following.

- **On(High)/ On(Mid)/ On(Low):** When the luminance of the subject becomes darker, gain will be automatically increased and screen will become brighter. “High”, “Mid” and “Low” are indications of gain level.
- **Off:** Images will be captured with the fixed gain level.
- **Default:** On(High)

### [Auto slow shutter]

The electronic sensitivity enhancement (sensitivity up) can be carried out by adjusting the storage time of the sensor.

The following are available for the recording duration.

Off(1/30s), Max.2/30s, Max.4/30s, Max.6/30s, Max.10/30s, Max.16/30s

- **Default:** Off(1/30s)

### **IMPORTANT**

- When “On” is selected for “Auto slow shutter”, frame rate may become lower. Noise or white dots (blemishes) may sometimes appear.

### Note

- When “Max.16/30s” is selected, for example, sensitivity will automatically be increased up to x16.
- When “Off” is selected for “AGC”, this setting is unavailable.

### [Day & Night(electrical)]

Select switching between the color mode and the black & white mode from the following.

- **Off:** The color mode is selected.
- **Auto:** Switches from color to black-and-white images when the ambient brightness (illuminance) of the camera is approx. 2.0 lx or less. It takes time to switch between modes.
- **Default:** Off

### [White balance]

Select a method of white balance adjustment from the following.

White color can be adjusted by “Red gain” and “Blue gain”.

- **ATW1:** Selects the automatic tracing white balance mode. The camera will constantly check the color temperature of the light source and adjust the white balance automatically. Operating color temperature range is approx. 2,700 K to 6,000 K.
- **ATW2:** Selects the automatic tracing white balance mode under a sodium lamp. The camera will adjust the white balance automatically under a sodium lamp. Operating color temperature range is approx. 2,000 K to 6,000 K.

- **AWC:** Selects the automatic white balance control mode. This adjustment is suitable for a location where a light source is stable. Operating color temperature range is approx. 2,000 K to 10,000 K.
- **Default:** ATW1

#### **Note**

- Under the following conditions, color may not be faithfully processed. In these cases, select "AWC".
  - When shooting a subject whose major part is a thick color
  - When shooting blue sky or sun at sunset
  - When shooting a subject whose luminance is too low
- When "AWC" is selected, click the [Set] button.

#### **[Red gain]**

Adjust the red color of images.

When the cursor is moved in the "+" direction, the red color will become thicker. When the cursor is moved in the "-" direction, the red color will be thinner. Click the [Reset] button to reset the setting to the default.

- **Default:** 128

#### **[Blue gain]**

Adjust the blue color of images.

When the cursor is moved in the "+" direction, the blue color will become thicker. When the cursor is moved in the "-" direction, the blue color will be thinner. Click the [Reset] button to reset the setting to the default.

- **Default:** 128

#### **[DNR]**

The digital noise reduction function reduces noise automatically under the condition of low illuminance. Select an effect level "High" or "Low" for the digital noise reduction.

- **High:** High DNR, increases afterimage
- **Low:** Low DNR, reduces afterimage
- **Default:** High

#### **[Chroma gain level]**

Adjusts the chroma level (color density).

When the cursor is moved in the "+" direction, the colors will become thicker. When the cursor is moved in the "-" direction, the colors will be thinner. Click the [Reset] button to reset the setting to the default.

- **Default:** 128

#### **[Aperture level]**

Adjust the aperture level (outline compensation).

Images will be sharper when the cursor is moved in the "+" direction, and will be softer when the cursor is moved in the "-" direction. Click the [Reset] button to reset the setting to the default.

- **Default:** 16

#### **[Pedestal level]**

Adjust the black level of images by moving the cursor.

When the cursor is moved to the "+" direction, images will become brighter. When the cursor is moved to the "-" direction, images will be darker. Click the [Reset] button to reset the setting to the default.

- **Default:** 128

#### **[Fog compensation]**

Select "On" or "Off" to determine whether or not to activate the fog compensation function. When "On" is selected for "Super Dynamic(SD)" or "Adaptive black stretch", this setting is not available.

The fog compensation function can make dim images that have been affected by fog or other conditions clearer using digital image processing.

## 11 Configure the settings relating to images and audio [Image/Audio]

---

- **On:** Activates the fog compensation function.
- **Off:** Stops the fog compensation function.
- **Default:** Off

### [Level]

Adjust the fog compensation level.

The level of fog compensation will increase when the cursor is moved in the “+” direction, and decrease when the cursor is moved in the “-” direction. Click the [Reset] button to reset to the default setting.

**Default:** 64

### [Close] button

Click this button to quit the “Image adjust” setup menu.

## 11.4.2 Set mask areas

When “Off” is selected for “Super Dynamic(SD)” and “Back light compensation (BLC)”, it is possible to compensate for backlight by masking brighter areas.

1. Display the "Image adjust" setup menu. (→page 85)

\*Any changes are updated immediately


Image adjust

|                               |                                                                                                                                                                                                                   |
|-------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Super Dynamic(SD)             | <input type="radio"/> On <input checked="" type="radio"/> Off                                                                                                                                                     |
| Face SD                       | <input type="radio"/> On <input checked="" type="radio"/> Off                                                                                                                                                     |
| Adaptive black stretch        | <input type="radio"/> On <input checked="" type="radio"/> Off                                                                                                                                                     |
| Back light compensation (BLC) | <input type="radio"/> On <input checked="" type="radio"/> Off                                                                                                                                                     |
| Mask area                     | <input type="button" value="Start"/> <input type="button" value="End"/> <input type="button" value="Reset"/>                                                                                                      |
| Light control mode            | ELC(1/30s) <input type="button" value="v"/>                                                                                                                                                                       |
| AGC                           | On(High) <input type="button" value="v"/>                                                                                                                                                                         |
| Auto slow shutter             | Off(1/30s) <input type="button" value="v"/>                                                                                                                                                                       |
| Day & Night(electrical)       | <input checked="" type="radio"/> Off <input type="radio"/> Auto                                                                                                                                                   |
| White balance                 | ATW1 <input type="button" value="Set"/>                                                                                                                                                                           |
| Red gain                      | <input type="button" value="-"/> <input type="button" value="128"/> <input type="button" value="Reset"/> <input type="button" value="128"/> <input type="button" value="+"/> <input type="button" value="Reset"/> |
| Blue gain                     | <input type="button" value="-"/> <input type="button" value="128"/> <input type="button" value="Reset"/> <input type="button" value="128"/> <input type="button" value="+"/> <input type="button" value="Reset"/> |
| DNR                           | <input checked="" type="radio"/> High <input type="radio"/> Low                                                                                                                                                   |
| Chroma gain level             | <input type="button" value="-"/> <input type="button" value="128"/> <input type="button" value="Reset"/> <input type="button" value="128"/> <input type="button" value="+"/> <input type="button" value="Reset"/> |
| Aperture level                | <input type="button" value="-"/> <input type="button" value="16"/> <input type="button" value="Reset"/> <input type="button" value="16"/> <input type="button" value="+"/> <input type="button" value="Reset"/>   |
| Pedestal level                | <input type="button" value="-"/> <input type="button" value="128"/> <input type="button" value="Reset"/> <input type="button" value="128"/> <input type="button" value="+"/> <input type="button" value="Reset"/> |
| Fog compensation              | <input type="radio"/> On <input checked="" type="radio"/> Off                                                                                                                                                     |
| Level                         | <input type="button" value="-"/> <input type="button" value="64"/> <input type="button" value="Reset"/> <input type="button" value="64"/> <input type="button" value="+"/> <input type="button" value="Reset"/>   |

## 11 Configure the settings relating to images and audio [Image/Audio]


### 2. Click the [Start] button of "Mask area".

→ Borders will appear and the image displayed on the [Image quality] tab will be divided into 48 (6x8).

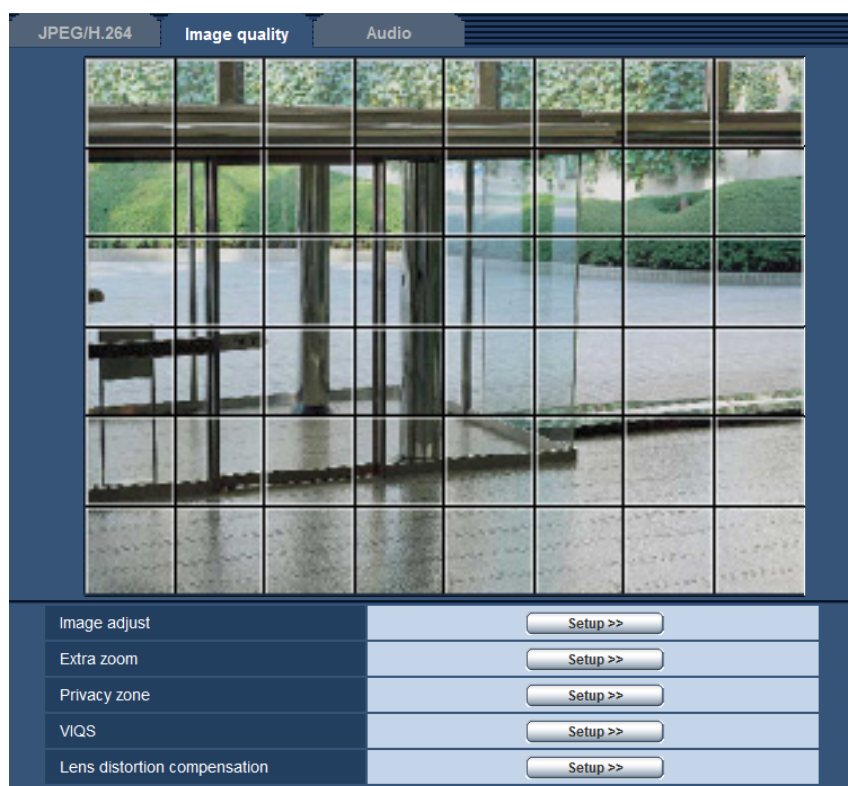

3. Click the divided areas to be masked.

→ The clicked areas will be masked and will become white. To cancel masking, click the area again.

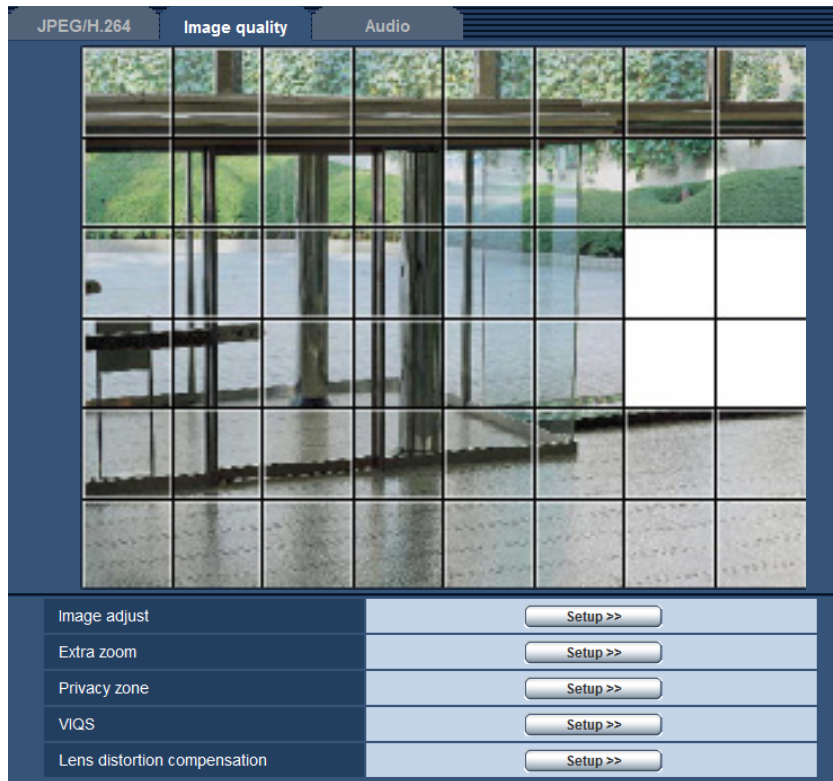

4. Click the [End] button after completing masking areas.

→ The borders on the image displayed on the [Image quality] tab will disappear.

### IMPORTANT


- The mask area may move out of alignment when the JPEG/H.264 “Image capture mode” setting is changed. Make sure to check the setting after changing the “Image capture mode” setting.
- The mask area may move out of alignment when “Extra zoom” is configured. Make sure to check the setting after changing the “Extra zoom” setting.


### Note

- When the [Reset] button is clicked, masking for all the masked areas will be canceled.

## 11.5 Adjust the angular field of view using the extra zoom function

Click the [Setup>>] button of “Extra zoom” on the [Image quality] tab of the “Image/Audio” page. (→page 85)  
It is possible to adjust the angular field of view using the extra zoom function.

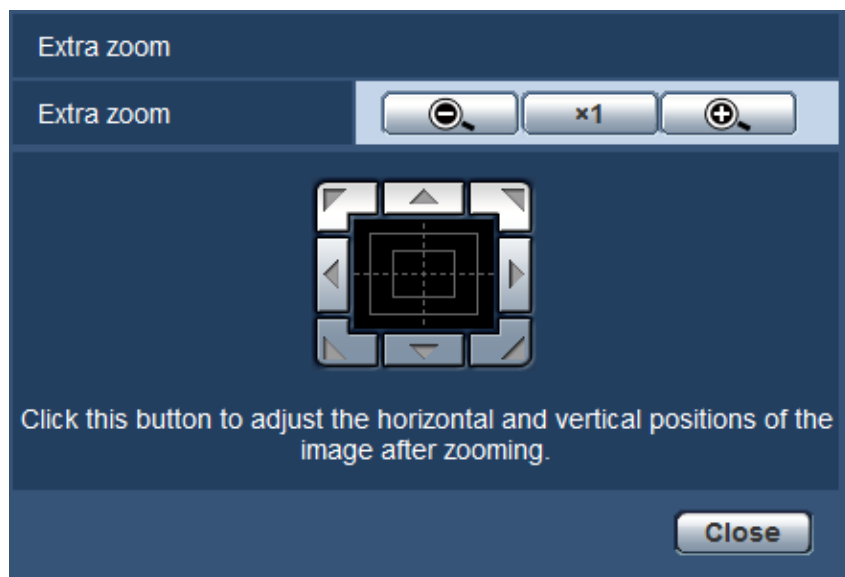

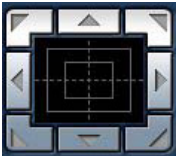-  : Click this button to adjust the zoom ratio to the “Wide” side.
-  : Click this button to set the zoom ratio to x1.0.
-  : Click this button to adjust the zoom ratio to the “Tele” side.
-  : Click this button to adjust the horizontal and vertical positions of the image after zooming.

### Note

- When “2 mega pixel [16:9]” is selected for “Image capture mode”, the maximum zoom ratio is x3.0.
- When “1.3 mega pixel [16:9]” or “1.3 mega pixel [4:3]” is selected for “Image capture mode”, the maximum zoom ratio is x2.0.
- When “3 mega pixel [4:3]” is selected for “Image capture mode”, the maximum zoom ratio is x3.2.


### IMPORTANT

- The extra zoom function may not be activated on the appropriate position if the setting for the function is performed after the settings for the mask areas (→page 92), privacy zone (→page 97), VMD area (→page 110), VIQS area (→page 99), cropping area (→page 120), picture in picture cropping area (→page 121). To prevent this, perform the setting for the extra zoom function before other settings.
- When using the lens distortion compensation function, if the extra zoom function is used, the lens distortion compensation function is disabled.

## 11.6 Configure the settings relating to the privacy zone (“Privacy zone” setup menu)

Click the [Setup>>] button of “Privacy zone” on the [Image quality] tab of the “Image/Audio” page.  
(→page 85)

When there is a zone that you do not want to display, set the zone as a privacy zone not to be displayed. Up to 2 privacy zones can be set.

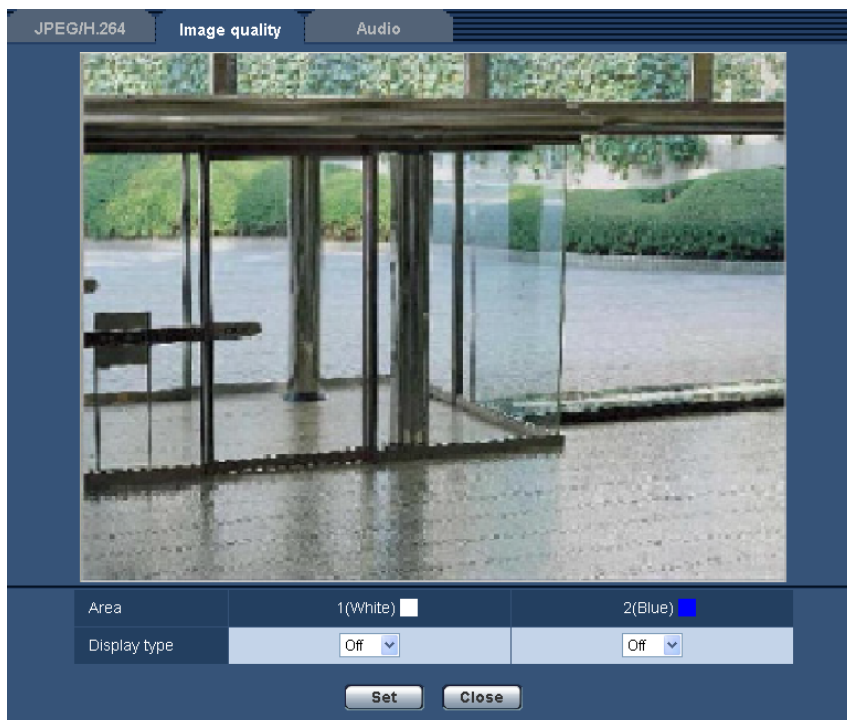

### [Area]

The privacy zone will be set when an area is designated by dragging the mouse. Each zone can be overlapped. Privacy zones 1 and 2 can be created and they will be numbered in the order of creation.

### [Display type]

Select a display type of the privacy zone from the following.

- **Gray:** The privacy zones will be displayed in gray.
- **Off:** Does not display the privacy zones.
- **Default:** Off

### Note

- Set the privacy zone larger than the size of an object to be hidden.

### [Close] button

Click this button to close the “Privacy zone” setup menu.

### **IMPORTANT**

- After configuring the privacy zone, the privacy zone may move out of alignment when the JPEG/H.264 “Image capture mode” setting is changed. Make sure to check the privacy zone after changing the “Image capture mode” setting.

## 11 Configure the settings relating to images and audio [Image/Audio]

---

- After configuring the privacy zone, the privacy zone may move out of alignment when “Extra zoom” is configured. Make sure to check the privacy zone after configuring “Extra zoom”.

## 11.7 Configure the VIQS setting


Click the [Setup>>] button of “VIQS” on the [Image quality] tab of the “Image/Audio” page. (→page 85)

The VIQS function can change the data size of images before sending them by performing operations such as increasing the resolution of important monitoring points in the image and reducing the resolution of other areas.

VIQS can be used to adjust the operations of monitoring systems to match their installation environments by performing operations such as reducing the amount of data saved on recorders and the bandwidth used when sending images. VIQS is only available for H.264 images and can only increase the resolution of a maximum of 40% of an image.

Up to 2 VIQS areas can be set.

When checking the images after configuring the VIQS setting, display the H.264 images on the “Live” page.

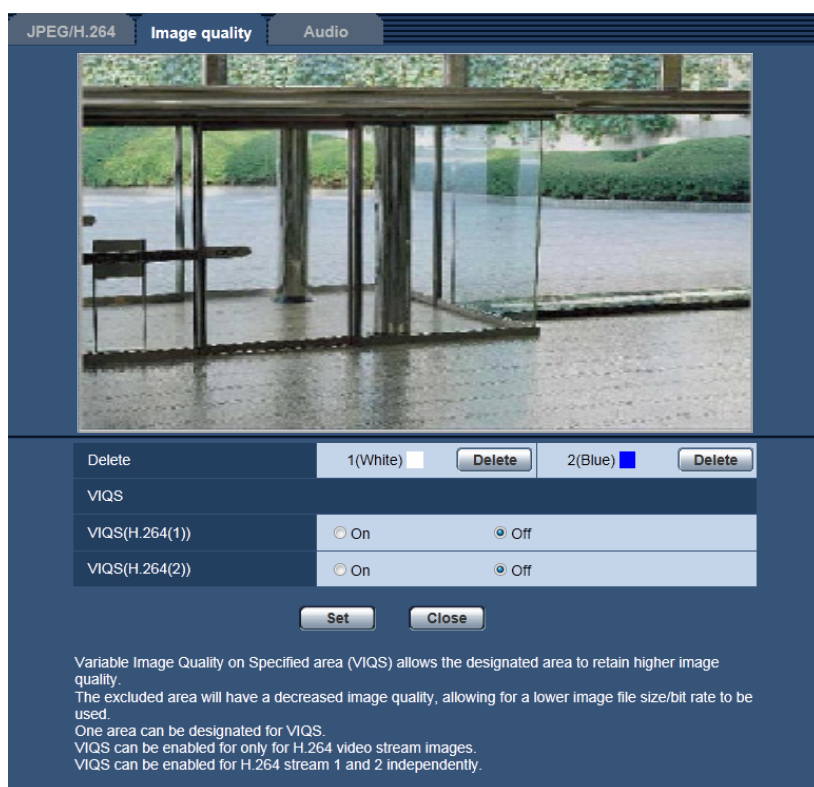

### [Delete]

Deletes the VIQS area. Click the [Set] button to delete the VIQS area.

### [VIQS(H.264(1))]

Select “On” or “Off” to determine whether or not to activate the VIQS function for the transmitted (H.264(1)) images.

- **Default:** Off

### [VIQS(H.264(2))]

Select “On” or “Off” to determine whether or not to activate the VIQS function for the transmitted (H.264(2)) images.

- **Default:** Off

### IMPORTANT

- After the VIQS setting is set to “On”, the VIQS area may move out of alignment when the JPEG/H.264 “Image capture mode” setting is changed. Make sure to check the VIQS setting after changing the “Image capture mode” setting.
- After configuring the VIQS area, the VIQS area may move out of alignment when “Extra zoom” is configured. Make sure to check the VIQS area after configuring “Extra zoom”.


## Configure the VIQS area

The VIQS area is specified by following the steps below.

1. Drag the mouse on the screen to specify the area (up to 2 areas).
  - The specified area is set to area “1(White)”, and the outline is displayed.The areas are set in the area number order from number 1. The color next to the area number show the color of the corresponding outline.

### Note

- A selectable area is limited.

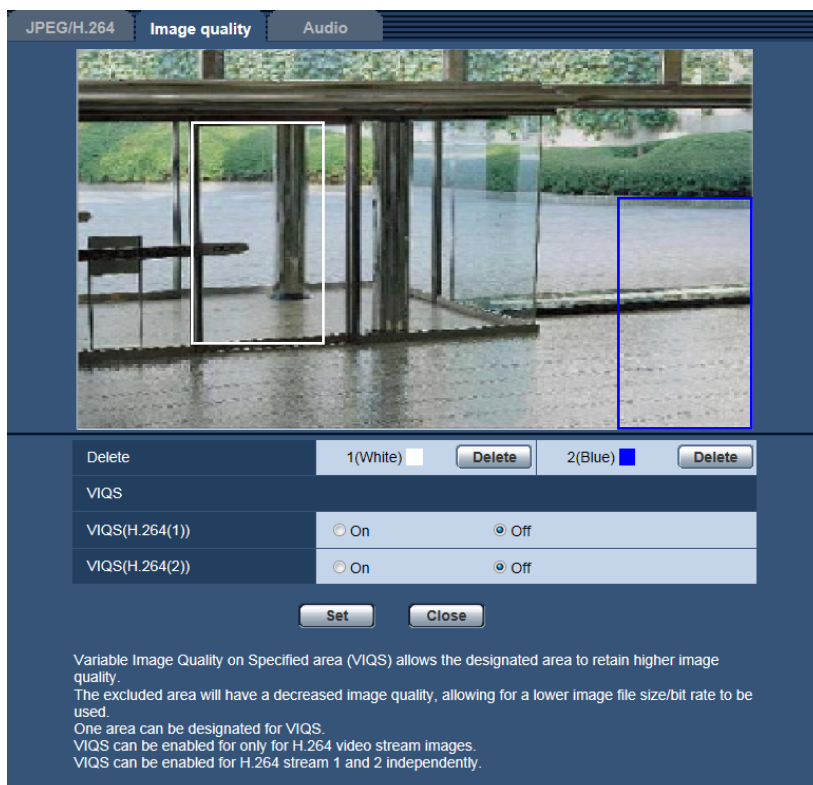

2. Select [On]/[Off] to activate/deactivate a distributed image of [VIQS(H.264(1))] or [VIQS(H.264(2))].
3. Click the [Set] button.
  - This unit is updated with the setting contents. Click the [Delete] button corresponding to the area to be deleted.

### IMPORTANT


- No setting contents are determined unless the [Set] button is clicked.
- To check the window after VIQS setting, display an H.264 image on the “Live” page.

## 11.8 Configure the settings relating to lens distortion compensation

Click the [Setup>>] button of “Lens distortion compensation” on the [Image quality] tab of the “Image/Audio” page. (→page 85)

Distortion correction can be performed using lens distortion compensation.

The amount of compensation performed can be adjusted.

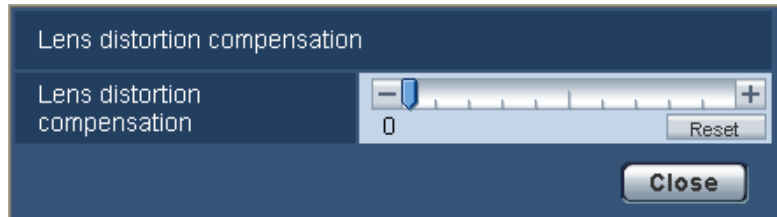

### **Note**

- The lens distortion compensation function is disabled when the extra zoom function is being used. Set [Extra zoom] to x1.0.

## 11.9 Configure the settings relating to audio [Audio]

Click the [Audio] tab on the “Image/Audio” page. (→page 40, page 42)  
The settings relating to audio can be configured on this page.

### Note

- Images and audio will not be synchronized. Therefore, images and audio may not always match.
- Audio may be interrupted depending on the network environment.

| Audio                                   |                                                                                                                                |
|-----------------------------------------|--------------------------------------------------------------------------------------------------------------------------------|
| Audio mode                              | Off                                                                                                                            |
| Audio encoding format                   | <input checked="" type="radio"/> G.726 <input type="radio"/> G.711                                                             |
| Audio bit rate                          | 32kbps                                                                                                                         |
| Mic input volume (Camera to PC)         | Mic Middle                                                                                                                     |
| Mic input interval (Camera to PC)       | 40ms                                                                                                                           |
| Permission level of audio trans./recep. | <input type="radio"/> 1. Level 1 only <input type="radio"/> 2. Level 2 or higher <input checked="" type="radio"/> 3. All users |

Set

### [Audio mode]

Select the communication mode used for audio data transmission/reception between the camera and the PC from the following.

- **Off:** Does not receive/transmit audio between the camera and the PC. Therefore, the settings and controls relating to audio will be invalidated.
- **Mic input:** The PC receives audio data from the camera. Audio can be heard with images on the PC. Images and audio will not be synchronized.
- **Default:** Off

### Note

- Howling may be generated depending on usage conditions. If howling is generated, prevent sound generated by the PC from entering the PC microphone.
- When “Multicast” is selected for “Transmission type” on the [JPEG/H.264] tab of the “Image/Audio” page, “Audio output” will become unavailable while monitoring H.264 images. To enable “Audio output”, click the [JPEG] button on the “Live” page.
- “Audio recording” and “Audio detection” only operate when “Mic input” is selected for “Audio mode”.

### [Audio encoding format]

Select the audio encoding format from G.726 and G.711.

- **Default:** G.726

### Note

- G.711 is available only when “Mic input” is selected for “Audio mode”.

### [Audio bit rate]

Select “16kbps” or “32kbps” for the audio bit rate used to transmit/receive audio data.

- **Default:** 32kbps

### Note

- When using “Bandwidth control(bit rate)” (→page 136) with a small bit rate, select “16kbps” for “Audio bit rate” if you want to prioritize the JPEG refresh interval or the H.264 transmission priority.

- [Audio bit rate] is unavailable when “G.711” is selected for “Audio encoding format”.

### [Mic input volume (Camera to PC)]

Select a volume level on the PC to hear audio transmitted from the camera.

- **Mic High:** The volume level will become high. This setting will be applied when audio is input to the camera using a microphone.
- **Mic Middle:** The volume level will become middle. This setting will be applied when audio is input to the camera using a microphone.
- **Mic Low:** The volume level will become low. This setting will be applied when audio is input to the camera using a microphone.
- **Default:** Mic Middle

#### Note

- These settings are linked with the volume settings of “Audio recording” and “Audio detection”.

### [Mic input interval (Camera to PC)]

Select an interval for audio reception from the following.

20ms/ 40ms/ 80ms/ 160ms

- **Default:** 40ms

#### Note

- When a shorter interval is selected, the delay time will be shorter. When a longer interval is selected, audio interruption may be diminished even though the delay time will be longer. Select the interval according to the network environment.

### [Permission level of audio trans./recep.]

Select an access level for audio transmission/reception from the following.

1. Level 1 only/ 2. Level 2 or higher/ 3. All users

- **Default:** 3. All users

#### Note

- Refer to page 126 for further information about the access level.

## 12 Configure the multi-screen settings [Multi-screen]

The cameras from which images are to be displayed on a multi-screen can be registered on the “Multi-screen” page. (→page 40, page 42)

The screenshot shows the 'Multi-screen' configuration page. It contains four sections, each for a different group of cameras (Group A, Group B, Group C, and Group D). Each section has a table with columns for 'Group', 'IP address', and 'Camera title'. Below each table is an example of entry and a 'Set' button.

| Group A | IP address | Camera title |
|---------|------------|--------------|
| Cam. 1  | selfcamera | WV-SW158     |
| Cam. 2  |            |              |
| Cam. 3  |            |              |
| Cam. 4  |            |              |

Example of entry: http://192.168.0.10:8080

Set

| Group B | IP address | Camera title |
|---------|------------|--------------|
| Cam. 5  |            |              |
| Cam. 6  |            |              |
| Cam. 7  |            |              |
| Cam. 8  |            |              |

Example of entry: http://192.168.0.10:8080

Set

| Group C | IP address | Camera title |
|---------|------------|--------------|
| Cam. 9  |            |              |
| Cam. 10 |            |              |
| Cam. 11 |            |              |
| Cam. 12 |            |              |

Example of entry: http://192.168.0.10:8080

Set

| Group D | IP address | Camera title |
|---------|------------|--------------|
| Cam. 13 |            |              |
| Cam. 14 |            |              |
| Cam. 15 |            |              |
| Cam. 16 |            |              |

Example of entry: http://192.168.0.10:8080

Set

### [IP address]

Enter the IP address or the host name of the camera to be used for the multi-screen. 4 cameras can be registered as a group and up to 4 groups (16 cameras) can be registered.

When the HTTP port number for the camera of which images are to be displayed had been changed, enter as follows:

**Example of entry:**

- **Example when entering an IPv4 address:** http://192.168.0.10:8080
- **Example when entering an IPv6 address:** http://[2001:db8:0:0:0:0:1]:8080

To access the cameras using the HTTPS protocol, enter as follows:

**Example of entry:** https://192.168.0.10/

- **Available number of characters:** 1 - 128 characters
- **Default:** (Cam. 1) selfcamera, (Cam. 2 - 16) not registered

### **IMPORTANT**

- When accessing the camera using the HTTPS protocol, install the security certificate of the camera to display images on the monitor. (→page 151)
- “Network Camera Recorder with Viewer Software Lite” which supports live monitoring and recording images from multiple cameras is available. For further information, refer to our website (<http://security.panasonic.com/pss/security/support/info.html>).
- This camera is specified when “selfcamera” is displayed for the IP address or host name.

### **Note**

- When using the host name, it is necessary to configure the DNS settings of the PC to be used for the multi-screen display. Refer to the network administrator for information on the DNS setting of PCs.

### **[Camera title]**

Enter the title of the camera. The entered camera title will be displayed on a multi-screen.

- **Available number of characters:** 0 - 20 characters
- **Unavailable characters:** " &
- **Default:**
  - (Cam. 1) Varies as follows depending on the model in use.  
WV-SW158 **SW158** / WV-SF138 **SF138**
  - (Cam. 2 - 16) None (blank)

### **Note**

- When selecting a 16 split-screen, some characters of the camera title to be displayed may not be displayed.
- Even when “16:9” is selected for the aspect ratio, the multi-screen is displayed in 4:3.

## 13 Configure the alarm settings [Alarm]

The settings relating to alarm occurrences such as settings for the alarm action at an alarm occurrence or alarm images, the VMD area settings, audio detection settings, and the alarm occurrence notification can be configured on this page.

The “Alarm” page has the [Alarm] tab, the [VMD area] tab, the [Audio detection] tab, and the [Notification] tab.

### 13.1 Configure the settings relating to the alarm action [Alarm]

Click the [Alarm] tab on the “Alarm” page. (→page 40, page 42)

The settings relating to the alarm can be configured in this section. Refer to page 107 for further information about the settings relating to the alarm images.

| Alarm                   |                                                                                                                                    |
|-------------------------|------------------------------------------------------------------------------------------------------------------------------------|
| VMD alarm               | <a href="#">VMD &gt;&gt;</a>                                                                                                       |
| Audio detection alarm   | <a href="#">Audio detection &gt;&gt;</a>                                                                                           |
| Command alarm           | <div> <div>Command alarm</div> <div> <input type="radio"/> On           <input checked="" type="radio"/> Off         </div> </div> |
| Originating port number | <div>8181 (1-65535)</div>                                                                                                          |

Set

## Alarm

### [VMD alarm]

When clicking “VMD >>”, the [VMD area] tab of the “Alarm” page will be displayed. (→page 111)

### [Audio detection alarm]

When “Audio detection>>” is clicked, the [Audio detection] tab will be displayed. (→ page 113)

### [Command alarm]

Select “On” or “Off” to determine whether or not to receive the command alarm.

The command alarm is a function that receives notification of a Panasonic protocol alarm from the other cameras. When “On” is selected, alarm actions will be performed between multiple cameras.

- **Default:** Off

### [Originating port number]

Select a port number to be used to receive the command alarm.

- **Available range:** 1-65535
- **Default:** 8181

The following port numbers are unavailable since they are already in use.

20, 21, 23, 25, 42, 53, 67, 68, 69, 80, 110, 123, 161, 162, 443, 554, 995, 10669, 10670, 59000-61000

## 13.2 Configure the settings relating to the alarm image [Alarm]

Click the [Alarm] tab on the “Alarm” page. (→page 40, page 42)

The settings relating to the alarm image to be transmitted to an FTP server can be configured in this section. The alarm image will be transmitted to an FTP server. To transmit alarm images to an FTP server, it is necessary to configure the settings in advance. (→page 132)

### IMPORTANT

- Depending on the network line speed or the network traffic, images may not be transmitted at the exact designated interval or period.
- When “Alarm input” or “Manual” is selected for “Save trigger” on the [SD memory card] tab, images will not be transmitted to the FTP server even when an alarm is detected. Set “Save trigger” to “FTP error”. (→page 51)
- When “3 mega pixel [4:3]” is selected for “Image capture mode”, alarm images cannot be transmitted to the FTP server.

### Alarm image

#### [FTP >>]

When “FTP >>” is clicked, the [FTP] tab of the “Server” page will be displayed. (→page 132)

#### [Alarm image FTP transmission]

Select “On” or “Off” to determine whether or not to transmit the alarm image to the FTP server.

- **Default:** Off

#### [Directory name]

Enter the directory name where the alarm images are to be saved.

For example, enter “/ALARM” to designate the directory “ALARM” under the root directory of the FTP server.

- **Available number of characters:** 1 - 256 characters
- **Unavailable characters:** " & ;

#### [File name]

Enter the file name used for the alarm image to be transmitted to an FTP server. The file name will be as follows.

## 13 Configure the alarm settings [Alarm]

---

File name: ["Entered file name" + "Time and date (year/ month/ day/ hour/ minute/ second)"] + "Serial number"

- **Available number of characters:** 1 - 32 characters
- **Unavailable characters:** " & \* / : ; < > ? \ |

### [Post alarm]

- **Transmission interval**  
Select the transmission interval for the alarm image transmission to the FTP server from the following.  
0.1fps/ 0.2fps/ 0.33fps/ 0.5fps/ 1fps
  - **Default:** 1fps
- **Number of images**  
Select the number of images to be transmitted from the following.  
1pic/ 2pics/ 3pics/ 4pics/ 5pics/ 6pics/ 7pics/ 8pics/ 9pics/ 10pics/ 20pics/ 30pics/ 50pics/ 100pics/ 200pics/ 300pics/ 500pics/ 1000pics/ 2000pics/ 3000pics
  - **Default:** 100pics
- **Recording duration**  
Approximate time to be taken to save the set "Number of images" with the set "Transmission interval" will be displayed.

### [Image capture size]

Select the capture size of images to be transmitted to the FTP server, images to be attached to the alarm E-mail, or images to be saved to the SD memory card.

**When "2 mega pixel [16:9]" is selected for "Image capture mode"**

1920x1080/640x360/320x180

**When "1.3 mega pixel [16:9]" is selected for "Image capture mode"**

1280x720/640x360/320x180

**When "1.3 mega pixel [4:3]" is selected for "Image capture mode"**

1280x960/VGA/QVGA

**When "3 mega pixel [4:3]" is selected for "Image capture mode"**

2048x1536 fix

- **Default:** 640x360

### Note

- When "2 mega pixel [16:9]" is selected for "Image capture mode", "1920x1080" can only be used when it is saved to the SD memory card.
- When "3 mega pixel [4:3]" is selected for "Image capture mode", "2048x1536" can only be used when it is saved to the SD memory card.

### [Image compression rate upon alarm detection]

Select "On" or "Off" to determine whether or not to change the image quality of "Quality1" (→page 76) upon alarm detection.

- **On:** Images will be transmitted with the image quality selected for "Image quality upon alarm detection".
- **Off:** Does not change the image quality upon alarm detection.
- **Default:** Off

### [Image quality upon alarm detection]

Image quality can be changed upon an alarm occurrence. Select the image quality from the following.

0 Super fine/ 1 Fine/ 2/ 3/ 4/ 5 Normal/ 6/ 7/ 8/ 9 Low

- **Default:** 5 Normal

## 13.3 Configure the settings relating to H.264 recording [Alarm]

Click the [Alarm] tab on the “Alarm” page. (→page 40, page 42)

The settings relating to the recording H.264 data on the SD memory card when an alarm is detected can be configured on this page. To operate recording, it is necessary to configure the settings relating to SD memory card and the video data. (→page 51)

### H.264 recording (SD memory card)

#### [Pre alarm]

Determine whether or not to perform the pre alarm recording.

Use/ Not use

- **Default:** Not use

#### [Pre alarm (recording) duration]

Set the duration to save image data on the SD memory card before an alarm occurrence.

1s/ 2s/ 3s/ 4s/ 5s/ 8s/ 10s/ 15s/ 20s/ 25s/ 30s/ 40s/ 50s/ 60s/ 90s/ 120s

**Default:** 5s

#### Note

- “Pre alarm (recording) duration” settings are available only when “20MB” is selected for “Maximum file size” in the [SD memory card] tab.
- When “2MB” is selected for “Maximum file size”, “Pre alarm (recording) duration” cannot be configured and about 1 MB worth of data is recorded before an alarm occurrence.

#### [Post alarm (recording) duration]

Set the duration to save image data on the SD memory card after an alarm occurrence.

10s/ 20s/ 30s/ 40s/ 50s/ 60s/ 120s/ 180s/ 240s/ 300s

- **Default:** 30s

\* The actual recording time may sometimes be longer than the duration selected for this setting.

#### [Recording (memory) size per an alarm]

The capacity of the SD memory card used to record video data upon an alarm occurrence. The actual capacity may be different.

### **IMPORTANT**

- To record H.264 data, it is required to select “Use” for “SD memory card” on the [SD memory card] tab. In addition, it is required to select “H.264(1)” or “H.264(2)” for “Recording format”. (→page 51)

## 13.4 Configure the VMD settings [VMD area]

Click the [VMD area] tab on the “Alarm” page. (→page 40, page 42)

The video motion detection areas can be set on this page.

Up to 4 areas can be set. When motion is detected in the set area, it will be regarded as an alarm.

### IMPORTANT

- The alarm occurrence indication button (→page 9) will be displayed when motion is detected by the VMD function.
- Depending on the network environment, notification may be delayed even when “Real time” is selected for “Alarm status update mode” on the [Basic] tab of the “Basic” page. (→page 46)
- After configuring the VMD area, the VMD area may move out of alignment when the JPEG/H.264 “Image capture mode” setting is changed. Make sure to check the setting after changing the “Image capture mode” setting.
- After configuring the VMD area, the VMD area may move out of alignment when “Extra zoom” is configured. Make sure to check the setting after changing the “Extra zoom” setting.
- The motion detection function is not the dedicated function to prevent thefts, fires, etc. We are not responsible for any accidents or damages that may occur.

| Area                    | 1(White)                                                       | 2(Blue)                                                       | 3(Green)                                                      | 4(Red)                                                        |
|-------------------------|----------------------------------------------------------------|---------------------------------------------------------------|---------------------------------------------------------------|---------------------------------------------------------------|
| Status                  | <input type="radio"/> On <input checked="" type="radio"/> Off  | <input type="radio"/> On <input checked="" type="radio"/> Off | <input type="radio"/> On <input checked="" type="radio"/> Off | <input type="radio"/> On <input checked="" type="radio"/> Off |
| Detection area          | 1                                                              | 1                                                             | 1                                                             | 1                                                             |
| Detection sensitivity   | Low  High<br>8                                                 | Low  High<br>8                                                | Low  High<br>8                                                | Low  High<br>8                                                |
| Delete                  | <input type="button" value="Delete"/>                          | <input type="button" value="Delete"/>                         | <input type="button" value="Delete"/>                         | <input type="button" value="Delete"/>                         |
| Light detection control | <input type="radio"/> On <input checked="" type="radio"/> Off  |                                                               |                                                               |                                                               |
| Area No. notification   | <a href="#">Panasonic alarm protocol notification &gt;&gt;</a> |                                                               |                                                               |                                                               |

\* When notifying alarm area numbers by the Panasonic alarm protocol, set "Additional alarm area data(VMD)" to "On".

VMD information addition

Information addition ☐ On ☒ Off

**[Area]**

When selecting a VMD area in the screen, it will be numbered as area 1. (Subsequent areas will be numbered in the order of selection.)

**[Status]**

Select “On” or “Off” to determine whether or not to perform video motion detection.

- **On:** Performs video motion detection.
- **Off:** Does not perform video motion detection.
- **Default:** Off

**[Detection area]**

Adjust the size of the detection area in the VMD area using the slider. The smaller the selected value is, the higher the sensitivity of VMD area becomes. The current value (1-10) will be displayed on the right of the slider.

- **Default:** 1

**[Detection sensitivity]**

Adjust the sensitivity of motion detection in the VMD area using the slider. The settings can be configured for each area individually. The larger the value is set, the higher the sensitivity level becomes.

The current value (1 (low) - 15 (high)) will be displayed below the slider.

- **Default:** 8

**[Delete] button**

Click the [Delete] button corresponding to the area to be deleted. The outline of the selected area will be deleted.

**[Light detection control]**

Select “On” or “Off” to determine whether or not to suspend video motion detection affected by brightness change such by a dimming level control.

- **Default:** Off

**IMPORTANT**

- “Light detection control” may not work when brightness change is too small.
- When “On” is selected for “Light detection control”, the video motion detection may not be performed even when detecting a subject moving over the whole screen.

**[Area No. notification]**

When “Panasonic alarm protocol notification >>” is clicked, the [Notification] tab of the “Alarm” page will be displayed. (→page 117)

**VMD information addition****[Information addition]**

Select “On” or “Off” to determine whether or not to add VMD information to superimposed image data.

The VMD information can be searched by some of Panasonic network disk recorders. Refer to the operating instructions of the connected devices for further information about the functions and settings.

- **Default:** Off

**13.4.1 Set the VMD areas [VMD area]**

Set the areas to activate the VMD function.

### IMPORTANT

- When the settings are being configured on the setup menu, sometimes the VMD function may not work correctly.
- Set the video motion detection area by dragging the mouse on the screen.
    - The designated area will become the VMD area “1(White)” and the outline will be displayed. When 2 - 4 VMD areas are set, each area will be numbered in order. The areas will be identified by the respective outline colors. The “Status” of the outline to be set for the area will become “On”.

| Area                                                                                                                | 1(White)                                                       | 2(Blue)                                            | 3(Green)                                           | 4(Red)                                             |
|---------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------|----------------------------------------------------|----------------------------------------------------|----------------------------------------------------|
| Status                                                                                                              | <input checked="" type="radio"/> On <input type="radio"/> Off  | <input type="radio"/> On <input type="radio"/> Off | <input type="radio"/> On <input type="radio"/> Off | <input type="radio"/> On <input type="radio"/> Off |
| Detection area                                                                                                      | <input type="range"/> 5                                        | <input type="range"/> 1                            | <input type="range"/> 1                            | <input type="range"/> 1                            |
| Detection sensitivity                                                                                               | Low <input type="range"/> High<br>8                            | Low <input type="range"/> High<br>8                | Low <input type="range"/> High<br>8                | Low <input type="range"/> High<br>8                |
| Delete                                                                                                              | <button>Delete</button>                                        | <button>Delete</button>                            | <button>Delete</button>                            | <button>Delete</button>                            |
| Light detection control                                                                                             | <input type="radio"/> On <input checked="" type="radio"/> Off  |                                                    |                                                    |                                                    |
| Area No. notification                                                                                               | <a href="#">Panasonic alarm protocol notification &gt;&gt;</a> |                                                    |                                                    |                                                    |
| * When notifying alarm area numbers by the Panasonic alarm protocol, set "Additional alarm area data(VMD)" to "On". |                                                                |                                                    |                                                    |                                                    |
| <button>Set</button>                                                                                                |                                                                |                                                    |                                                    |                                                    |
| VMD information addition                                                                                            |                                                                |                                                    |                                                    |                                                    |
| Information addition <input type="radio"/> On <input checked="" type="radio"/> Off                                  |                                                                |                                                    |                                                    |                                                    |
| <button>Set</button>                                                                                                |                                                                |                                                    |                                                    |                                                    |

- Adjust “Detection area” and “Detection sensitivity” using the slider.  
Refer to page 110 for further information about the “Detection sensitivity” and “Detection area”.  
The currently displayed area and its detection sensitivity will be displayed in the “Detection area” section.  
Change areas and the settings of “Detection area” and “Detection sensitivity” as necessary.
- Click the [Set] button after completing the settings.

### IMPORTANT

- The setting will not be applied unless the [Set] button is clicked.
- To invalidate the VMD area, click the [Set] button after selecting “Off” for “Status” of the VMD area to be invalidated.
    - The outline of the invalidated VMD area will turn to a dotted line. When the VMD area is invalidated, no alarm will occur even when a motion can be recognized in the area.

5. To delete the VMD area, click the [Delete] button corresponding to the area to be deleted.  
→ The outline of the respective VMD area will disappear.
6. Click the [Set] button.  
→ The edited settings will be applied.

## 13.5 Configure the settings relating to the audio detection [Audio detection]

Click the [Audio detection] tab on the “Alarm” page. (→page 40, page 42)


The settings relating to audio detection can be configured in this section. When the configured audio detection level is exceeded, the alarm action will be performed.

The audio detection level can be adjusted in 10 levels.

In order to use the perform audio detection, audio settings must be configured. (→page 102)

### IMPORTANT

- The alarm occurrence indication button will be displayed when sound is detected by the audio detection function. (→page 9)
- The alarm occurrence indication button will also be displayed when receiving an alarm input of a command alarm.
- Notification may be delayed in some network environments even when “Real time” is selected for “Alarm status update mode” on the [Basic] tab of the “Basic” page. (→page 46)
- The audio detection feature is not designed to be used in situations that require high reliability. We are not responsible for any accidents or damages that may occur.

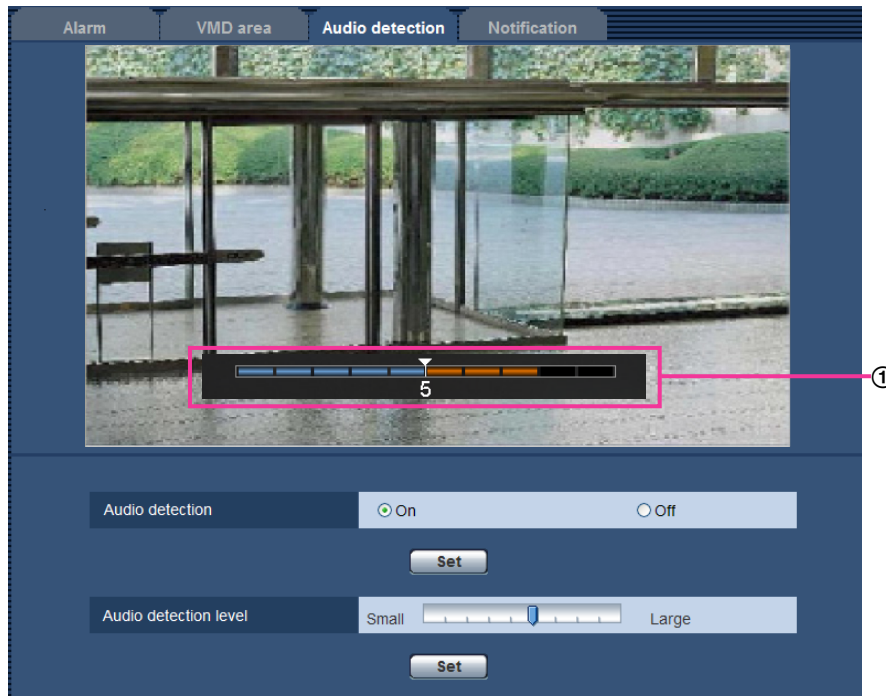

#### ① Preview

Displays a preview of the settings and the actual audio detection status.

### [Audio detection]

Select “On” or “Off” to determine whether or not to perform audio detection.

## 13 Configure the alarm settings [Alarm]

- **On:** Performs audio detection.
- **Off:** Does not perform audio detection.
- **Default:** Off

### Note


- The volume level for when audio detection is performed can be changed in “Mic input volume (Camera to PC)” on the [Audio] tab of the “Image/Audio” page. (→page 102)

### [Audio detection level]

Select the level at which the camera determines that there is sound in the area around the camera when detecting sound.

If you only want to detect loud sounds, raise the audio detection level; if you also want to detect quiet sounds, lower the audio detection level.

## Configure the audio detection level

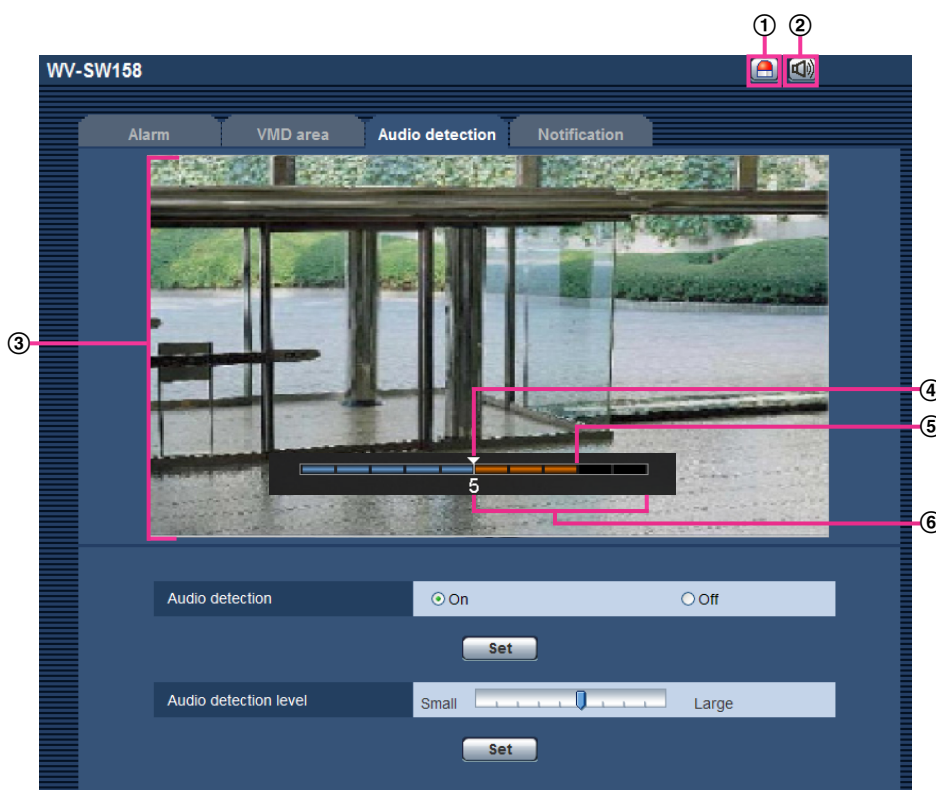

- ① Alarm occurrence indication button
- ② Mic input button
- ③ Preview screen
- ④ Audio detection level
- ⑤ The current volume level
- ⑥ Range of volumes to be detected

1. Check the audio detection level and current volume level in the preview screen.  
→ The volume level configured in “Mic input volume (Camera to PC)” on the [Audio] tab of the “Image/Audio” page is displayed in the preview.
2. Adjust the “Audio detection level” with the slider bar so that it is lower than the volume level that you want to detect.

3. Adjust the “Mic input volume (Camera to PC)” on the [Audio] tab of the “Image/Audio” page as necessary. (→Page 102)

→ The settings and the actual audio detection status are displayed on the bottom of the preview screen. If the volume level goes above the audio detection level, a red bar, which indicates that sound has been detected, is displayed.

If further adjustments are required, repeat from step 2.

#### Note

- “Audio detection” can only be used when “Mic input” is selected for “Audio mode” on the [Audio] tab of the “Image/Audio” page. (→page 102)
- Noise or other unwanted sound from the surrounding area may be mistakenly detected.
- Only the volume of the sound determines whether sound is detected or not, the type of sound does not matter.

## 13.6 Configuration of the settings relating to the E-mail notification [Notification]

Click the [Notification] tab on the “Alarm” page. (→page 40, page 42)

The settings relating to the alarm E-mail can be configured. It is necessary to configure the settings of the E-mail server to perform the E-mail notification. (→page 131)

The screenshot shows the 'Notification' tab in a web interface. At the top, there are tabs for 'Alarm', 'VMD area', 'Audio detection', and 'Notification'. Below the tabs, there is a section for 'E-mail notification' with a link 'E-mail server >>'. This section includes two rows of settings: 'E-mail notification' and 'Alarm image attachment', each with 'On' and 'Off' radio buttons. Below these is a 'Set' button. The next section is 'Destination of notification', which is a table with columns 'Alarm', 'Diag.', and 'Destination E-mail address'. There are four rows labeled 'Address 1' through 'Address 4', each with checkboxes in the 'Alarm' and 'Diag.' columns and a 'Delete' button. Below the table are fields for 'E-mail subject' and 'E-mail body'. At the bottom is another 'Set' button.

### E-mail notification

#### [E-mail server >>]

When “E-mail server >>” is clicked, the [E-mail] tab of the “Server” page will be displayed. (→page 131)

### [E-mail notification]

Select "On" or "Off" to determine whether or not to provide notification by E-mail according to the settings for the "Alarm" and "Diag." checkboxes of "Destination of notification" below.

- When an alarm is detected ("Alarm")
- When a notification of the remaining capacity of the SD memory card has been provided ("Diag.")
- When the SD memory card has become full ("Diag.")
- When the SD memory card cannot be recognized ("Diag.")
- **Default:** Off

### [Alarm image attachment]

Select "On" or "Off" to determine whether or not to attach an image to the E-mail to be sent when an alarm is detected.

- **Default:** Off

### Note

- The settings for "Image capture size" of the "Alarm image" section on the [Alarm] tab (→page 107) will be applied to the size of the image to be attached.
- When "3 mega pixel [4:3]" is selected for "Image capture mode", images cannot be attached.

## Destination of notification

### [Address 1] - [Address 4]

Enter the destination E-mail address. Up to 4 destination E-mail addresses can be registered.

- **[Alarm] checkbox:** When the checkbox is selected, the E-mail notification will be performed upon an alarm occurrence.
- **[Diag.] checkbox:** When the checkbox is selected, the E-mail notification will be provided in the following cases.
  - When notification of the remaining capacity of the SD memory card has been provided
  - When the SD memory card has become full
  - When the SD memory card cannot be recognized
- **[Destination E-mail address]:** Enter the destination E-mail address.
  - **Available number of characters:** 3 - 128 characters
  - **Available characters:** Alphanumeric characters, the at sign (@), the period (.), the underscore (\_), and the hyphen (-).

To delete the registered address, click the [Delete] button respective to the desired address.

### [E-mail subject]

Enter the E-mail subject.

- **Available number of characters:** 0 - 50 characters

### [E-mail body]

Enter the E-mail body.

- **Available number of characters:** 0 - 200 characters

### Note

- Notification E-mail will be sent with the message "The capacity of the SD memory card is full." when the SD memory card has become full, or "The SD memory card cannot be detected." when mounting of the SD memory card failed.

## 13.7 Configure the settings relating to Panasonic alarm protocol [Notification]

Click the [Notification] tab on the “Alarm” page. (→page 40, page 42)

The settings relating to Panasonic alarm protocol can be configured in this section.

Panasonic alarm protocol notification

Panasonic alarm protocol ☐ On ☒ Off

Additional alarm area data (VMD) ☐ On ☒ Off

Destination port  (1-65535)

Retry times

| Destination of notification            | Alarm                    | Diag.                    | Destination server address                                                                                                                                             |
|----------------------------------------|--------------------------|--------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Address 1<br>Notification per VMD area | <input type="checkbox"/> | <input type="checkbox"/> | <input type="text"/> <input type="button" value="Delete"/> <input type="radio"/> On <input checked="" type="radio"/> Off Alarm area No. <input type="text" value="1"/> |
| Address 2<br>Notification per VMD area | <input type="checkbox"/> | <input type="checkbox"/> | <input type="text"/> <input type="button" value="Delete"/> <input type="radio"/> On <input checked="" type="radio"/> Off Alarm area No. <input type="text" value="1"/> |
| Address 3<br>Notification per VMD area | <input type="checkbox"/> | <input type="checkbox"/> | <input type="text"/> <input type="button" value="Delete"/> <input type="radio"/> On <input checked="" type="radio"/> Off Alarm area No. <input type="text" value="1"/> |
| Address 4<br>Notification per VMD area | <input type="checkbox"/> | <input type="checkbox"/> | <input type="text"/> <input type="button" value="Delete"/> <input type="radio"/> On <input checked="" type="radio"/> Off Alarm area No. <input type="text" value="1"/> |
| Address 5<br>Notification per VMD area | <input type="checkbox"/> | <input type="checkbox"/> | <input type="text"/> <input type="button" value="Delete"/> <input type="radio"/> On <input checked="" type="radio"/> Off Alarm area No. <input type="text" value="1"/> |
| Address 6<br>Notification per VMD area | <input type="checkbox"/> | <input type="checkbox"/> | <input type="text"/> <input type="button" value="Delete"/> <input type="radio"/> On <input checked="" type="radio"/> Off Alarm area No. <input type="text" value="1"/> |
| Address 7<br>Notification per VMD area | <input type="checkbox"/> | <input type="checkbox"/> | <input type="text"/> <input type="button" value="Delete"/> <input type="radio"/> On <input checked="" type="radio"/> Off Alarm area No. <input type="text" value="1"/> |
| Address 8<br>Notification per VMD area | <input type="checkbox"/> | <input type="checkbox"/> | <input type="text"/> <input type="button" value="Delete"/> <input type="radio"/> On <input checked="" type="radio"/> Off Alarm area No. <input type="text" value="1"/> |

### Panasonic alarm protocol notification

#### [Panasonic alarm protocol]

Select “On” or “Off” to determine whether or not to provide notification by Panasonic alarm protocol according to the settings for the “Alarm” and “Diag.” checkboxes of “Destination of notification” below.

- When an alarm is detected (“Alarm”)
- When a notification of the remaining capacity of the SD memory card has been provided (“Diag.”)
- When the SD memory card has become full (“Diag.”)
- When the SD memory card cannot be recognized (“Diag.”)
- **Default:** Off

### Note

- When “On” is selected, notification of the alarm occurrence will be provided to the registered destination server addresses in order (to IP address 1 first, to IP address 8 last).

### [Additional alarm area data(VMD)]

Determine whether or not to send notifications for VMD alarm detection area numbers with the Panasonic alarm protocol by selecting On/Off.

- **Default:** Off

### [Destination port]

Select a destination port for the Panasonic alarm protocol from the following.

- **Available range:** 1 - 65535
- **Default:** 1818

The following port numbers are unavailable since they are already in use.

20, 21, 23, 25, 42, 53, 67, 68, 69, 80, 110, 123, 161, 162, 443, 995, 10669, 10670

### [Retry times]

Select a retry time for the Panasonic alarm protocol.

- **Available range:** 0-30
- **Default:** 2

## Destination of notification

### [Address 1] - [Address 8]

Enter the destination IP address or host name of the Panasonic alarm protocol from the following. Up to 8 destination server addresses can be registered.

- **[Alarm] checkbox:** When the checkbox is checked, the Panasonic alarm notification will be provided upon an alarm occurrence.
- **[Diag.] checkbox:** When the checkbox is checked, notification using Panasonic alarm protocol will be provided in the following cases.
  - When notification of the remaining capacity of the SD memory card has been provided
  - When the SD memory card has become full
  - When the SD memory card cannot be recognized
- **[Destination server address]:** Enter the destination server address or host name.
  - **Available characters:** Alphanumeric characters, the colon (:), the period (.), the underscore (\_), and the hyphen (-).

To delete the registered destination server address, click the [Delete] button respective to the desired destination server address.

### [Notification per VMD area]

Select “On” or “Off” to determine whether or not to set “Notification per VMD area”.

If “Notification per VMD area” is turned “On”, an alarm is notified only when “Alarm area No.” matches “Alarm area” configured by “VMD alarm”. Alarm notifications other than “VMD alarm” are not implemented. When using “Notification per VMD area”, select “On” for “Status” of the alarm area in VMD.

- **Default:** Off

### [Alarm area No.]

- **Available range:** 1-4
- **Default:** 1

### **IMPORTANT**


- When entering the host name of the “Destination server address”, the DNS settings on the [Network] tab of the “Network” page must be configured. (→page 136)
- Confirm that the destination IP addresses are registered correctly. When a registered destination does not exist, notification may be delayed.

## 14 Configure the settings related to advanced view [Advanced view]

Settings related to cropping and picture in picture (PiP) can be configured on the “Advanced view” page. The “Advanced view” page has the [Cropping] tab, and the [PiP] tab.

### 14.1 Configure the settings relating to cropping [Cropping]

Click the [Cropping] tab on the “Advanced view” page. (→page 40, page 42)  
Settings related to cropping can be configured on this page.

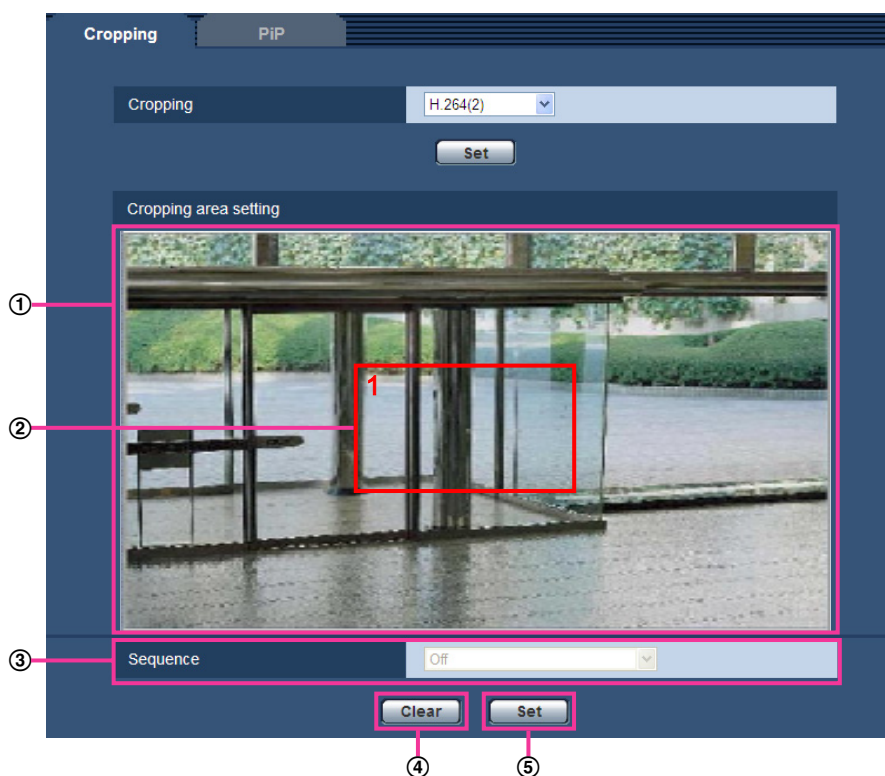

#### [Cropping]

Select whether or not to transfer “JPEG” or “H.264(2)” as cropping images.

**Off:** cropping images are not transmitted.

**H.264(2):** H.264(2) is transmitted as cropping images.

**JPEG(VGA)/JPEG(640x360):** JPEG with a resolution of VGA or 640x360 is transmitted as cropping images.

**JPEG(QVGA)/JPEG(320x180):** JPEG with a resolution of QVGA or 320x180 is transmitted as cropping images.

- **Default:** Off

#### Note

- The cropping function can be used when “2 mega pixel [16:9]”, “1.3 mega pixel [16:9]”, or “1.3 mega pixel [4:3]” is selected for “Image capture mode”.
- Changing the cropping settings temporarily stops transmission.

## Cropping area setting

### ① Full image display

Displays the full camera angle image.

### ② Cropping outline

Displays the set cropping area. Up to 4 areas can be set. When set, numbers are automatically assigned and displayed on the top left of the cropping area. When setting an area, the selected area is outlined in red. Other areas are outlined in white. A cropping outline in the default position is configured in advance. The cropping outline position can be moved by clicking and holding the configured frame and then moving it.

Clicking on the outside of the outline adds a new outline. Newly added outlines are selected.

Streams that are configured in cropping use the same cropping area as the [Cropping] display. Therefore, if the cropping outline is changed, the cropping area of streams configured in cropping are changed according to the settings of the cropping outline.

### ③ [Sequence]

Using a maximum of 4 cropping outlines, determine whether or not to operate the sequence from the following settings. The sequence operates in the order of the numbers assigned to the cropping outlines. Off/5s/10s/20s/30s

- **Default:** Off

### ④ [Clear] button

The selected outlines displayed in red are deleted. When the selected outline is deleted, the outline with the lowest number is selected. If the [Clear] button is clicked when there is only 1 outline, the outline is moved to the default position. If the [Clear] button is clicked when there is only 1 outline and it is in the default position, the outline is not deleted.

### ⑤ [Set] button

Applies the outline and sequence settings.

## IMPORTANT

- The cropping outline may move out of alignment when the “Image capture mode” setting is changed. Make sure to check the cropping outline after changing the “Image capture mode” setting.
- The cropping outline may move out of alignment when the “Extra zoom” setting is changed. Make sure to check the cropping outline after changing the “Extra zoom” setting.
- The alignment of the cropping outline displayed during configuration might be slightly changed after the [Set] button is clicked.
- The cropping function cannot be used when the picture in picture function is being used. When using the cropping function, select “Off” for “PiP”.

## 14.2 Configure the picture in picture settings [PiP]

Click the [PiP] tab on the “Advanced view” page. (→page 40, page 42)

## 14 Configure the settings related to advanced view [Advanced view]

The settings related to picture in picture can be configured on this page.

Cropping PIP

Picture in picture mode Live

Always display PIP images according to "Picture in Picture setting".

Set

Cropping area setting

Clear VMD area display

Picture in picture setting

Display position of sub image Lower right

Display size of sub image ☒ Large ☐ Small

Display type Main: Full image/ Sub: Cropped image

Frame rate Main: 15fps/ Sub: 15fps

Alarm trigger All [Alarm setup >>](#)

Set Preview screen >>

### [Picture in picture mode]

Select a picture in picture mode from the following settings.

**Off:** Images are not combined.

**Live:** Always combines images according to "Picture in picture setting".

**Alarm action 1:** Images are combined according to "Picture in picture setting" only when an alarm occurs.

**Alarm action 2:** In normal operations images are combined according to "Picture in picture setting". When an alarm occurs, the main image and sub image are switched.

**Alarm action 3:** In normal operations images are combined according to "Picture in picture setting". When an alarm occurs, the frame rate is changed.

- When "Main: 15fps/ Sub: 15fps" is selected in "Frame rate", the frame rate changes to "Main: 30fps/ Sub: 1fps".
- When "Main: 30fps/ Sub: 1fps" is selected in "Frame rate", the frame rate changes to "Main: 15fps/ Sub: 15fps".

**Alarm action 4:** Images are not combined under normal operations. When an alarm occurs, a still image of the entire screen is combined.

- **Default:** Off

**Note**

- When the picture in picture function is used, combined JPEG and H.264 images with the following image capture sizes are transmitted.
  - When “2 mega pixel [16:9]” is selected for “Image capture mode”: 1920x1080
  - When “1.3 mega pixel [16:9]” is selected for “Image capture mode”: 1280x720
  - When “1.3 mega pixel [4:3]” is selected for “Image capture mode”: 1280x960
- When “Alarm action 1”, “Alarm action 2”, “Alarm action 3”, or “Alarm action 4” is selected, you can return to normal operations after an alarm occurs by clicking the alarm occurrence indication button on the “Live” page.
- When “Live”, “Alarm action 1”, “Alarm action 2”, or “Alarm action 3” is selected, the maximum frame rate for H.264(2) is 15fps. To enable a maximum frame rate of 30fps, select “Off” or “Alarm action 4”.
- When “Alarm action 2” is selected, the “Frame rate” of “Picture in picture setting” becomes “Main: 15fps/ Sub: 15fps”.
- When “Alarm action 3” is selected, the “Display type” of “Picture in picture setting” becomes “Main: Full image/ Sub: Cropped image”.
- When “Alarm action 4” is selected, the image displayed in the sub image is updated each time an alarm occurs.
- When displayed images in the sub image for “Alarm action 4” use the same image capture size as the images to be transmitted to the FTP server, images to be attached to the alarm E-mail, or images to be saved to the SD memory card, the image displayed in the sub image may be an image of an earlier time than the image displayed for the main image.

## Cropping area setting

Configure the cropping area for the screen set for the cropping image in “Display type”. When “VMD alarm per area” is selected for “Alarm trigger”, a cropping area (up to 4 areas) can be configured for each VMD area (up to 4 areas). If any other setting is selected for “Alarm trigger”, only 1 area can be configured.

Drag the mouse over an image to specify an area. The specified area is configured as a cropping area and an outline is displayed. The position of the cropping area can be moved by clicking and holding the configured outline and then moving it.

The width that a cropping area can be set to is between 1/12 or more and 1/2 or less than the width of the entire image. (When using the Extra zoom function, the minimum width will become larger than 1/12 of the width of the entire image.)

Click the [Set] button at the very bottom of the screen to fix the area.

### [Clear] button

When “VMD alarm per area” is selected for “Alarm trigger”, the selected outlines displayed in red are deleted. If the [Clear] button is clicked when there is only 1 outline, the outline is moved to the default position. In all other cases the [Clear] button is used to return the area set in “Cropping area setting” to its default position. The [Set] button at the very bottom of the screen must be clicked after clicking the [Clear] button.

### [VMD area display] button

Click the [VMD area display] button to display the configured “VMD area”. The corresponding VMD areas and cropping areas are displayed in the same color. Click the [VMD area display] button again to stop displaying the “VMD area”.

By using this function, you can use the “VMD area” setting as a reference when configuring the cropping area.

## Picture in picture setting

### [Display position of sub image]

Select a sub image display position from the following settings.

Upper left/Lower left/Upper right/Lower right

- **Default:** Lower right

### [Display size of sub image]

Select a sub image display size from the following settings.

Large: The sub image is displayed at a size 1/3 of the width of the main screen.

Small: The sub image is displayed at a size 1/4 of the width of the main screen.

- **Default:** Large

### [Display type]

Select a display type for combined images from the following settings.

You can select the main image or sub image to be displayed as either a full screen or a cropping screen.

Main: Full image/ Sub: Cropped image or Main: Cropped image/ Sub: Full image

- **Default:** Main: Full image/ Sub: Cropped image

#### Note

- When “Main: Cropped image/ Sub: Full image” is selected, “Frame rate” becomes “Main: 15fps/ Sub: 15fps”.

### [Frame rate]

Select a frame rate for combined images from the following settings.

A frame rate for the main image and sub image can be specified.

Main: 15fps/ Sub: 15fps or Main: 30fps/ Sub: 1fps

- **Default:** Main: 15fps/ Sub: 15fps

#### Note

- When “Main: 30fps/ Sub: 1fps” is selected, “Display type” becomes “Main: Full image/ Sub: Cropped image”.
- The value set for the JPEG “Refresh interval (JPEG)\*” or H.264 “Frame rate\*” on the [H.264/JPEG] tab will be given priority for the actual frame rate.  
For example, when “30fps” is selected for the H.264 “Frame rate\*”, if “Main: 15fps/ Sub: 15fps” is selected, the frame rate operates at a maximum of 15fps. In addition, when “10fps” is selected for the H.264 “Frame rate\*”, if “Main: 15fps/ Sub: 15fps” is selected, the frame rate operates at a maximum of 10fps.
- Depending on factors such as the network environment, the resolution, the image quality, or the number of computers concurrently accessing the camera, the transmission interval may be longer than the set value.
- If images are not delivered in the specified transmission interval, you can make the images be delivered closer to the specified interval by lowering the resolution or image quality.
- When “Main: 15fps/ Sub: 15fps” is selected, the transmission interval for all images including images with image capture sizes that are not combined is a maximum of 15fps.

### [Alarm trigger]

When selecting “Alarm action 1”, “Alarm action 2”, “Alarm action 3”, or “Alarm action 4” in “Picture in picture mode”, you can select what type of alarm to be triggered by.

All/VMD alarm/Command alarm/VMD alarm per area

- **Default:** All

When “Alarm setup >>” is clicked, the [Alarm] tab of the “Alarm” page will be displayed. (→page 106)

#### Note

- When “VMD alarm per area” is selected, the cropping area corresponding to the VMD area where an alarm was detected is displayed in the sub image.
- “VMD alarm per area” can only be selected when “Alarm action 1” is selected for “Picture in picture mode”.

**[Set] button**

Applies the picture in picture settings.

**[Preview screen >>] button**

You can check the configured picture in picture image with a still image.

**Note**

- In order to check the picture in picture image in the preview screen, “Live” must be selected for “Picture in picture mode”.

**IMPORTANT**

- Settings will not be applied if the [Set] button is not clicked.
- The picture in picture function cannot be used when the cropping function is being used. When using the picture in picture function, select “Off” for “Cropping”.
- When the privacy zone and cropping area overlap, the picture in picture function will not operate. Set the cropping area so that it does not overlap the privacy zone.
- When the lens distortion compensation function is used at the same time as the picture in picture function, the cropping position of the cropping area may move out of alignment.
- If motion is detected in the area where the sub image is being combined, the actual movements cannot be viewed in the image being combined. Check the movements in an image with a different image capture size that is not being combined.
- The cropping area may move out of alignment when the “Image capture mode” setting is changed. Make sure to check the cropping area after changing the “Image capture mode” setting.
- The cropping area may move out of alignment when the “Extra zoom” setting is changed. Make sure to check the cropping area after changing the “Extra zoom” setting.

## 15 Configure the settings relating to the authentication [User mng.]

The settings relating to the authentication such as users and PCs restrictions for accessing the camera with a PC or cellular phone/mobile terminal can be configured on the “User mng.” page.

The “User mng.” page has the [User auth.] tab, the [Host auth.] tab and the [System] tab.

### 15.1 Configure the settings relating to the user authentication [User auth.]

Click the [User auth.] tab on the “User mng.” page. (→page 40, page 42)

The settings relating to the authentication of users who can access this camera from the PC or a cellular phone/mobile terminal can be configured on this page. Up to 18 users can be registered.

#### Note

- When user authentication has failed to pass (authentication error) 8 times within 30 seconds using the same IP address (PC), access to the unit will be denied for a while.

#### [User auth.]

Select “On” or “Off” to determine whether or not to authenticate the users.

- Default:** Off

#### [Authentication]

Set the user authentication method.

**Digest or Basic:** Uses Digest or Basic authentication.

**Digest:** Uses Digest authentication.

**Basic:** Uses Basic authentication.

- Default:** Digest or Basic

**Note**

- When the [Authentication] setting has been changed, close the web browser, and then access the camera again.
- For other devices such as network disk recorders, unless otherwise stated, Digest authentication is not supported. (As of December, 2011)

**[User name]**

Enter a user name.

- **Available number of characters:** 1 - 32 characters
- **Unavailable characters:** " & ; \
- **Default:** None (blank)

**[Password] [Retype password]**

Enter a password.

- **Available number of characters:** 4 - 32 characters
- **Unavailable characters:** " &
- **Default:** None (blank)

**Note**

- When the user name already in use is entered and the [Set] button is clicked, the respective user information will be overwritten.

**[Access level]**

Select the access level of the user from the following.

- **1. Administrator:** Allowed all available operations of the camera.
- **2. Camera control:** Allowed to display images from the camera and to control the camera. The camera setting configuration is unavailable.
- **3. Live only:** Only displaying live images is available. The camera setting configuration and camera control are unavailable.
- **Default:** 3. Live only

**[User check]**

From the pull-down menu of "User check", the registered user can be selected and the selected user's information can be checked.

The registered user will be displayed with the access level.

(Example: admin [1])

To delete the registered user, click the [Delete] button after selecting the user to be deleted.

## 15.2 Configure the settings relating to the host authentication [Host auth.]

Click the [Host auth.] tab on the "User mng." page. (→page 40, page 42)

## 15 Configure the settings relating to the authentication [User mng.]

The restriction settings of PCs (IP address) from accessing the camera can be configured on this page.

The screenshot shows the 'Host auth.' configuration page. It has three tabs: 'User auth.', 'Host auth.', and 'System'. The 'Host auth.' tab is selected. The page contains three main sections: 1. 'Host auth.' with radio buttons for 'On' and 'Off' (Off is selected) and a 'Set' button. 2. 'IP address' with a text input field and an 'Access level' section with radio buttons for '1. Administrator', '2. Camera control', and '3. Live only' (Live only is selected) and a 'Set' button. 3. 'Host check' with a pull-down menu showing an empty box and a 'Delete' button.

### [Host auth.]

Select "On" or "Off" to determine whether or not to authenticate the host.

- **Default:** Off

### [IP address]

Enter the IP address of the PC to be allowed to access the camera. Host name cannot be entered for the IP address.

#### Note

- When "IP address/subnet mask" is entered, it is possible to restrict PCs in each subnet. For example, when "192.168.0.1/24" is entered and "2. Camera control" is selected for the access level, the PCs whose IP address is between "192.168.0.1" - "192.168.0.254" can access the camera with the access level "2. Camera control".
- When the IP address already in use is entered and the [Set] button is clicked, the respective host information will be overwritten.

### [Access level]

Select the access level of the host from the following.

1. Administrator/ 2. Camera control/ 3. Live only

Refer to page 126 for further information about the access level.

- **Default:** 3. Live only

### [Host check]

From the pull-down menu of "Host check", the registered host can be selected and the selected host's IP address can be checked.

The registered IP address will be displayed with the access level.

(Example: 192.168.0.21 [1])

To delete the registered host, click the [Delete] button after selecting the IP address to be deleted.

## 15.3 Configure the settings relating to the priority stream [System]

Click the [System] tab on the "User mng." page. (→page 40, page 42)

The description below is the configuration of the priority stream that can transmit images without deteriorating the image quality and refresh interval even when multiple users access concurrently.

| Priority stream           |                                                               |
|---------------------------|---------------------------------------------------------------|
| Activation                | <input type="radio"/> On <input checked="" type="radio"/> Off |
| Destination IP address(1) | <input type="text"/>                                          |
| Destination IP address(2) | <input type="text"/>                                          |
| Stream type               | JPEG                                                          |
| Refresh interval*         | 1fps                                                          |
| Image capture size        | 1920x1080                                                     |

**Set**

## Priority stream

### [Activation]

Select “On” or “Off” to determine whether or not to use the priority stream.

- **Default:** Off

### Note

- When “On” is selected for “Activation” of “Priority stream”, number of users who can access the camera may be limited.

### [Destination IP address(1)]

Enter the first destination IP address.

### [Destination IP address(2)]

Enter the second destination IP address.

### [Stream type]

Select either “JPEG”, “H.264(1)” or “H.264(2)”.

- **JPEG:** JPEG images will be transmitted.
- **H.264(1):** H.264(1) images will be transmitted.
- **H.264(2):** H.264(2) images will be transmitted.
- **Default:** JPEG

### Note

- When “Best effort” is selected for “Transmission priority” of “H.264”, bit rate will vary between the maximum and minimum rates while images are being transmitted.

### [Refresh interval\*]

Select the refresh interval from the following.

This setting is validated only when “JPEG” is selected for “Stream type”.

0.1fps/ 0.2fps/ 0.33fps/ 0.5fps/ 1fps/ 2fps/ 3fps/ 5fps/ 6fps\*/ 10fps\*/ 12fps\*/ 15fps\*/ 30fps\*

- **Default:** 1fps

### **Note**

- When “On” is selected for “H.264 transmission”, the transmission interval may be longer than the set value when any value with an asterisk (\*) on the right is selected.

### **[Image capture size]**

Select the image capture size from the following.

**When “2 mega pixel [16:9]” is selected for “Image capture mode”**

1920x1080/640x360/320x180

**When “1.3 mega pixel [16:9]” is selected for “Image capture mode”**

1280x720/640x360/320x180

**When “1.3 mega pixel [4:3]” is selected for “Image capture mode”**

1280x960/VGA/QVGA

- **Default:** 1920x1080

### **Note**

- When “3 mega pixel [4:3]” is selected for “Image capture mode”, “Priority stream” cannot be used.

## 16 Configure the settings of the servers [Server]

The settings relating to the E-mail server, the FTP server and the NTP server can be configured on this page. The “Server” page has the [E-mail] tab, the [FTP] tab and the [NTP] tab.

### 16.1 Configure the settings relating to the E-mail server [E-mail]

Click the [E-mail] tab on the “Server” page. (→page 40, page 42)

The settings relating to the E-mail server used to send the alarm E-mail can be configured on this page.

#### IMPORTANT

- When a terminal that receives E-mails is not compatible with UTF-8 encode, it is impossible to receive alarm E-mails correctly.

The screenshot shows the 'E-mail' configuration tab. It includes input fields for 'SMTP server address', 'SMTP port' (with a default of 25 and a range of 1-65535), 'POP server address', and 'Sender's E-mail address'. There is also a section for 'Authentication' with a 'Type' dropdown (set to 'None') and fields for 'User name' and 'Password'. A 'Set' button is located at the bottom right of the form.

#### [SMTP server address]

Enter the IP address or the host name of the SMTP server used to send E-mails.

- Available number of characters:** 1 - 128 characters
- Available characters:** Alphanumeric characters, the colon (:), the period (.), the underscore (\_), and the hyphen (-).

#### [SMTP port]

Enter the port number to which E-mails are sent.

- Available port number:** 1-65535
- Default:** 25

The following port numbers are unavailable since they are already in use.

20, 21, 23, 42, 53, 67, 68, 69, 80, 110, 123, 161, 162, 443, 995, 10669, 10670

#### [POP server address]

When “POP before SMTP” is selected for “Type”, enter the IP address or the host name of the POP server.

- Available number of characters:** 1 - 128 characters
- Available characters:** Alphanumeric characters, the colon (:), the period (.), the underscore (\_), and the hyphen (-).

### IMPORTANT

- When entering the host name for “SMTP server address” or “POP server address”, it is necessary to configure the DNS settings on the [Network] tab of the “Network” page. (→page 136)

### [Authentication]

- **Type**

Select the authentication method to send E-mails from the following.

- **None:** It is not necessary to clear any authentication to send E-mails.
- **POP before SMTP:** It is necessary to first clear the POP server authentication to use the SMTP server to send E-mails.
- **SMTP:** It is necessary to clear the SMTP server authentication to send E-mails.
- **Default:** None

#### Note

- When you don't know the authentication method to send E-mails, refer to the network administrator.

- **User name**

Enter the user name to access the server.

- **Available number of characters:** 0 - 32 characters
- **Unavailable characters:** " & ; \

- **Password**

Enter the password to access the server.

- **Available number of characters:** 0 - 32 characters
- **Unavailable characters:** " &

### [Sender's E-mail address]

Enter the E-mail address of a sender.

The entered E-mail address will be displayed in the “From” (sender) line of the sent E-mails.

- **Available number of characters:** 3 - 128 characters
- **Available characters:** Alphanumeric characters, the at sign (@), the period (.), the underscore (\_), and the hyphen (-).

## 16.2 Configure the settings relating to the FTP server [FTP]

Click the [FTP] tab on the “Server” page. (→page 40, page 42)

The settings relating to the FTP server used to transmit the alarm images can be configured on this page.

| E-mail                                                                         | FTP | NTP |
|--------------------------------------------------------------------------------|-----|-----|
| FTP server address                                                             |     |     |
| User name                                                                      |     |     |
| Password                                                                       |     |     |
| Control port 21 (1-65535)                                                      |     |     |
| FTP mode <input checked="" type="radio"/> Passive <input type="radio"/> Active |     |     |
| Set                                                                            |     |     |

**[FTP server address]**

Enter the IP address or the host name of the FTP server.

- **Available number of characters:** 1 - 128 characters
- **Available characters:** Alphanumeric characters, the colon (:), the period (.), the underscore (\_), and the hyphen (-).

**IMPORTANT**

- When entering the host name for "FTP server address", it is necessary to configure the DNS settings on the [Network] tab of the "Network" page. (→page 136)

**[User name]**

Enter the user name (login name) to access the FTP server.

- **Available number of characters:** 1 - 32 characters
- **Unavailable characters:** " & ; \

**[Password]**

Enter the password to access the FTP server.

- **Available number of characters:** 0 - 32 characters
- **Unavailable characters:** " &

**[Control port]**

Enter a control port number to be used for the FTP server.

- **Available port number:** 1-65535
- **Default:** 21

The following port numbers are unavailable since they are already in use.

20, 23, 25, 42, 53, 67, 68, 69, 80, 110, 123, 161, 162, 443, 995, 10669, 10670

**[FTP mode]**

Select "Passive" or "Active" for the FTP mode.

Normally, select "Passive". When it is impossible to connect after select "Passive", try to connect after selecting "Active".

- **Default:** Passive

## 16.3 Configure the settings relating to the NTP server

### [NTP]

Click the [NTP] tab on the "Server" page. (→page 40, page 42)

The settings relating to the NTP server such as the NTP server address, port number, etc. can be configured on this page.

### IMPORTANT

- Use an NTP server when the more accurate time & date setting is required for the system operation.

| E-mail                                                                                        | FTP | NTP |
|-----------------------------------------------------------------------------------------------|-----|-----|
| <b>Time adjustment</b>                                                                        |     |     |
| <input checked="" type="radio"/> Manual <input type="radio"/> Synchronization with NTP server |     |     |
| <b>NTP server address setting</b>                                                             |     |     |
| Manual                                                                                        |     |     |
| <b>NTP server address</b>                                                                     |     |     |
| <input type="text"/>                                                                          |     |     |
| <b>NTP port</b>                                                                               |     |     |
| 123 (1-65535)                                                                                 |     |     |
| <b>Time adjustment interval</b>                                                               |     |     |
| 1h                                                                                            |     |     |
| <input type="button" value="Set"/>                                                            |     |     |

### [Time adjustment]

Select the time adjustment method from the following. Time adjusted by the selected method will be used as the standard time of the camera.

- **Manual:** Time set on the [Basic] tab on the “Basic” page will be used as the standard time of the camera.
- **Synchronization with NTP server:** Time automatically adjusted by synchronizing with the NTP server will be used as the standard time of the camera.
- **Default:** Manual

### [NTP server address setting]

When “Synchronization with NTP server” is selected for “Time adjustment”, select the method of how to obtain the NTP server address from the following.

- **Auto:** Obtains the NTP server address from the DHCP server.
- **Manual:** The NTP server address will be entered manually on “NTP server address”.
- **Default:** Manual

### IMPORTANT

- When obtaining the NTP server address from the DHCP server, it is necessary to select “DHCP”, “Auto(AutoIP)”, or “Auto(Advanced)” for “Network Settings” on the [Network] tab of the “Network” page. (→page 136)

### [NTP server address]

When “Manual” is selected for “NTP server address setting”, enter the IP address or the host name of the NTP server.

- **Available number of characters:** 1 - 128 characters
- **Available characters:** Alphanumeric characters, the colon (:), the period (.), the underscore (\_), and the hyphen (-).
- **Default:** None (blank)

### IMPORTANT

- When entering the host name for “NTP server address”, it is necessary to configure the DNS settings on the [Network] tab of the “Network” page. (→page 136)

### [NTP port]

Enter a port number of the NTP server.

- **Available port number:** 1 - 65535
- **Default:** 123

The following port numbers are unavailable since they are already in use.

20, 21, 23, 25, 42, 53, 67, 68, 69, 80, 110, 161, 162, 443, 995, 10669, 10670

**[Time adjustment interval]**

Select an interval (1 - 24 hours: in 1 hour intervals) of synchronization with the NTP server.

- **Default:** 1h

## 17 Configuring the network settings [Network]

The network settings and the settings relating to DDNS (Dynamic DNS) and SNMP (Simple Network management Protocol) can be configured on the “Network” page.

The “Network” page has the [Network] tab, the [DDNS] tab, the [SNMP] tab and the [FTP img. trans.] tab.

### 17.1 Configure the network settings [Network]

Click the [Network] tab on the “Network” page. (→page 40, page 42)

The following information is required to configure the network settings. Contact the network administrator or your Internet service provider.

- IP address
- Subnet mask
- Default gateway (when using the gateway server/router)
- HTTP port
- Primary DNS address, Secondary DNS address (when using DNS)

The screenshot displays the 'Network' configuration page with several tabs: Network, DDNS, SNMP, and FTP img. trans. The 'Network' tab is active, showing settings for IPv4 and IPv6 networks, common parameters, UPnP, HTTPS, and FTP access.

**IPv4 network**

Network Settings: ☒ Auto(Advanced) ☐ Manual

IP address(Pv4): 192.168.0.10

Subnet mask: 255.255.255.0

Default gateway: 192.168.0.1

DNS: ☒ Auto ☐ Manual

Primary server address: 0.0.0.0

Secondary server address: 0.0.0.0

**IPv6 network**

Manual: ☐ On ☒ Off

IP address(Pv6):

Default gateway:

DHCPv6: ☐ On ☒ Off

Primary DNS server address:

Secondary DNS server address:

**Common**

HTTP port: 80 (1-65535)

Line speed: Auto

Max RTP packet size: ☒ Unlimited(1500byte) ☐ Limited(1280byte)

HTTP max segment size(MSS): Unlimited(1460byte)

**UPnP**

Auto port forwarding: ☐ On ☒ Off

Camera short cut: ☐ On ☒ Off

**HTTPS**

CRT key generate: Execute

Self-signed Certificate: Generate Execute

Information: Not generated Confirm Delete

Generate Certificate Signing Request: Execute

CA Certificate: CA Certificate install

CA Certificate install: Browse Execute

Information: Invalid Confirm Delete

Connection: HTTP

HTTPS port: 443 (1-65535)

**FTP access to camera**

FTP access to camera: ☐ Allow ☒ Forbid

**Bandwidth control(bit rate)**

Bandwidth control(bit rate): Unlimited

**Easy IP Setup accommodate period**

Easy IP Setup accommodate period: ☒ 20min ☐ Unlimited

## IPv4 network

### [Network Settings]

Select the method of how to configure the IP address from the following.

- **Static:** The IP address is configured by entering manually on "IP address(IPv4)".
- **DHCP:** The IP address is configured using the DHCP function.
- **Auto(AutoIP):** The IP address is configured using the DHCP function. When the DHCP server is not found, the IP address is automatically configured.
- **Auto(Advanced):** Using the DHCP function, network address information is referred to, and an unused IP address is configured to the camera as a static IP address. The configured IP address is automatically determined within the subnet mask range by the camera. When the DHCP server is not found, the IP address is set to 192.168.0.10.

- **Default:** Auto(Advanced)

### **Note**

- When “Auto(AutoIP)” is selected and the IP address cannot be obtained from the DHCP server, an IP address not used in the same network will be searched within 169.254.1.0 - 169.254.254.255.

### **[IP address(IPv4)]**

When not using the DHCP function, enter the IP address of the camera. Do not enter an IP address already in use (for the PCs and the other network cameras).

- **Default:** 192.168.0.10

### **Note**

- Multiple IP addresses are unavailable even when using the DHCP function. Refer to the network administrator for further information about the settings of the DHCP server.

### **[Subnet mask]**

When not using the DHCP function, enter the subnet mask of the camera.

- **Default:** 255.255.255.0

### **[Default gateway]**

When not using the DHCP function, enter the default gateway of the camera.

- **Default:** 192.168.0.1

### **Note**

- Multiple IP addresses for the default gateway are unavailable even when using the DHCP function. Refer to the network administrator for further information about the settings of the DHCP server.

### **[DNS]**

Determine how to set the address of the DNS server by selecting “Auto” (obtain the address automatically) or “Manual” (enter the address of the DNS server). When “Manual” is selected, it is necessary to configure the settings for the DNS.

When using the DHCP function, it is possible to obtain the DNS address automatically by selecting “Auto”. Refer to the network administrator for further information about the settings.

- **Default:** Auto

### **[Primary server address], [Secondary server address]**

When “Manual” is selected for “DNS”, enter the IP address of the DNS server. Refer to the network administrator about the IP address of the DNS server.

## IPv6 network

### **[Manual]**

Select “On” or “Off” to determine whether or not to manually configure the IP address for IPv6 network (IPv6 address).

- **On:** Enter an IPv6 address manually.
- **Off:** Manual entry of an IPv6 address will become unavailable.
- **Default:** Off

### **[IP address(IPv6)]**

When “On” is selected for “Manual”, manual entry of the IPv6 address is required. Do not enter an address already in use.

**Note**

- When connecting to the manually configured IPv6 address beyond the router, use an IPv6 compatible router and turn on the automatic IPv6 address assignment function. In this case, it is necessary to configure IPv6 address including prefix information provided from the IPv6 compatible router. Refer to the manuals provided with the router for further information.

**[Default gateway]**

When “On” is selected for “Manual” of IPv6 network, enter the default gateway of IPv6 network of the camera.

**Default:** None (blank)

**[DHCPv6]**

Select “On” or “Off” to determine whether or not to use the IPv6 DHCP function.

Configure the DHCP server not to assign the same IP addresses used for the other network cameras and PCs whose IP address is unique. Refer to the network administrator for further information about the settings of the server.

- **Default:** Off

**[Primary DNS server address], [Secondary DNS server address]**

Enter the IPv6 address of the DNS server. Refer to the network administrator about the IPv6 address of the DNS server.

**Common****[HTTP port]**

Assign the port numbers independently.

- **Available port number:** 1 - 65535
- **Default:** 80

The following port numbers are unavailable since they are already in use.

20, 21, 23, 25, 42, 53, 67, 68, 69, 110, 123, 161, 162, 443, 554, 995, 10669, 10670, 59000 - 61000

**[Line speed]**

Select the line speed for data transmission from the following. It is recommended to use with the default “Auto”.

- **Auto:** Line speed will be applied automatically.
- **100M-Full:** 100 Mbps full-duplex
- **100M-Half:** 100 Mbps half-duplex
- **10M-Full:** 10 Mbps full-duplex
- **10M-Half:** 10 Mbps half-duplex
- **Default:** Auto

**[Max RTP packet size]**

Select “Unlimited(1500byte)” or “Limited(1280byte)” to determine whether or not to restrict the RTP packet size when viewing images from the camera using the RTP protocol. It is recommended to use with the default “Unlimited(1500byte)”.

When the RTP packet size is restricted in the network line in use, select “Limited(1280byte)”. Refer to the network administrator for further information about the maximum packet size in the network line.

- **Default:** Unlimited(1500byte)

**[HTTP max segment size(MSS)]**

Select “Unlimited(1460byte)”, “Limited(1280byte)”, or “Limited(1024byte)” to determine whether or not to restrict the maximum segment size (MSS) when viewing images from the camera using the HTTP protocol.

We recommended that you use this feature with the default setting.

When the MSS is restricted in the network line in use, select "Limited(1024byte)" or "Limited(1280byte)". Refer to the network administrator for further information about the MSS in the network line.

- **Default:** Unlimited(1460byte)

## UPnP

This camera support UPnP (Universal Plug and Play). By using the UPnP function, it becomes possible to configure the following automatically.

- Configuration of the port forwarding function of the router (However, a router supporting UPnP is required.) This configuration is useful when accessing the camera via the Internet, or from a cellular phone/mobile terminal.
- Automatic refreshment of the shortcut to the camera that is created on the [My Network Places] folder ([Network] folder when using Windows Vista, Windows 7, or Windows 8) of the PC even when the IP address of the camera changes.

### [Auto port forwarding]

Select "On" or "Off" to determine whether or not to use the port forwarding function of the router.

To use the port forwarding function, the router in use must support UPnP and the UPnP must be enabled.

- **Default:** Off

### Note

- Due to port forwarding, the port number may sometimes be changed. When the number is changed, it is necessary to change the port numbers registered in the PC and recorders, etc.
- The UPnP function is available when the camera is connected to the IPv4 network. IPv6 is not supported.
- To check if auto port forwarding is properly configured, click the [Status] tab on the "Maintenance" page, and check that the "Enable" is displayed for "Status" of "UPnP". (→page 174)  
When "Enable" is not displayed, refer to "Cannot access the camera via the Internet." in the "23 Troubleshooting" section. (→page 188)

### [Camera short cut]

Select whether or not to create the shortcut to the camera on the [My Network Places] folder ([Network] folder when using Windows Vista, Windows 7, or Windows 8) of the PC. When creating the shortcut, select "On".

To use the shortcut function to the camera, enable the UPnP function on the PC in advance.

- **Default:** Off

### Note

- To display the shortcut to the camera on the [My Network Places] folder ([Network] folder when using Windows Vista, Windows 7, or Windows 8) of the PC, it is necessary to add the Windows component. Refer to the following to enable the UPnP function.

#### For Windows XP

[Start] → [Settings] → [Control Panel] → [Add or Remove Programs] → [Add/Remove Windows Components] → select [Networking Services] → [Details] → check [Internet Gateway Device Discovery and Control Client] and [UPnP User Interface] → [OK] → [Next] → Complete

#### For Windows Vista

[Start] → [Control Panel] → [Network and Internet] → [Network and Sharing Center] → expand the section of [Network discovery] of [Sharing and Discovery] → select [Turn on network discovery] → click [Apply] → Complete

#### For Windows 7

[Start] → [Control Panel] → [Network and Internet] → [Network and Sharing Center] → select [Turn on network discovery] of [Network discovery] of [Change advanced sharing settings] → click [Save changes] → Complete

#### For Windows 8

[Start] → select [Apps] → [Control Panel] → [Network and Internet] → [Network and Sharing Center]  
 → select [Turn on network discovery] of [Network discovery] of [Change advanced sharing settings]  
 → click [Save changes] → Complete

## HTTPS

It is possible to enhance the network security by encrypting the access to cameras using the HTTPS function. Refer to page 144 for how to configure the HTTPS settings.

### [CRT key generate]

CRT key (SSL encryption key) used for the HTTPS protocol is generated. To generate the CRT key, click the [Execute] button to display "CRT key generate" dialog box.

### [Self-signed Certificate - Generate]

The camera itself generates the security certificate used for the HTTPS protocol. (Self-signed certificate)  
 To generate the self-signed certificate, click the [Execute] button to display the "Self-signed Certificate - Generate" dialog box.

### [Self-signed Certificate - Information]

Displays the information of the self-signed certificate.

When the [Confirm] button is clicked, the registered information of the self-signed certificate will be displayed in the "Self-signed Certificate - Confirm" dialog box.

When the [Delete] button is clicked, the generated self-signed certificate will be deleted.

### [CA Certificate - Generate Certificate Signing Request]

When using the security certificate issued by CA (Certificate Authority) as the security certificate used for the HTTPS protocol, the CSR (Certificate Signing Request) will be generated.

To generate the CSR, click the [Execute] button to display the "CA Certificate - Generate Certificate Signing Request" dialog window.

### [CA Certificate - CA Certificate install]

Installs the server certificate (security certificate) issued by CA (Certificate Authority) and displays the information of the installed server certificate.

To install the server certificate, click the [Browse...] button to display the [Open] dialog box, and select the file of the server certificate issued by CA, and click the [Execute] button.

If the server certificate is already installed, the file name of the installed server certificate will be displayed.

### [CA Certificate - Information]

Displays the information of the server certificate.

When the [Confirm] button is clicked, the registered information of the installed server certificate will be displayed in the "CA Certificate - Confirm" dialog box. If the server certificate is not installed, the content of the generated CSR file will be displayed.

When the [Delete] button is clicked, the installed server certificate will be deleted.

## IMPORTANT

- Before deleting the valid server certificate (security certificate), confirm that there is a backup file on the PC or another media. The backup file will be required when installing the server certificate again.

### [Connection]

Select the protocol used to connect the camera.

- **HTTP:** Only the HTTP connection is available.
- **HTTPS:** Only the HTTPS connection is available.
- **Default:** HTTP

### [HTTPS port]

Designate the HTTPS port number to be used.

- **Available port number:** 1 - 65535
- **Default:** 443

The following port numbers are unavailable since they are already in use.

20, 21, 23, 25, 42, 53, 67, 68, 69, 80, 110, 123, 161, 162, 554, 995, 10669, 10670, 59000-61000

### Note

- The camera will restart after the connection setting is changed.
- **When using the self-signed certificate:**  
If the camera is accessed using the HTTPS protocol for the first time, the warning window will be displayed. In this case, follow the instructions of the wizard to install the self-signed (security) certificate. (→page 151)
- **When using the server certificate:**  
In advance, install the root certificate and intermediate certificate on the browser in use. Follow the instructions of CA for how to obtain and install these certificates.
- When the camera is accessed using the HTTPS protocol, the refresh interval and frame rate of images may be lower.
- When the camera is accessed using the HTTPS protocol, it may take time to display images.
- When the camera is accessed using the HTTPS protocol, the images may be distorted or audio may be interrupted.
- The maximum number of concurrent access user varies depending on the maximum image size and transmission format.

### [FTP access to camera]

Select "Allow" or "Forbid" to determine whether to allow or forbid the FTP access to camera.

- **Default:** Forbid

### [Bandwidth control(bit rate)]

Select the total bit rate for data transmission from the following.

Unlimited/ 64kbps/ 128kbps/ 256kbps/ 384kbps/ 512kbps/ 768kbps/ 1024kbps/ 2048kbps/ 4096kbps/ 8192kbps

- **Default:** Unlimited

### Note

- When selecting "64kbps", select "Off" for "Audio mode" on the "Audio" tab. (→page 102)
- Select "128kbps" or a faster rate to carry out the live transmission of JPEG images and the FTP periodic image transmission simultaneously.
- When "Bandwidth control(bit rate)" is set low, taking a picture using the snap shot button may not function depending on the use environment. In this case, select "QVGA" for "Image capture size" of "JPEG" on the [JPEG/H.264] tab or set "Image quality setting" of "JPEG" lower.


### [Easy IP Setup accommodate period]

Select "20min" or "Unlimited" to determine how long the network setting operation using the Panasonic "IP Setting Software" can be allowed.

- **20min:** The network setting operation using the Panasonic "IP Setting Software" are allowed for 20 minutes since the camera starts up.
- **Unlimited:** The network setting operation using the Panasonic "IP Setting Software" are allowed without time limitation.
- **Default:** 20min

**Note**

- The camera information display using the Panasonic “IP Setting Software” is allowed without time limitation, and camera images can be opened.
- Refer to the network administrator for the addresses of each server.
- The port forwarding function changes a global IP address to a private IP address, and “Static IP masquerade” and “Network Address Translation (NAT)” have this function. This function is to be set in a router.
- To access the camera via the Internet by connecting the camera to a router, it is necessary to assign a respective HTTP port number for each camera and address translation by using the port forwarding function of the router. For further information, refer to the operating instructions of the router in use.

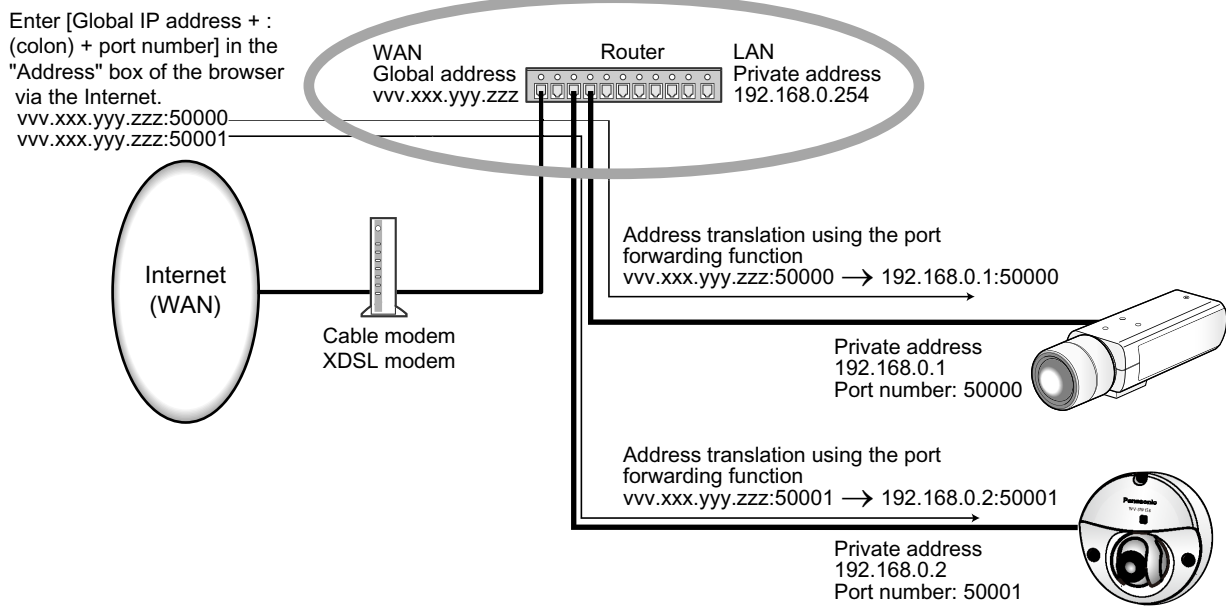


## 17.2 Configure the HTTPS settings

Click the [Network] tab on the “Network” page. (→page 40, page 42)

The settings relating to the HTTPS protocol that can enhance the network security by encrypting the access to cameras on this page.

The HTTPS settings will be configured in the following procedure.

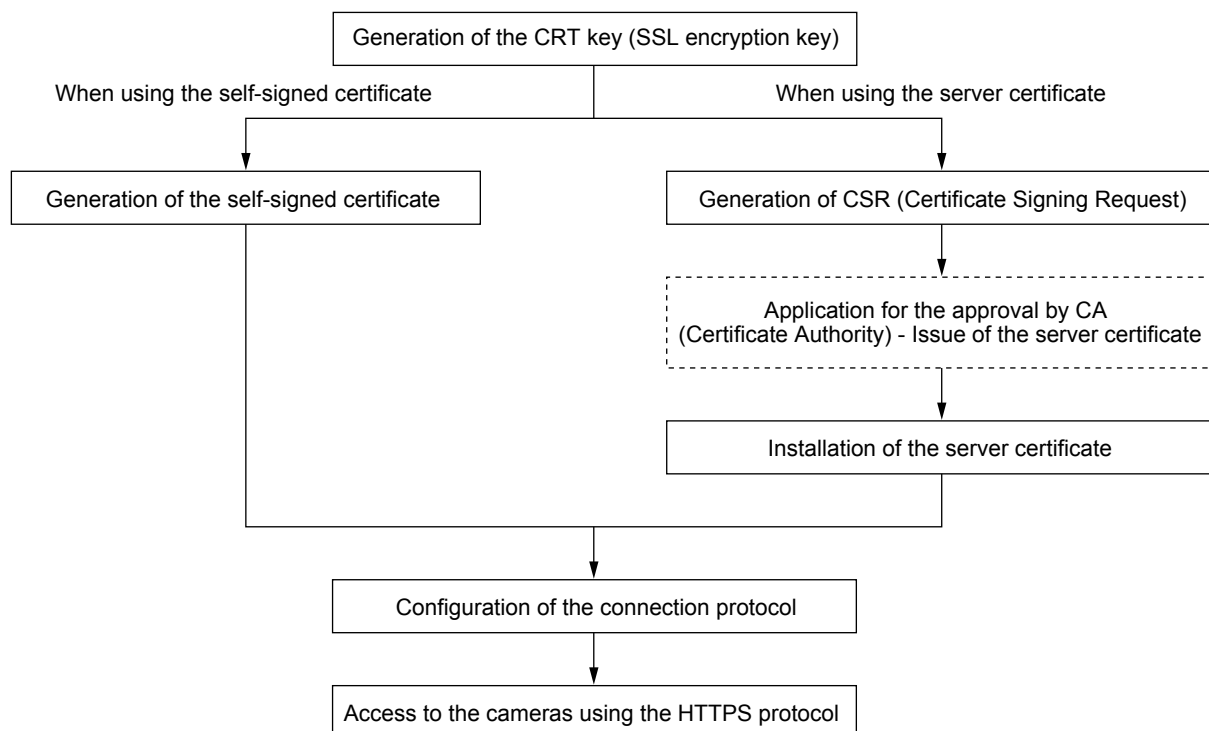

The screenshot shows the 'HTTPS' configuration page. It has a table-like structure with sections for 'CRT key generate', 'Self-signed Certificate', 'CA Certificate', 'Connection', and 'HTTPS port'. Numbered callouts point to specific elements: ① points to the 'Execute' button for 'CRT key generate'; ② points to the 'Generate' button for 'Self-signed Certificate'; ③ points to the 'Execute' button for 'Generate Certificate Signing Request'; ④ points to the 'Execute' button for 'CA Certificate install'; ⑤ points to the 'Connection' dropdown menu.

- ① Generation of the CRT key (SSL encryption key) (→page 145)
- ② Generation of the self-signed certificate (→page 146)
- ③ Generation of CSR (Certificate Signing Request) (→page 148)
- ④ Installation of the server certificate (→page 149)
- ⑤ Configuration of the connection protocol (→page 150)

**Note**

- To use the server certificate, you need to apply for the approval and the issue of server certificate by CA.
- Either of the self-signed certificate or the server certificate is available. If both of them are installed, the server certificate will be used prior to the self-signed certificate.

## 17.2.1 Generation of the CRT key (SSL encryption key)

**IMPORTANT**

- When the self-signed certificate or server certificate is valid, it is impossible to generate the CRT key.
  - When the server certification is used, the available key size varies depending on the Caches the available key size in advance.
  - To generate the CRT key, it may take about 1 minute when the key size is 1024 bit and about 2 minutes when the key size is 2048 bit. Do not operate the web browser until the generation of CRT key is complete. While the CRT key is being generated, the refresh interval and line speed may be lower.
1. Click the [Execute] button of “CRT key generate”.  
→ The “CRT key generate” dialog box will be displayed.

| Current CRT key         |               |
|-------------------------|---------------|
| CRT key                 | RSA key size  |
|                         | Last modified |
|                         | Not generated |
| <a href="#">History</a> |               |

| CRT key generate |                                                                                                |
|------------------|------------------------------------------------------------------------------------------------|
| RSA key size     | <input checked="" type="radio"/> 1024bit <input type="radio"/> 2048bit <a href="#">Execute</a> |

\*Generating a CRT key takes around 2 minutes.

[Close](#)

2. Select “1024bit” or “2048bit” for the length of the CRT to generate for “CRT key generate” - “RSA key size”.

**Note**

- To use the server certificate, follow the requests from the CA about the RSA key size.


3. Click the [Execute] button.

→ The generation of CRT key will be started. When the generation is finished, the key size and generation time & date of the generated key will be displayed on “Current CRT key”.

**Note**

- To change (or update) the generated CRT key, perform step 1 to 3. The CRT key, self-signed certificate and server certification are valid in a set. When the CRT key is changed, it is necessary to re-generate the self-signed certificate or re-apply for the server certificate.
- When the CRT key is updated, the log of the previous CRT key is saved. When the [History] button of “Current CRT key” on the “CRT key generate” dialog box is clicked, the “Previous CRT key” dialog box will be displayed, and it is possible to check the key size and generation time & date of the previous

key. When the [Apply] button is clicked on the “Previous CRT key” dialog box, it is possible to replace the current CRT key with the previous one.

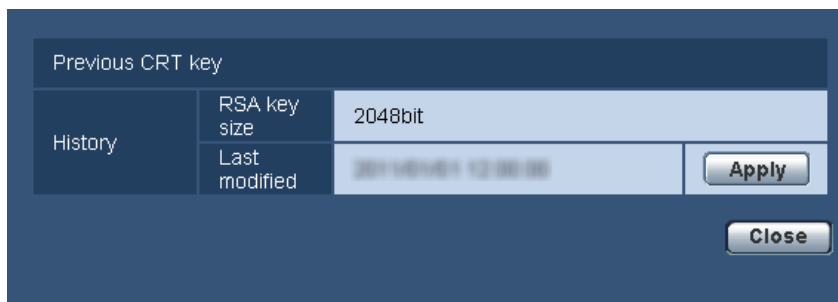

The dialog box titled "Previous CRT key" has a table with the following data:


| Previous CRT key |               |                     |
|------------------|---------------|---------------------|
| History          | RSA key size  | 2048bit             |
|                  | Last modified | 2017-05-01 12:00:00 |

Buttons: [Apply], [Close]

## 17.2.2 Generation of the self-signed certificate (security certificate)

### IMPORTANT

- If the CRT key is not generated, it is impossible to generate the self-signed certificate.
- Click the [Execute] button of “Self-signed Certificate - Generate”.  
→ The “Self-signed Certificate - Generate” dialog box will be displayed.

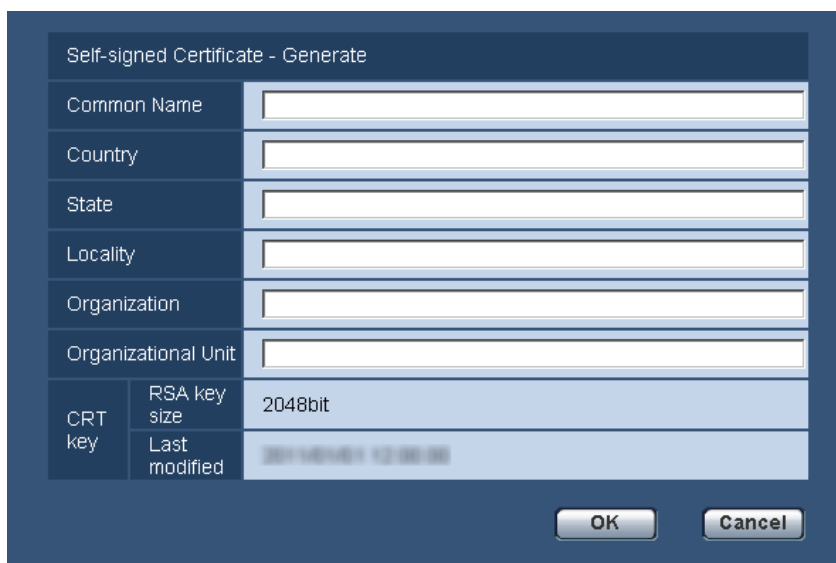

The dialog box titled "Self-signed Certificate - Generate" contains the following fields:

|                     |                      |                     |
|---------------------|----------------------|---------------------|
| Common Name         | <input type="text"/> |                     |
| Country             | <input type="text"/> |                     |
| State               | <input type="text"/> |                     |
| Locality            | <input type="text"/> |                     |
| Organization        | <input type="text"/> |                     |
| Organizational Unit | <input type="text"/> |                     |
| CRT key             | RSA key size         | 2048bit             |
|                     | Last modified        | 2017-05-01 12:00:00 |

Buttons: [OK], [Cancel]

- Enter the information of the certificate to be generated.

| Item           | Description                                    | Available number of characters |
|----------------|------------------------------------------------|--------------------------------|
| [Common Name]  | Enter the camera address or host name.         | 64 characters                  |
| [Country]      | Enter the country name. (Omission is OK.)      | 2 characters (Country code)    |
| [State]        | Enter the state name. (Omission is OK.)        | 128 characters                 |
| [Locality]     | Enter the locality name. (Omission is OK.)     | 128 characters                 |
| [Organization] | Enter the organization name. (Omission is OK.) | 64 characters                  |

| Item                  | Description                                                          | Available number of characters |
|-----------------------|----------------------------------------------------------------------|--------------------------------|
| [Organizational Unit] | Enter the unit name of the organization.<br>(Omission is OK.)        | 64 characters                  |
| [CRT key]             | Displays the key size and generation time & date of the current key. |                                |

**Note**

- The available characters for [Common Name], [State], [Locality], [Organization], [Organizational Unit] are 0-9, A-Z, a-z and the following marks.  
- . \_ , + / ( )
- When the camera is connected to the Internet, enter the address name or host name to access via the Internet for "Common Name". In this case, the security alert window will be displayed each time the camera is locally accessed, even if the security certificate is installed.
- When entering the IPv6 address for "Common Name", put the address in brackets [ ].

**Example:** [2001:db8::10]

- Click the [OK] button after entering the items.  
→ The self-signed certificate will be generated.

**Note**

- The information of the generated self-signed certificate will be displayed on "Self-signed Certificate" - "Information".

Depending on the status of the self-signed certificate, the following are displayed.

| Indication                                 | Description                                                                                                                                                                                                 |
|--------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Not generated                              | The self-signed certificate are not generated.                                                                                                                                                              |
| Invalid (Reason: CA Certificate installed) | The self-signed certificate has already been generated, and the server certificate has been installed. <ul style="list-style-type: none"> <li>In this case, the server certificate is validated.</li> </ul> |
| Common name of the self-signed certificate | The self-signed certificate has already been generated and validated.                                                                                                                                       |

- When the [Confirm] button is clicked, the registered information of the self-signed certificate (security certificate) will be displayed in the "Self-signed Certificate - Confirm" dialog box.

Self-signed Certificate - Confirm

|                     |               |                     |
|---------------------|---------------|---------------------|
| Common Name         | NWCAM         |                     |
| Country             |               |                     |
| State               |               |                     |
| Locality            |               |                     |
| Organization        |               |                     |
| Organizational Unit |               |                     |
| CRT key             | RSA key size  | 2048bit             |
|                     | Last modified | 2011-05-01 12:00:00 |

Close

- When the [Delete] button is clicked, the generated self-signed certificate (security certificate) will be deleted.
- When “HTTPS” is selected for “Connection”, it is impossible to delete the self-signed certificate.

### 17.2.3 Generation of CSR (Certificate Signing Request)

#### IMPORTANT

- If the CRT key is not generated, it is impossible to generate the CSR.
  - Before generating the CSR file, configure the following settings on [Internet Options] of the web browser in advance. Click [Internet Options...] under [Tools] of the menu bar of Internet Explorer, and then click the [Security] tab.
    - Register the camera for [Trusted Sites].
    - Click the [Custom Level...] button to open the [Security Setting] window, and check the [Enable] radio button of [File Download] under [Downloads].
    - Click the [Custom Level...] button to open the [Security Setting] window, and check the [Enable] radio button of [Automatic prompting for file downloads] under [Downloads].
1. Click the [Execute] button of “CA Certificate - Generate Certificate Signing Request”.  
→ The “CA Certificate - Generate Certificate Signing Request” dialog box will be displayed.

2. Enter the information of the certificate to be generated.

| Item                  | Description                              | Available number of characters |
|-----------------------|------------------------------------------|--------------------------------|
| [Common Name]         | Enter the camera address or host name.   | 64 characters                  |
| [Country]             | Enter the country name.                  | 2 characters (Country code)    |
| [State]               | Enter the state name.                    | 128 characters                 |
| [Locality]            | Enter the locality name.                 | 128 characters                 |
| [Organization]        | Enter the organization name.             | 64 characters                  |
| [Organizational Unit] | Enter the unit name of the organization. | 64 characters                  |

| Item      | Description                                                          | Available number of characters |
|-----------|----------------------------------------------------------------------|--------------------------------|
| [CRT key] | Displays the key size and generation time & date of the current key. |                                |

**Note**

- To use the server certificate, follow the requests from the CA about the information to be entered.
  - The available characters for [Common Name], [State], [Locality], [Organization], [Organizational Unit] are 0-9, A-Z, a-z and the following marks.  
- . \_ , + / ( )
3. Click the [OK] button after entering the items.  
→ The [Save As] dialog box will be displayed.
  4. Enter a file name for the CSR in the [Save As] dialog box to save on the PC.  
→ The saved CSR file will be applied to the CA.

**IMPORTANT**

- The server certificate will be issued for the set of the generated CSR and CRT key. If the CRT key is re-generated or updated after applying to the CA, the issued server certificate will be invalidated.

**Note**

- This camera generates the CSR file in the PEM format.

## 17.2.4 Installation of the server certificate

**IMPORTANT**

- If the CSR file is not generated, it is impossible to install the server certificate (security certificate). For the installation, the server certificate issued by CA is required.
1. Click the [Browse...] button of "CA Certificate - CA Certificate install".  
→ The [Open] dialog box will be displayed.
  2. Select the server certification file and click the [Open] button. Then, click the [Execute] button.  
→ The server certification will be installed.

**Note**

- The host name registered in the installed server certificate will be displayed on "CA Certificate - Information". Depending on the status of the server certificate, the following are displayed.

| Indication                            | Description                                                      |
|---------------------------------------|------------------------------------------------------------------|
| Invalid                               | The server certification is not installed.                       |
| Common name of the server certificate | The server certificate has already been installed and validated. |
| Expired                               | The server certification has already expired.                    |

## 17 Configuring the network settings [Network]

- When the [Confirm] button is clicked, the registered information of the installed server certificate will be displayed in the “CA Certificate - Confirm” dialog box. (Only “Organizational Unit” will be displayed with an asterisk (\*).)

| CA Certificate - Confirm |                  |
|--------------------------|------------------|
| Common Name              | NWCAM            |
| Country                  | JP               |
| State                    | Kagawa           |
| Locality                 | Takamatsu        |
| Organization             | Panasonic        |
| Organizational Unit      | Group            |
| CRT key                  |                  |
| RSA key size             | 2048bit          |
| Last modified            | 2014/01/13 00:00 |

Close

- When the [Delete] button is clicked, the installed server certificate will be deleted.
- When “HTTPS” is selected for “Connection”, it is impossible to delete the server certificate.
- To change (or update) the server certificate, perform step 1 and 2.

### IMPORTANT

- Before deleting the valid server certificate (security certificate), confirm that there is a backup file on the PC or another media. The backup file will be required when installing the server certificate again.
- When the server certificate has expired, the HTTPS function will become unavailable. When the camera is restarted, the connection protocol will be changed to HTTP. Update the server certificate before it expires.
- The expiration date of the server certificate can be checked by double-clicking the server certification file issued by CA.

## 17.2.5 Configuration of the connection protocol

- Select “HTTP” or “HTTPS” for “Connection” to determine the protocol used to access the camera.
  - HTTP:** Only the HTTP connection is available.
  - HTTPS:** Only the HTTPS connection is available.
- Designate the HTTPS port number to be used for “HTTPS port”.
  - Available port number:** 1 - 65535
  - Default:** 443

The following port numbers are unavailable since they are already in use.  
20, 21, 23, 25, 42, 53, 67, 68, 69, 80, 110, 123, 161, 162, 554, 995, 10669, 10670, 59000 - 61000
- Click the [Set] button.
  - The camera will restart, and it will become possible to access to the cameras using the HTTPS protocol. (→page 7, page 16, page 18)

### Note

- The camera will restart after the connection setting is changed.
- When using the self-signed certificate:**  
If the camera is accessed using the HTTPS protocol for the first time, the warning window will be displayed. In this case, follow the instructions of the wizard to install the self-signed (security) certificate. (→page 151)

- **When using the server certificate:**  
In advance, install the root certificate and intermediate certificate on the browser in use. Follow the instructions of CA for how to obtain and install these certificates.
- When the camera is accessed using the HTTPS protocol, the refresh interval and frame rate of images may be lower.
- When the camera is accessed using the HTTPS protocol, it may take time to display images.
- When the camera is accessed using the HTTPS protocol, the images may be distorted or audio may be interrupted.
- The maximum number of concurrent access user varies depending on the maximum image size and transmission format.

## 17.3 Access the camera using the HTTPS protocol

1. Start up the web browser.
2. Enter the IP address of the camera in the address box of the browser.
  - **Example of entry:** https://192.168.0.10/

### **IMPORTANT**

- When the HTTPS port number is changed from “443”, enter “https://IP address of the camera + : (colon) + port number” in the address box of the browser.  
(**Example:** https://192.168.0.11:61443)
  - When the camera is in a local network, configure the proxy server setting of the web browser (under [Internet Options...] under [Tools] of the menu bar) to bypass the proxy server for the local address.
3. Press the [Enter] key on the keyboard.
    - The “Live” page will be displayed.
    - When the security alert window is displayed, install the security certificate. (→page 152)
    - When “On” is selected for “User auth.”, the authentication window will be displayed before displaying live images for the user name and password entries.

### **IMPORTANT**

- When the camera is accessed using the HTTPS protocol, the refresh interval and frame rate of images may be lower.

### 17.3.1 Install the security certificate

When the security certificate of the camera to access is not installed on the PC, the security alert window will be displayed each time the camera is accessed using the HTTPS protocol. To have the security alert window not displayed, it is necessary to install the security certificate in the following procedure. If the certificate is not installed, the alert window will be displayed each time the camera is accessed.

#### **Note**


- The security certificate is installed on the PC with the information registered for “Common Name”. Therefore, the information registered for “Common Name” must be same as the address or host name for the camera access. If the certificate is not the same, the security alert window will be displayed each time the camera is accessed.
- When the address or host name of the camera is changed, the security alert window will be displayed each time the camera is accessed even if the security certificate is installed. Install the security certificate again.

- When the camera access is open to the Internet, enter the address name or host name to access via the Internet for “Common Name”. In this case, the security alert window will be displayed each time the camera is locally accessed, even if the security certificate is installed.
- When the security certificate is properly installed, a key icon is displayed in the address box of the web browser that has accessed the camera. (When using Internet Explorer 7, Internet Explorer 8, or Internet Explorer 9)

### When using Internet Explorer 7, Internet Explorer 8, Internet Explorer 9, or Internet Explorer 10

#### **Note**

- When using Internet Explorer 7 or Internet Explorer 8 with Windows XP, note that some of the displayed windows may differ from the following descriptions.
  - When using Internet Explorer 10, note that some of the displayed windows may differ from the following descriptions.
1. Access the camera using the HTTPS protocol.
  2. When the security alert window is displayed, click “Continue to this website (not recommended).”

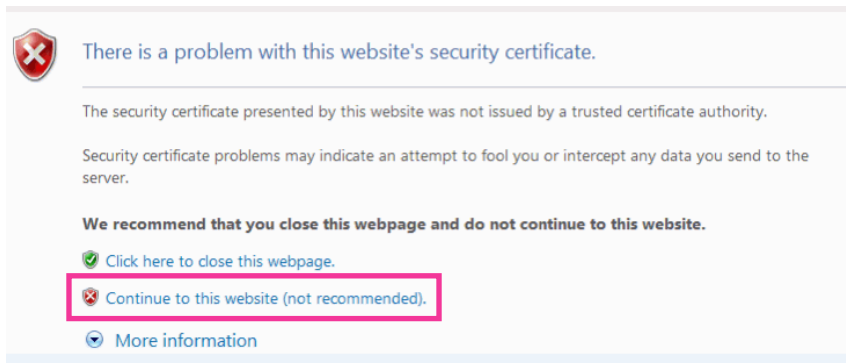


→ The “Live” page will be displayed. If an authentication window is displayed, enter the user name and password.


#### **Note**

- If this window is displayed when accessing a device other than the camera or a website, a security problem may have occurred. In this case, check the system status.

3. Click “Certificate Error” over the URL, and click “View certificates”.

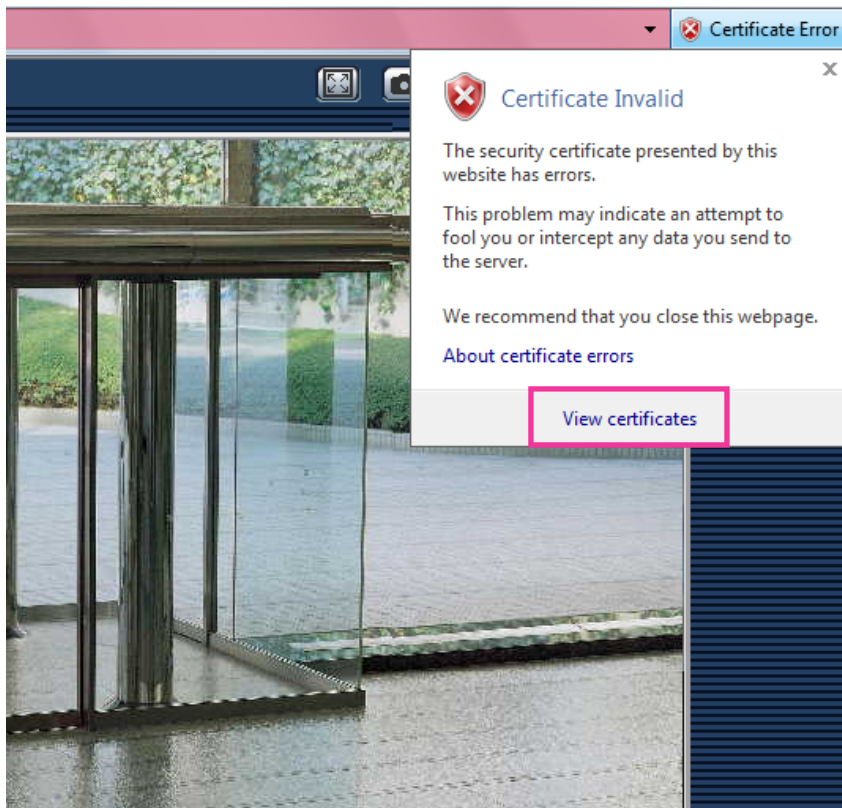


4. Click “Install Certificate...”.

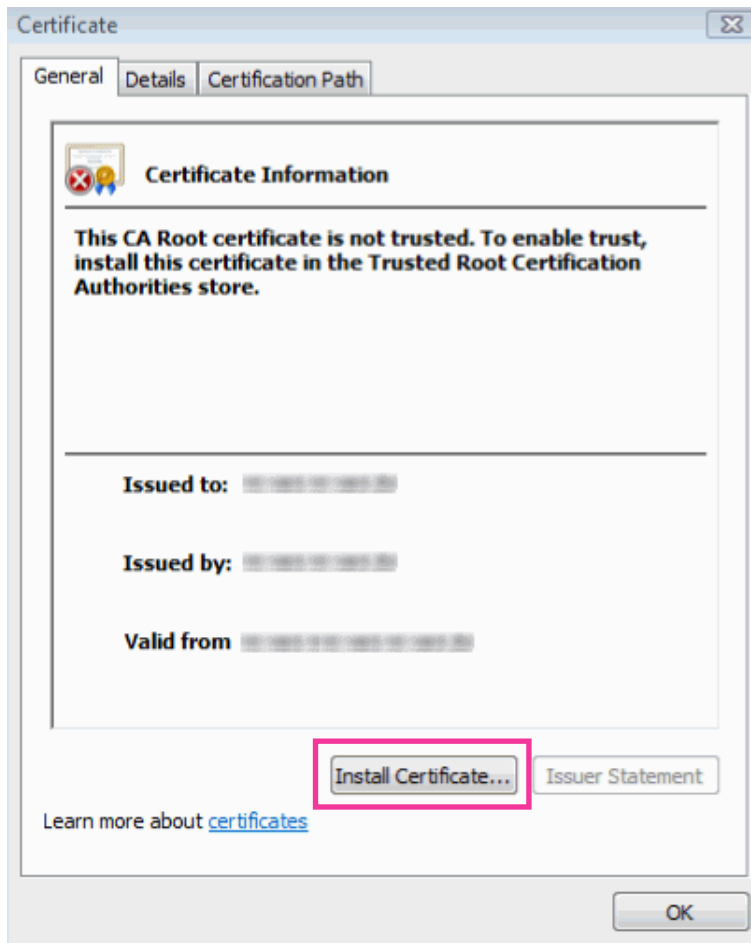


### Note

- If [Install Certificate...] is not displayed, close Internet Explorer once, and select [Run as Administrator] to launch Internet Explorer again. Click [Start] → [All Programs] → right click [Internet Explorer] → click [Run as Administrator].
- When using Windows 8, right click [iexplore] under “C:\Program Files\Internet Explorer” and select [Run as Administrator].


5. Click “Next” displayed on “Certificate Import Wizard”.

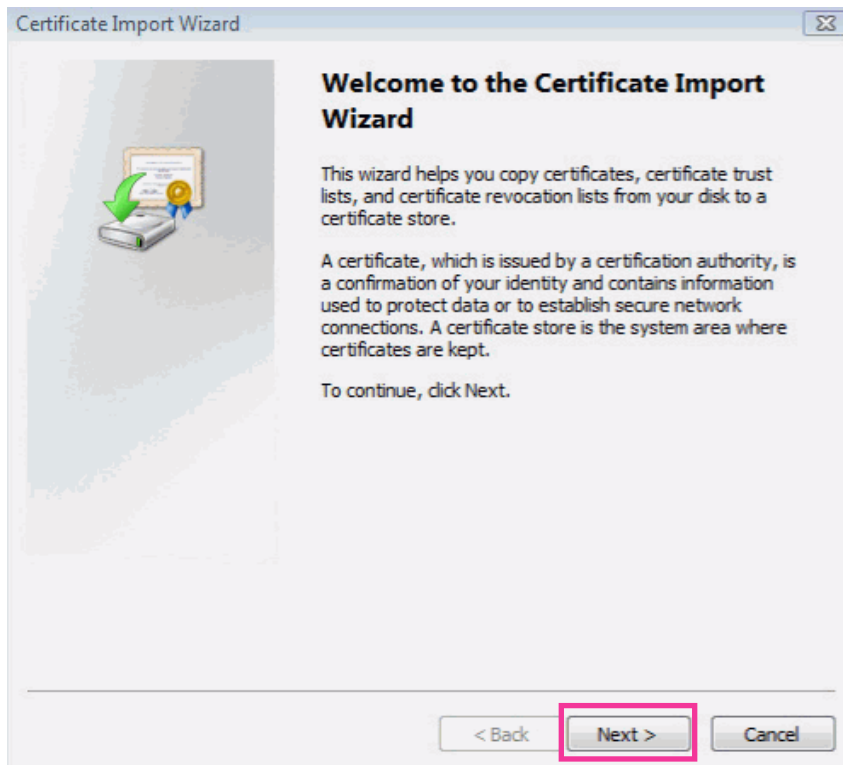


6. Select “Place all certificates in the following store”, and click “Browse...”.

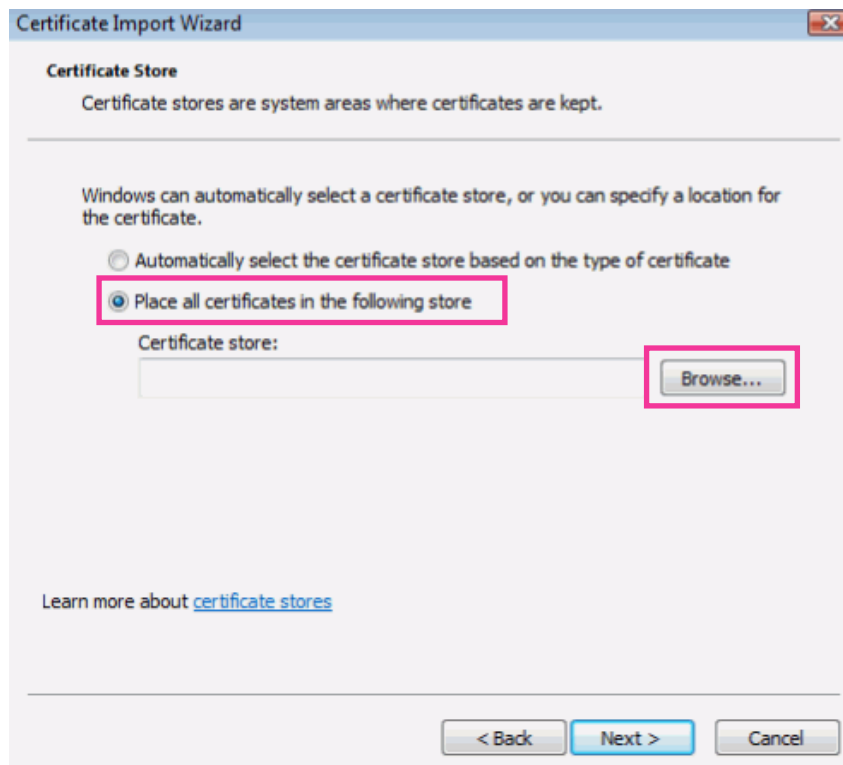


7. Select “Trusted Root Certificate Authorities”, and click “OK”.

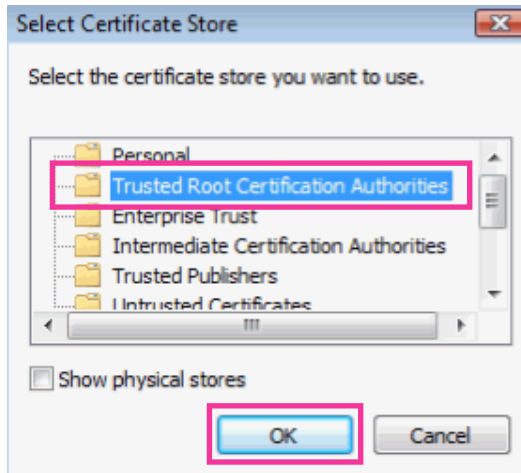


8. Click “Next”.

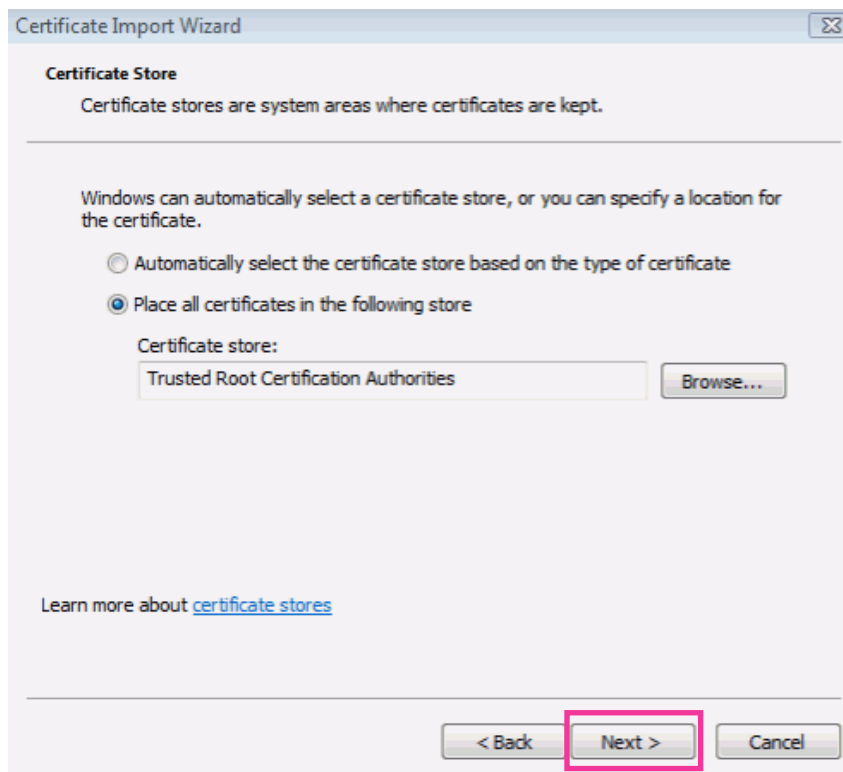

9. Click "Finish".

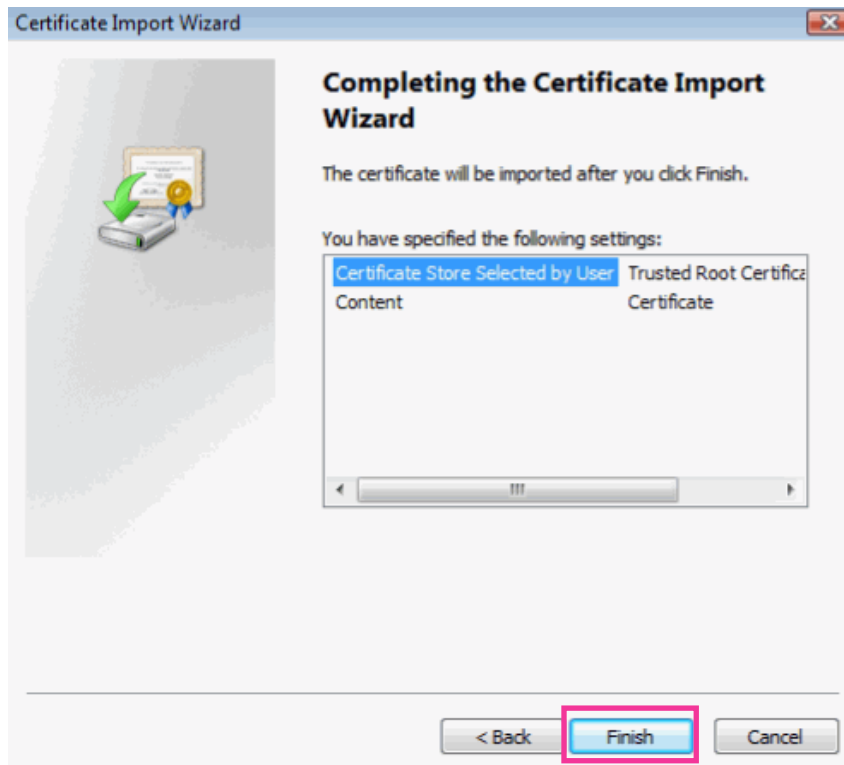


10. Click "Yes".

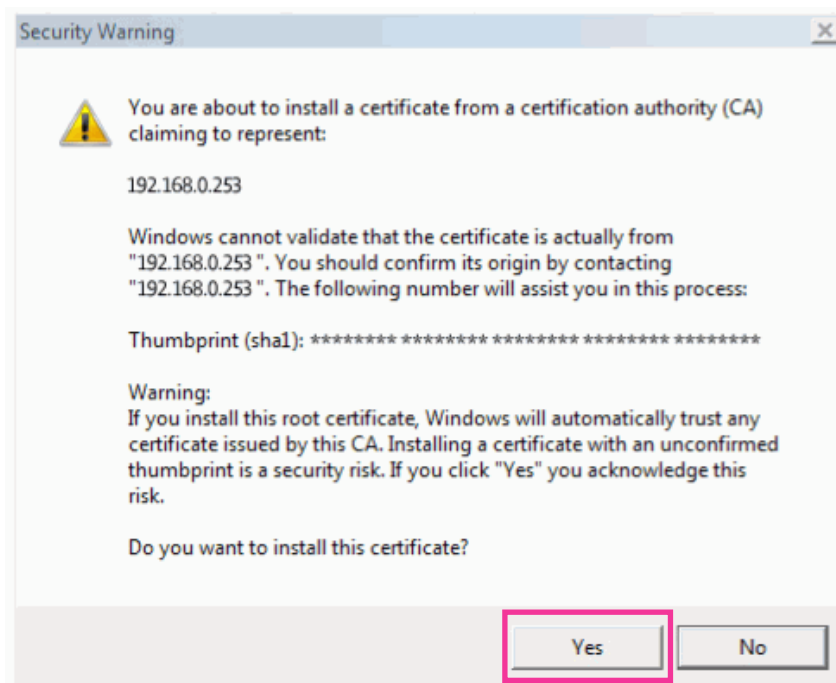

→ When the import is successfully completed, the screen "The import was successful." will be displayed.

### 11. Click "OK".

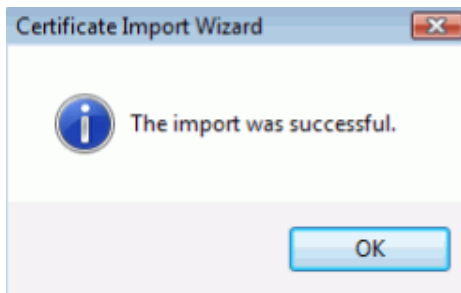

→ When the browser is restarted after the certificate is imported, "Certificate Error" will not be displayed.

## 17.4 Configure the settings relating to DDNS [DDNS]

Click the [DDNS] tab on the "Network" page. (→page 40, page 42)

To access this camera via the Internet, it is necessary to configure the settings for the DDNS function.

When activating the DDNS function using the camera, either of the following DDNS services is available.

- "Viewnetcam.com" service
- Dynamic DNS Update (RFC2136 compliant)

### **IMPORTANT**

- Before using the DDNS service, it is necessary to perform the port forwarding setting for the router.
- **About Dynamic DNS Update (RFC2136 compliant)**  
Operation using DDNS services other than the "Viewnetcam.com" service is not guaranteed. We are not responsible for any troubles or accidents on the circumstances where the camera is used arising out of such services.  
Refer to the DDNS service providers for the selection and configuration of the DDNS services other than the "Viewnetcam.com" service.

### **Note**

- "Viewnetcam.com" is a Dynamic DNS service designed for use with Panasonic Network Cameras. Refer to the "Viewnetcam.com" website (<http://www.viewnetcam.com/>) for further information about the service.

## About DDNS services (IPv4/IPv6)

By using a DDNS service, it becomes possible to view camera images via the Internet.


The DDNS service associates dynamic global addresses and domain names.

It is possible to configure the settings for the "Viewnetcam.com" or Dynamic DNS Update (RFC2136 compliant).

In most of the DNS services offered by providers, global addresses are not static but dynamic. Therefore, access to the camera via an old global address may be invalidated after a certain period of time. Either of the following services is required when accessing a camera whose global address is not static via the Internet.

- **DDNS service (such as "Viewnetcam.com")**  
It is possible to access via a registered and static domain name (example: \*\*\*\*\*.viewnetcam.com) even after the global address is changed. Enrollment in a domain name service is required even when using the IPv6 connection.  
Refer to the "Viewnetcam.com" website (<http://www.viewnetcam.com/>) for further information about the service.
- **Static IP address service (such as a service offered by a contracted provider)**  
In this service, global addresses are static (not changed).

### 17.4.1 Configuration of the DDNS service (Example of the “Viewnetcam.com” service)

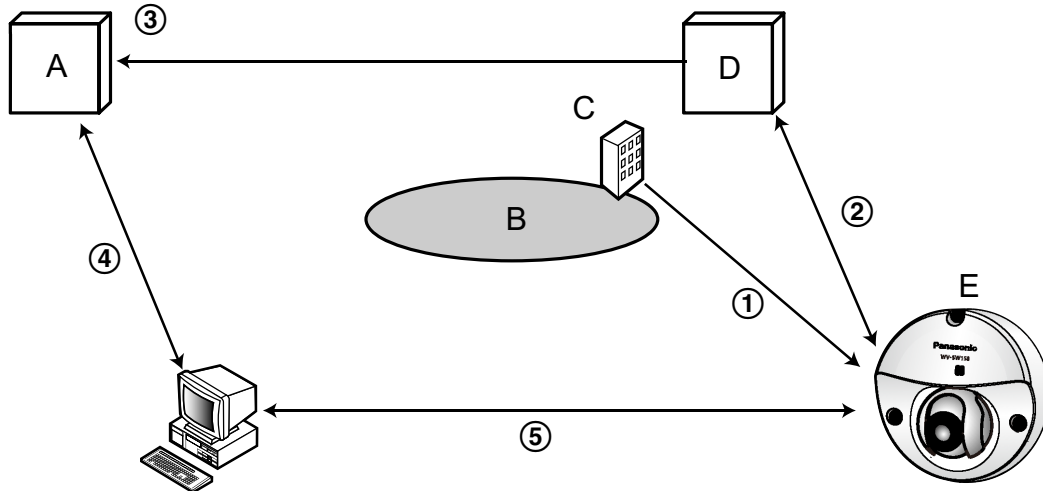

- A. DNS server
- B. Internet
- C. Provider
- D. “Viewnetcam.com” service server
- E. Remote site

① **Global address is changed.**

The contracted provider allocates a global address to the router (or the camera). The global address is not static but dynamic.

② **“\*\*\*\*\*.viewnetcam.com” and the current global address is automatically registered.**

If you are enrolled in “Viewnetcam.com”, the unique “domain name” (example: \*\*\*\*\*.viewnetcam.com) will be allocated. The “Viewnetcam.com” service server automatically manages the domain name of camera and the global address of router (or camera) when a camera automatically notifies the service server of the global address.

③ **Current global address is automatically registered via “\*\*\*\*\*.viewnetcam.com”.**

The “Viewnetcam.com” service server registers the global address and the domain name of router (or camera) in the DNS server.

④ **Global address is obtained via the URL (domain name).**

By entering the URL (including the domain name) on the web browser when accessing the camera via the Internet, the DNS server identifies the registered global address of router (or camera).

⑤ **Access using the current global address**


The identified global address is used for accessing the router (or camera) to monitor images.

**Note**

- Refer to the contracted provider whether the current IP address is static or not.

## 17 Configuring the network settings [Network]

- Depending on the provider, local addresses may be allocated. In this case, the DDNS service is unavailable. Refer to the contract provider for further information.

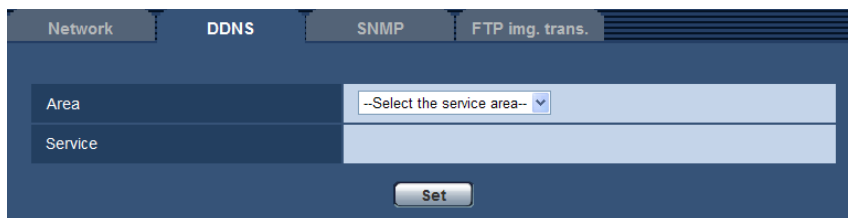

The screenshot shows the DDNS configuration page. At the top, there are tabs for 'Network', 'DDNS', 'SNMP', and 'FTP img. trans.'. The 'DDNS' tab is selected. Below the tabs, there are two dropdown menus: 'Area' with the text '--Select the service area--' and 'Service'. A 'Set' button is located at the bottom right of the form.

### [Area]

Select the region where the camera is installed. If the camera is used outside of Japan, select “Global”. If the camera is used in Japan, select “Japan”.

Japan/Global

### [Service]


Select the DDNS service to determine whether or not to use DDNS.

- Off:** Does not use the DDNS function.
- Viewnetcam.com:** Uses the “Viewnetcam.com” service.
- Dynamic DNS Update:** Uses Dynamic DNS Update (RFC2136 compliant) without the DHCP cooperation.
- Dynamic DNS Update(DHCP):** Uses Dynamic DNS Update (RFC2136 compliant) with the DHCP cooperation.
- Default:** Off

### Note

- When using Dynamic DNS Update (RFC2136 compliant), refer to the network administrator for whether or not to cooperate with the DHCP.

## 17.4.2 When using the “Viewnetcam.com” service

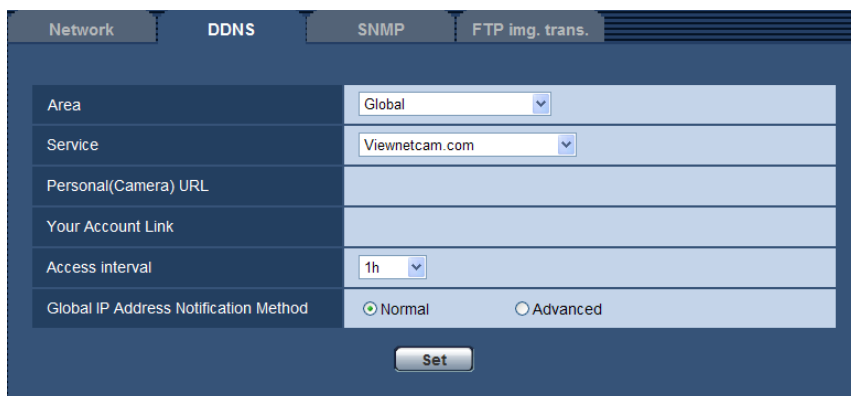

The screenshot shows the DDNS configuration page with the 'Viewnetcam.com' service selected. The 'Area' dropdown is set to 'Global'. The 'Service' dropdown is set to 'Viewnetcam.com'. Below these, there are fields for 'Personal(Camera) URL', 'Your Account Link', 'Access interval' (set to '1h'), and 'Global IP Address Notification Method' (with radio buttons for 'Normal' and 'Advanced'). A 'Set' button is at the bottom.

### [Personal(Camera) URL]

The URL of the camera registered for “Viewnetcam.com”.

### [Your Account Link]

When the displayed URL is clicked, the registration window for the “Viewnetcam.com” service will be displayed in a newly opened window.

Register the information in the registration window to enroll in the “Viewnetcam.com” service.

**[Access interval]**

Select the interval to access the “Viewnetcam.com” service server to check the IP address and the host name from the following.

10min/ 20min/ 30min/ 40min/ 50min/ 1h

- **Default:** 1h

**[Global IP Address Notification Method]**

Typically [Global IP Address Notification Method] should be set to “Normal”.

If you cannot access the camera using the registered URL 30 minutes after registering with “Viewnetcam.com”, select “Advanced”.

In this case, UPnP (→page 140) must be enabled for the camera and for the router.

- **Default:** Normal

## 17.4.3 Procedure to register information for the “Viewnetcam.com” service

1. Select [Viewnetcam.com] for [DDNS] and click the [Set] button.
  - A URL is displayed in [Your Account Link].
  - If a URL is not displayed in [Your Account Link], confirm the camera's network settings and Internet connection, then click [Set] again.
2. Register the information for “Viewnetcam.com” by following the instructions of the wizard.
  - The registration window for “Viewnetcam.com” will be displayed in a newly opened window.
  - When the registration window is not displayed, check that the PC is being connected to the Internet, and click the reload button of the browser.

| DDNS                                  |                                                                        |
|---------------------------------------|------------------------------------------------------------------------|
| Area                                  | Global                                                                 |
| Service                               | Viewnetcam.com                                                         |
| Personal(Camera) URL                  |                                                                        |
| Your Account Link                     | http://*****                                                           |
| Access interval                       | 1h                                                                     |
| Global IP Address Notification Method | <input checked="" type="radio"/> Normal <input type="radio"/> Advanced |
| <input type="button" value="Set"/>    |                                                                        |

3. Register the information for “Viewnetcam.com” by following the instructions of the wizard.
  - When the message “The new camera is successfully registered to Viewnetcam.com” is displayed, close the registration window.

The URL set at the time of registration can be used for camera access. However, this URL is unavailable when accessing the camera from the PC connected to the same network (LAN).

The screenshot shows the DDNS configuration interface. At the top, there are tabs for 'Network', 'DDNS', 'SNMP', and 'FTP img. trans.'. The 'DDNS' tab is selected. Below the tabs, there are several fields: 'Area' is set to 'Global'; 'Service' is set to 'Viewnetcam.com'; 'Personal(Camera) URL' is masked with '\*\*\*\*\*'; 'Your Account Link' is 'http://\*\*\*\*\*'; 'Access Interval' is set to '1h'; and 'Global IP Address Notification Method' has radio buttons for 'Normal' (selected) and 'Advanced'. A 'Set' button is at the bottom.

### Note

- When the registration for the “Viewnetcam.com” service is completed, the URL registered for “Personal(Camera) URL” is displayed. It may take up to about 30 minutes until the URL of the registered camera is validated.
- To cancel the enrollment in the “Viewnetcam.com” service, access the “Viewnetcam.com” website (<http://www.viewnetcam.com/>) later.
- When “Expired” is displayed in the URL of “Viewnetcam.com” in the viewnetcam settings page or the status page, restart the camera after registering the “Viewnetcam.com” service. After restarting the camera, check that the registered URL is displayed in the URL of “Viewnetcam.com” of [Status] - [Viewnetcam.com] on the “Maintenance” page.
- It is possible to check the information registered for the “Viewnetcam.com” service by accessing the URL displayed beside “Your Account Link”. When the URL is not displayed, check that the PC is being connected to the Internet, and click the [Set] button.
- If access often fails due to the change in the global address of router, set a smaller value for “Access interval”.

## 17.4.4 Checking the information registered for the “Viewnetcam.com” service

It is possible to check if the camera has been registered for the “Viewnetcam.com” service. (→page 174)

## 17.4.5 When using “Dynamic DNS Update”

The screenshot shows the DDNS configuration interface with the 'Dynamic DNS Update' service selected. The 'Area' is 'Global', 'Service' is 'Dynamic DNS Update', 'Host name' is an empty text field, and 'Access interval' is '24h'. A 'Set' button is at the bottom.

**[Host name]**

Enter the host name to be used for the Dynamic DNS Update service.

- **Available number of characters:** 3 - 250 characters  
Enter in the form of “(host name). (domain name)”.
- **Available characters:** Alphanumeric characters, the colon (:), the period (.), the underscore (\_), and the hyphen (-).
- **Default:** None (blank)

**Note**

- Refer to the network administrator for further information about the available host names.

**[Access interval]**

Select the interval to access the Dynamic DNS Update service server to check the IP address and the host name from the following.

10min/ 20min/ 30min/ 40min/ 50min/ 1h/ 6h/ 24h

- **Default:** 24h

## 17.4.6 When using “Dynamic DNS Update(DHCP)”

The screenshot shows a configuration window with four tabs: 'Network', 'DDNS', 'SNMP', and 'FTP img. trans.'. The 'DDNS' tab is active. Below the tabs, there are three rows of configuration options: 'Area' with a dropdown menu showing 'Global', 'Service' with a dropdown menu showing 'Dynamic DNS Update(DHCP)', and 'Host name' with an empty text input field. A 'Set' button is located at the bottom right of the configuration area.

**[Host name]**

Enter the host name to be used for the Dynamic DNS Update service.

- **Available number of characters:** 3 - 250 characters  
Enter in the form of “(host name). (domain name)”.
- **Available characters:** Alphanumeric characters, the colon (:), the period (.), the underscore (\_), and the hyphen (-).
- **Default:** None (blank)

**Note**


- Refer to the network administrator for further information about the available host names.

## 17.5 Configure the settings relating to SNMP

### [SNMP]

Click the [SNMP] tab on the “Network” page. (→page 40, page 42)

The settings relating to SNMP can be configured on this page. It is possible to check the status of the camera by connecting to the SNMP manager. When using the SNMP function, contact the network administrator.

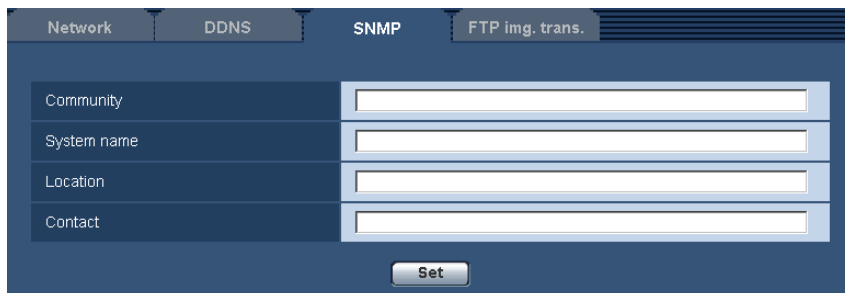

| Community            |
|----------------------|
| <input type="text"/> |

| System name          |
|----------------------|
| <input type="text"/> |

| Location             |
|----------------------|
| <input type="text"/> |

| Contact              |
|----------------------|
| <input type="text"/> |

Set

### [Community]

Enter the community name to be monitored.

- **Available number of characters:** 0 - 32 characters
- **Default:** None (blank)

### IMPORTANT

- When using the SNMP function, it is necessary to enter the community name. When no community name is entered, the SNMP function will not work.

### [System name]

Enter a system name to be used to manage the camera with the SNMP function.

- **Available number of characters:** 0 - 32 characters
- **Default:** None (blank)

### [Location]

Enter the name of the location where the camera is installed.

- **Available number of characters:** 0 - 32 characters
- **Default:** None (blank)

### [Contact]

Enter the E-mail address or the phone number of the SNMP manager.

- **Available number of characters:** 0 - 255 characters
- **Default:** None (blank)

## 17.6 Configure the settings relating to the FTP periodic image transmission [FTP img. trans.]

Click the [FTP img. trans.] tab on the "Network" page. (→page 40, page 42)

The settings relating to the periodic transmission of images to an FTP server can be configured on this page. To transmit images to an FTP server periodically, it is necessary to configure the settings of the FTP server in advance (→page 132). Refer to page 166 for descriptions of how to configure schedules of image transmission.

### IMPORTANT

- Depending on the network line speed or the network traffic, images may not be transmitted at the exact designated interval or period.

- When “On” is selected for both of the alarm image transmission function and the FTP periodic image transmission function, the alarm image transmission function will be given priority over the FTP periodic image transmission function. For this reason, images may not be transmitted at the exact designated interval or period if alarms occur frequently.
- Select “FTP error” for “Save trigger” on the [SD memory card] tab when using the FTP periodic transmission function.

#### Note

- When “FTP error” is selected for “Save trigger” on the [SD memory card] tab, images that have failed to transmit using the FTP periodic image transmission can be saved automatically on the SD memory card. (→page 26)

## FTP periodic image transmission

### [FTP >>]

When “FTP >>” is clicked, the [FTP] tab of the “Server” page will be displayed. (→page 132)

### [FTP periodic image transmission]

Select “On” or “Off” to determine whether or not to transmit images using the FTP periodic image transmission function.

When “On” is selected, it is necessary to configure the settings of the FTP server. (→page 132)

- **Default:** Off

### [Directory name]

Enter the directory name where the images are to be saved.

For example, enter “/img” to designate the directory “img” under the root directory of the FTP server.

- **Available number of characters:** 1 - 256 characters
- **Unavailable characters:** " & ;
- **Default:** None (blank)

### [File name]

Enter the file name (name of the image file to be transmitted) and select the naming option from the following.

- **Name w/time&date:** File name will be [“Entered file name” + “Time and date (year/ month/ day/ hour/ minute/ second)” + “Serial number (starting from 00)”].
- **Name w/o time&date:** File name will be the characters entered for “File name” only. When “Name w/o time&date” is selected, the file will be overwritten each time a file is newly transmitted.
- **Available number of characters:** 1 - 32 characters

- **Unavailable characters:** " & ; : / \* < > ? \ |
- **Default:** None (blank)

### **Note**

- When "Name w/time&date" is selected, the file name will be ["Entered file name" + "Time and date (year/ month/ day/ hour/ minute/ second)" + "Serial number (starting from 00)" + "s" during summer time.

### **[Transmission interval]**

Select the interval for the FTP periodic image transmission from the following.

1s/ 2s/ 3s/ 4s/ 5s/ 6s/ 10s/ 15s/ 20s/ 30s/ 1min/ 2min/ 3min/ 4min/ 5min/ 6min/ 10min/ 15min/ 20min/ 30min/ 1h/ 1.5h/ 2h/ 3h/ 4h/ 6h/ 12h/ 24h

- **Default:** 1s

### **[Image capture size]**

Select the capture size of images to be transmitted from the following.

**When "2 mega pixel [16:9]" is selected for "Image capture mode"**

640x360/320x180

**When "1.3 mega pixel [16:9]" is selected for "Image capture mode"**

1280x720/640x360/320x180

**When "1.3 mega pixel [4:3]" is selected for "Image capture mode"**

1280x960/VGA/QVGA

- **Default:** 640x360

### **Note**

- When "3 mega pixel [4:3]" is selected for "Image capture mode", FTP periodic image transmission cannot be used.

## 17.7 Configure the schedule settings of the FTP periodic image transmission [FTP img. trans.]

Click the [FTP img. trans.] tab on the "Network" page. (→page 40, page 42)

The schedule settings of the FTP periodic image transmission can be configured in this section. Refer to page 164 for further information about the settings relating to the FTP periodic image transmission.

## 17.7.1 How to set the schedules

FTP image transmission schedule

Schedule 1

☐ Mon ☐ Tue ☐ Wed ☐ Thu ☐ Fri ☐ Sat ☐ Sun

☐ 24h   -

Schedule 2

☐ Mon ☐ Tue ☐ Wed ☐ Thu ☐ Fri ☐ Sat ☐ Sun

☐ 24h   -

Schedule 3

☐ Mon ☐ Tue ☐ Wed ☐ Thu ☐ Fri ☐ Sat ☐ Sun

☐ 24h   -

|     | 0:00 | 6:00 | 12:00 | 18:00 | 24:00 |
|-----|------|------|-------|-------|-------|
| Mon |      |      |       |       |       |
| Tue |      |      |       |       |       |
| Wed |      |      |       |       |       |
| Thu |      |      |       |       |       |
| Fri |      |      |       |       |       |
| Sat |      |      |       |       |       |
| Sun |      |      |       |       |       |

1. Check the check box of the desired day of the week of "FTP image transmission schedule".  
→ The selected day of the week will be validated for the schedule.
2. To designate time, select the desired "hour" and "minute" from the pull-down menu.  
When not designating time, check the checkbox of "24h".
3. Click the [Set] button after completing the settings.  
→ The result will be displayed at the bottom of the window.

FTP image transmission schedule

Schedule 1

☒ Mon ☒ Tue ☒ Wed ☒ Thu ☒ Fri ☐ Sat ☐ Sun

☐ 24h   -

Schedule 2

☒ Mon ☒ Tue ☒ Wed ☒ Thu ☒ Fri ☒ Sat ☒ Sun

☐ 24h   -

Schedule 3

☐ Mon ☐ Tue ☐ Wed ☐ Thu ☐ Fri ☒ Sat ☒ Sun

☒ 24h   -

|     | 0:00 | 6:00 | 12:00 | 18:00 | 24:00 |
|-----|------|------|-------|-------|-------|
| Mon |      |      |       |       |       |
| Tue |      |      |       |       |       |
| Wed |      |      |       |       |       |
| Thu |      |      |       |       |       |
| Fri |      |      |       |       |       |
| Sat |      |      |       |       |       |
| Sun |      |      |       |       |       |

17.7.2 How to delete the set schedule

FTP image transmission schedule

Schedule 1

☒ Mon ☒ Tue ☒ Wed ☒ Thu ☒ Fri ☐ Sat ☐ Sun

☐ 24h 09 00 - 17 30

Schedule 2

☒ Mon ☒ Tue ☒ Wed ☒ Thu ☒ Fri ☒ Sat ☒ Sun

☐ 24h 23 00 - 07 00

Schedule 3

☐ Mon ☐ Tue ☐ Wed ☐ Thu ☐ Fri ☒ Sat ☒ Sun

☒ 24h 00 00 - 00 00

Set

|     | 0:00 | 6:00 | 12:00 | 18:00 | 24:00 |
|-----|------|------|-------|-------|-------|
| Mon |      |      |       |       |       |
| Tue |      |      |       |       |       |
| Wed |      |      |       |       |       |
| Thu |      |      |       |       |       |
| Fri |      |      |       |       |       |
| Sat |      |      |       |       |       |
| Sun |      |      |       |       |       |

1. Uncheck the check box of the set day of the week.

2. Click the [Set] button after completing the settings.  
→ The schedule of the selected day of the week is deleted.

FTP image transmission schedule

Schedule 1

☐ Mon ☐ Tue ☐ Wed ☐ Thu ☐ Fri ☐ Sat ☐ Sun

☐ 24h 00 00 - 00 00

Schedule 2

☐ Mon ☐ Tue ☐ Wed ☐ Thu ☐ Fri ☐ Sat ☐ Sun

☐ 24h 00 00 - 00 00

Schedule 3

☐ Mon ☐ Tue ☐ Wed ☐ Thu ☐ Fri ☐ Sat ☐ Sun

☐ 24h 00 00 - 00 00

Set

|     | 0:00 | 6:00 | 12:00 | 18:00 | 24:00 |
|-----|------|------|-------|-------|-------|
| Mon |      |      |       |       |       |
| Tue |      |      |       |       |       |
| Wed |      |      |       |       |       |
| Thu |      |      |       |       |       |
| Fri |      |      |       |       |       |
| Sat |      |      |       |       |       |
| Sun |      |      |       |       |       |

## 18 Configure the settings relating to the schedules [Schedule]

On the “Schedule” page, it is possible to configure the settings relating to schedules as follows.

- VMD permission (Video motion detection will be active only in the specified schedule.)
- Audio detection permission (Audio detection will be active only in the specified schedule.)
- Access permission (Access to the camera will be allowed only in the specified schedule.)
- H.264 recording (SD recording will be performed only in the specified schedule.)

The “Schedule” page has only the [Schedule] tab.

## 18 Configure the settings relating to the schedules [Schedule]

Up to 5 schedules can be set.

The screenshot displays the 'Schedule' configuration page. It features a table with five rows, each representing a schedule (Schedule 1 to Schedule 5). Each row has two main sections: 'Schedule mode' and 'Time range'. The 'Schedule mode' section includes a dropdown menu set to 'Off'. The 'Time range' section includes checkboxes for each day of the week (Mon, Tue, Wed, Thu, Fri, Sat, Sun) and a time range selector showing '24h' and '00:00' to '00:00'. A pink box highlights the 'Schedule mode' dropdown and the 'Time range' section for Schedule 1. Below the table is a 'Set' button. At the bottom of the page is a large empty grid with days of the week (Mon, Tue, Wed, Thu, Fri, Sat, Sun) on the y-axis and time slots (0:00, 6:00, 12:00, 18:00, 24:00) on the x-axis.

| Schedule           | Schedule mode | Time range                                                                                                                                                                                                                      |
|--------------------|---------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Schedule 1 (White) | Off           | <input type="checkbox"/> Mon <input type="checkbox"/> Tue <input type="checkbox"/> Wed <input type="checkbox"/> Thu <input type="checkbox"/> Fri <input type="checkbox"/> Sat <input type="checkbox"/> Sun<br>24h 00:00 - 00:00 |
| Schedule 2 (Blue)  | Off           | <input type="checkbox"/> Mon <input type="checkbox"/> Tue <input type="checkbox"/> Wed <input type="checkbox"/> Thu <input type="checkbox"/> Fri <input type="checkbox"/> Sat <input type="checkbox"/> Sun<br>24h 00:00 - 00:00 |
| Schedule 3 (Green) | Off           | <input type="checkbox"/> Mon <input type="checkbox"/> Tue <input type="checkbox"/> Wed <input type="checkbox"/> Thu <input type="checkbox"/> Fri <input type="checkbox"/> Sat <input type="checkbox"/> Sun<br>24h 00:00 - 00:00 |
| Schedule 4 (Red)   | Off           | <input type="checkbox"/> Mon <input type="checkbox"/> Tue <input type="checkbox"/> Wed <input type="checkbox"/> Thu <input type="checkbox"/> Fri <input type="checkbox"/> Sat <input type="checkbox"/> Sun<br>24h 00:00 - 00:00 |
| Schedule 5 (Black) | Off           | <input type="checkbox"/> Mon <input type="checkbox"/> Tue <input type="checkbox"/> Wed <input type="checkbox"/> Thu <input type="checkbox"/> Fri <input type="checkbox"/> Sat <input type="checkbox"/> Sun<br>24h 00:00 - 00:00 |

Set

|     | 0:00 | 6:00 | 12:00 | 18:00 | 24:00 |
|-----|------|------|-------|-------|-------|
| Mon |      |      |       |       |       |
| Tue |      |      |       |       |       |
| Wed |      |      |       |       |       |
| Thu |      |      |       |       |       |
| Fri |      |      |       |       |       |
| Sat |      |      |       |       |       |
| Sun |      |      |       |       |       |

1. Select an action to be assigned to the schedule from "Schedule mode".  
"Off" is selected at the default.
  - **Off:** No action will be taken for the respective schedule.
  - **VMD permission:** The video motion detection (VMD) function will be active during the period of the schedule.

- **Audio detection permission:** The audio detection function will be active during the period of the schedule.
- **Access permission:** Users whose access level is set to 2 and 3 on the [User auth.] tab (→page 126) can access the camera only in the period of schedule.
- **H.264 recording:** The SD recording will be performed at the designated time in the schedule.

**Note**

- Select “On” for “User auth.” on the [User auth.] tab of “User mng.” page (→page 126) and “Off” for “Host auth.” on the “Host auth.” page (→page 127) to validate “Access permission”.
  - When selecting “H.264 recording”, select “H.264(1)” or “H.264(2)” for “Recording format” on the [SD memory card] tab and select “Schedule” for “Save trigger”. (→page 51)
2. Select days of a week by checking the respective checkboxes.
  3. From the pull-down menu, select the start time and the end time of the schedule.  
When not designating time, check the checkbox of “24h”.
  4. Click the [Set] button after completing the settings.  
→ The result will be displayed at the bottom of the window.

**Note**

- The schedules displayed at the bottom of the window can be identified by colors assigned to each schedule.

## 19 Maintenance of the camera [Maintenance]

System log check, firmware upgrade, status check and initialization of settings can be performed on this page. The “Maintenance” page has the [System log] tab, the [Upgrade] tab, [Status] tab and the [Default reset] tab.

### 19.1 Check the system log [System log]

Click the [System log] tab of the “Maintenance” page. (→page 40, page 42)

Up to 4,000 system logs can be saved on the SD memory card when the SD memory card is inserted after selecting “Use” for “SD memory card” on the [SD memory card] tab (→page 51).


When “Not use” is selected for “SD memory card”, up to 100 system logs can be saved on the built-in memory of the camera.

When the saved system logs have reached the maximum number, the newer logs will overwrite the older system logs. In this case, the oldest log is the first to be overwritten.

The system logs will be displayed in group of 100 logs each.

When using the SD memory card, the logs will be saved even when the power of the camera is turned off.

When not using the SD memory card, the logs will be deleted when the power of the camera is turned off.

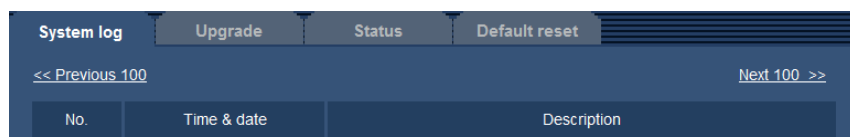

#### [Next 100 >>]

When clicking “Next 100 >>”, the next 100 system logs will be displayed.

#### [<< Previous 100]

When clicking “<< Previous 100”, the previous 100 system logs will be displayed.

#### [No.]

The serial number of the system log will be displayed.

#### [Time & date]

Time and date at the error occurrence will be displayed.

#### **Note**

- When “Off” is selected for “Time display format” on the [Basic] tab (→page 46), time & date of logs will be displayed in 24-hour format.

#### [Description]

The descriptions about the system log will be displayed. Refer to page 184 for further information about the system logs.

### 19.2 Upgrade the firmware [Upgrade]

Click the [Upgrade] tab of the “Maintenance” page. (→page 40, page 42)

The current firmware can be checked and upgraded to the latest version on this page. Contact the dealer for further information about the firmware upgrade.

|                                        |           |                                          |
|----------------------------------------|-----------|------------------------------------------|
| Model no.                              |           | [Model no.]                              |
| MAC address                            |           | [MAC address]                            |
| Serial no.                             |           | [Serial no.]                             |
| Firmware version                       |           | [Firmware version]                       |
| IPL version                            |           | [IPL version]                            |
| HTML version                           |           | [HTML version]                           |
| IP address(IPv6)                       | Linklocal | [Linklocal]                              |
|                                        | Static    | [Static]                                 |
|                                        | RA        | [RA]                                     |
|                                        | DHCPv6    | [DHCPv6]                                 |
| Viewer software installation counter   |           | [Viewer software installation counter]   |
| Time past from the date of manufacture |           | [Time past from the date of manufacture] |

☐ Reset the settings to the default after completing the upgrade.  
(Except the network settings)
 ☒ Do not reset the settings to the default after the upgrade.

Resets to default HTML data after completing the upgrade.

It will take around 9 minutes to complete the upgrade.  
Please wait and do not operate the browser during this process.

[Model no.], [MAC address], [Serial no.], [Firmware version], [IPL version], [HTML version], [IP address(IPv6)], [Viewer software installation counter], [Time past from the date of manufacture]

Information of each item will be displayed.

1. Contact the dealer and download the latest firmware onto a PC.

### **IMPORTANT**

- A blank (space) cannot be used for the name of the directory where the downloaded firmware to be saved.
2. Click the [Browse...] button and designate the downloaded firmware.
  3. Click the radio button respective to the desired option to determine whether or not to initialize the settings after completing the firmware upgrade.

### **Note**

- Note that the settings cannot be restored after an initialization is operated.
4. Click the [Execute] button.  
→ The confirmation window will be displayed.

**IMPORTANT**

- After completing the upgrade, delete temporary internet files. (→page 188)
- Upgrade the firmware using a PC in the same subnet as the unit.
- Follow the instructions from the dealer when upgrading the firmware.
- When upgrading the application software, use the designated file (extension: img) for the firmware upgrade.  
The name of the firmware to be used for the upgrade should be “model name (Use small letters. “WV-” is not required.)\_xxxxx.img”.  
\* (“xxxxx” indicates the version of the firmware.)
- Do not turn off the power of the camera during the upgrade process.
- Do not perform any operation during upgrading and wait until it completes.
- The following network settings will not be reset when upgrading the firmware after selecting “Reset the settings to the default after completing the upgrade. (Except the network settings)”.  
Primary server address and secondary server address DNS settings for IPv4, primary DNS server address and secondary DNS server address settings for IPv6, On/Off for DHCP, IP address, subnet mask, default gateway, HTTP port, HTTPS port, connection protocol (HTTP/HTTPS), CRT key, server certificate, UPnP setting, line speed, bandwidth control (bit rate), time & date
- The viewer software used on each PC should be licensed individually. Refer to your dealer for the software licensing.

## 19.3 Check the status [Status]

Click the [Status] tab of the “Maintenance” page. (→page 40, page 42)  
The status of this camera can be checked on this page.

| Viewnetcam.com       |         |
|----------------------|---------|
| Server               |         |
| Status               | Disable |
| Personal(Camera) URL |         |

| UPnP                  |         |
|-----------------------|---------|
| Port number(HTTP)     | 0       |
| Status                | Disable |
| Port number(HTTPS)    | 0       |
| Status                | Disable |
| Router global address |         |

| Self check |                                       |
|------------|---------------------------------------|
| Hardware1  | 0000 0000 0000 0000 0000 0000 0000 00 |

**[Viewnetcam.com]**

- **Server:** The URL of the “Viewnetcam.com” service server will be displayed.
- **Status:** The registration status for the “Viewnetcam.com” will be displayed.
- **Personal(Camera) URL:** The URL of the camera registered for “Viewnetcam.com” will be displayed.

**[UPnP]**

- **Port number(HTTP), Port number(HTTPS):** The port number that is set for UPnP port forwarding will be displayed.
- **Status:** The port forwarding status will be displayed.
- **Router global address:** The global address of router will be displayed.

**[Self check]**

The self check result of the hardware will be displayed.


**Note**

- Refer to our website (<http://security.panasonic.com/pss/security/support/info.html>) for further information about the contents of the displayed statuses (relating to the “Viewnetcam.com” service, the UPnP function, or the self check).

## 19.4 Reset the settings/Reboot the camera [Default reset]

Click the [Default reset] tab of the “Maintenance” page. (→page 40, page 42)

The settings and the HTML data of the camera can be initialized and reboot of the camera can be performed on this page.

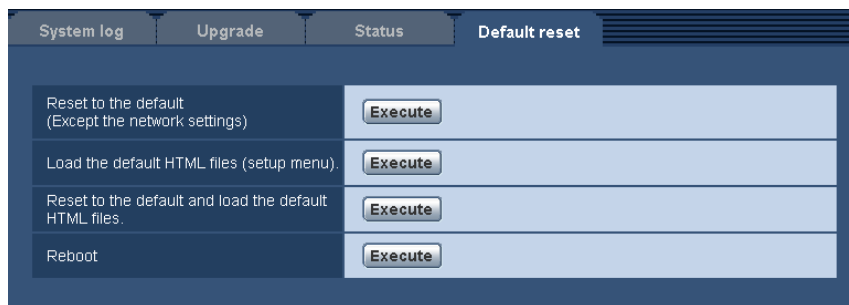**[Reset to the default (Except the network settings)]**

Click the [Execute] button to reset the settings to the default. Note that the network settings will not be reset. It is impossible to operate the camera for about 3 minutes after the initialization.

**[Load the default HTML files (setup menu).]**

Click the [Execute] button to reset the HTML files to the default. It is impossible to operate the camera for about 3 minutes after the initialization.

**[Reset to the default and load the default HTML files.]**

Click the [Execute] button to reset the settings of the camera and the HTML files to the default. Note that the network settings will not be reset. It is impossible to operate the camera for about 3 minutes after the initialization.

**[Reboot]**

Click the [Execute] button to reboot the camera. It is impossible to operate the camera for about 2 minutes after rebooting the camera.

**Note**

- To initialize the network settings (→page 136), turn off the power of the camera, then turn on the power again while holding down the INITIAL SET button on the unit, and keep the INITIAL SET button held

down for about 5 seconds. Wait about 3 minutes after releasing the button. The camera will start up and the settings including the network settings will be initialized. Do not turn off the power of the unit for about 3 minutes after turning on the power.

- The notification function allows users to notify errors to the destinations specified in “E-mail notification” - “Destination E-mail address” and “Panasonic alarm protocol notification” - “Destination server address” in the [Notification] tab on the “Alarm” page when an error occurs such as having no SD memory card inserted after rebooting or inserting a locked SD memory card. (→page 115, page 117)

## 20 Number of users that can concurrently access the unit

The maximum number of users that can concurrently access the unit is 14, including users who receive H.264 images and users who receive JPEG images. (When “On” is selected for “Activation” of “Priority stream” on the [System] tab of the “User mng.” page.) The number of users that can concurrently access the unit may change according to the network environment and camera settings. Take the following into consideration.

- When “Off” is selected for “Activation” of “Priority stream”, a maximum of 12 users can concurrently access the unit.
- If “Frame rate” is selected for “Transmission priority” in “H.264(1)” or “H.264(2)” on the [JPEG/H.264] tab of the “Image/Audio” page, the number of users that can concurrently access the unit may be reduced.
- If the setting of “Max bit rate (per client)\*” is increased in “H.264(1)” or “H.264(2)” on the [JPEG/H.264] tab of the “Image/Audio” page, the number of users that can concurrently access the unit may be reduced.
- If the “Bandwidth control(bit rate)” on the [Network] tab of the “Network” page is restricted, the number of users that can concurrently access the unit may be reduced.

| Number of users that can concurrently access the unit                            | Increase                          | ↔ | Decrease    | H.264 connections:<br>about 10 people |
|----------------------------------------------------------------------------------|-----------------------------------|---|-------------|---------------------------------------|
| “Transmission priority” in “H.264(1)” or “H.264(2)” on the [JPEG/H.264] tab      | Constant bit rate/<br>Best effort | ↔ | Frame rate  | Frame rate                            |
| “Max bit rate (per client)*” in “H.264(1)” or “H.264(2)” on the [JPEG/H.264] tab | 64kbps                            | ↔ | 14336kbps * | 1536kbps*                             |
| “Bandwidth control(bit rate)” on the [Network] tab                               | Unlimited                         | ↔ | 64kbps      | Unlimited                             |

### Note

- When “Multicast” is selected for “Transmission type” in “H.264(1)” or “H.264(2)” on the [JPEG/H.264] tab of the “Image/Audio” page, only the first user who accessed to monitor H.264 images will be included in the maximum number. The second and subsequent users who monitor H.264 images will not be included in the maximum number.
- When “On” is selected for “Activation” of “Priority stream” on the [System] tab of the “User mng.” page, because network bandwidth is constantly reserved for “Priority stream”, the number of users that can concurrently access the unit may be reduced.
- When “HTTPS” is selected for “HTTPS” - “Connection” on the [Network] tab of the “Network” page, the number of users that can concurrently access the unit may be reduced.


## 21 Using the CD-ROM

### 21.1 About the CD launcher

By inserting the provided CD-ROM into the CD-ROM drive of your PC, the CD launcher is automatically started and the license agreement is displayed. Read the agreement and select "I accept the terms in the license agreement", and then click "OK".

The CD launcher window is displayed.

- If the launcher window is not displayed, double click the "CDLauncher.exe" file on the CD-ROM.

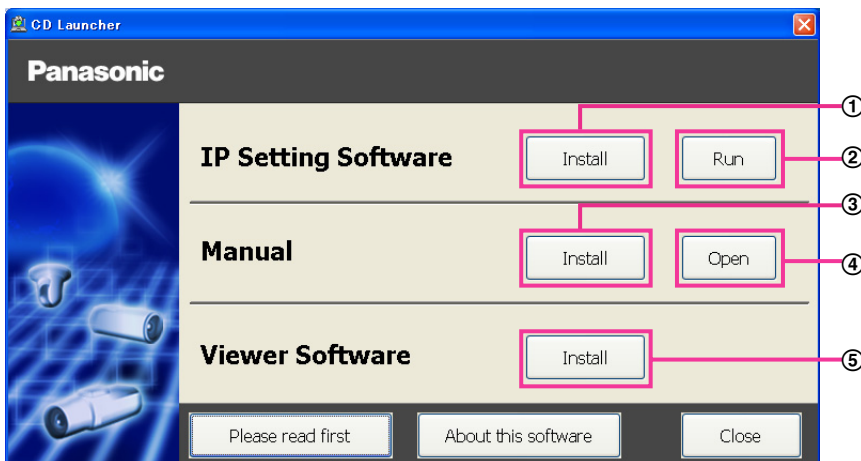


Using the supplied CD-ROM, the following actions can be performed.

- ① The Panasonic "IP Setting Software" can be installed on the PC. (→page 179)
- ② Settings related to the camera's network can be set from the Panasonic "IP Setting Software". (→page 181)
- ③ The manuals can be installed on the PC. (→page 180)
- ④ You can also view the manuals without installing them to the PC by clicking the [Open] button.
- ⑤ The Viewer software can be installed on the PC. (→page 180)

## 21.2 Installing Panasonic “IP Setting Software”

On the CD launcher window, click the [Install] button next to [IP Setting Software] to display the Panasonic “IP Setting Software” installation window. Confirm the following settings before starting the installation.

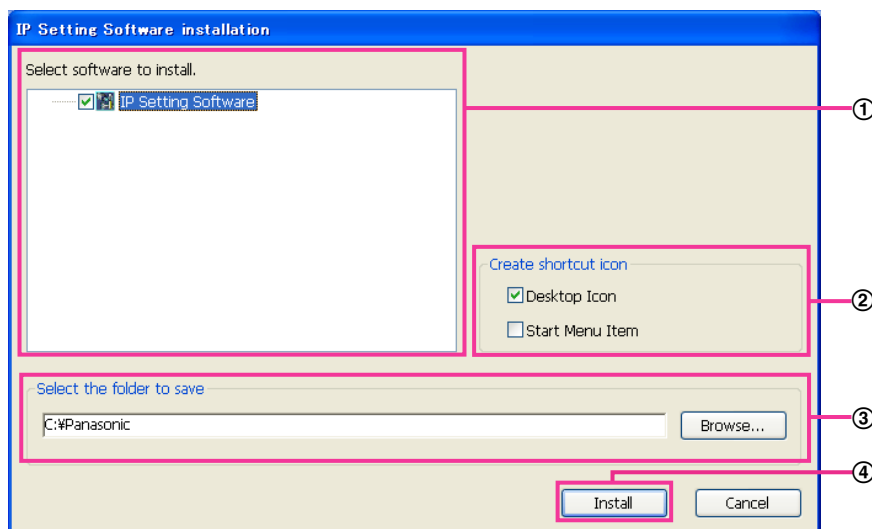


- ① Select the Panasonic “IP Setting Software” to install.
- ② Select where to create the Panasonic IP setting shortcut icon when the Panasonic “IP Setting Software” is installed.
- ③ Specify which folder on the PC to install the Panasonic “IP Setting Software” to.
- ④ Click the [Install] button to start the installation.

### Note

- To uninstall the Panasonic “IP Setting Software” delete the shortcut icon from where you specified it to be installed (the default is on the desktop) during installation and the [EasyIPConfig] folder from the folder (the default is C:\Panasonic) you specified during installation.

## 21.3 Installing the manuals

On the CD launcher window, click the [Install] button next to [Manual] to display the Manual installation window. Confirm the following settings before starting the installation.

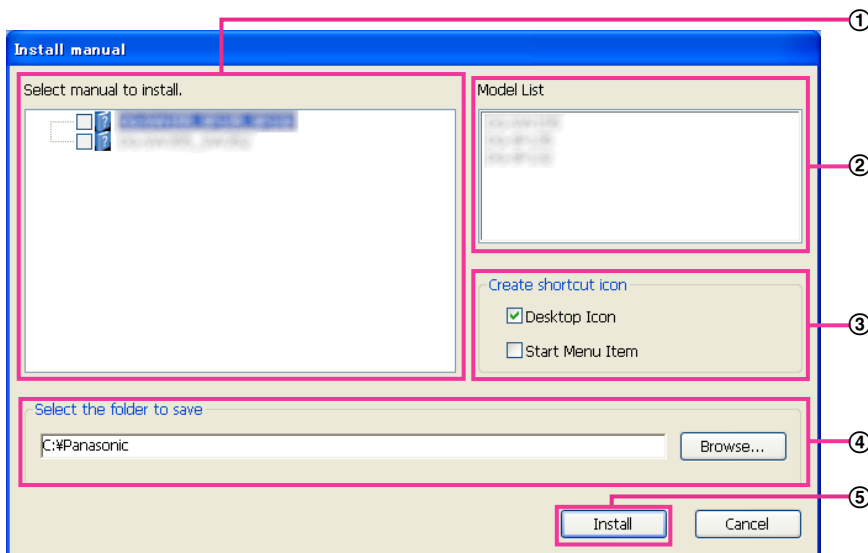

- ① Select which manuals to install. The camera models that the manuals support are displayed in ② "Model List".
- ② The camera models that are supported by the manuals selected in ① are displayed here.
- ③ Select where to create the manuals shortcut icon when the manuals are installed.
- ④ Specify which folder on the PC to install the manuals to.
- ⑤ Click the [Install] button to start the installation.

### Note

- To uninstall the manuals delete the shortcut icon from where you specified it to be installed (the default is on the desktop) during installation and the [Manual] folder from the folder (the default is C:\Panasonic) you specified during installation.

## 21.4 Installing the Viewer software

The Viewer software (Network Camera View 4S) must be installed on the PC in order to display camera images. On the CD launcher window, click the [Install] button next to [Viewer Software], and follow the instructions displayed on the window to install the software. A message is displayed if a PC that does not have the Viewer software installed tries to access the camera. Install the software by following the instructions displayed on the window. Refer to page 3 for further information.

### Note


- To uninstall the Viewer software, follow the steps below depending on the OS used on your PC.  
**For Windows XP**  
 Delete [Network Camera View 4S] from [Control Panel] - [Add or Remove Programs].  
**For Windows Vista/Windows 7/Windows 8**  
 Delete [Network Camera View 4S] from [Control Panel] - [Programs] - [Uninstall a program].

## 21.5 Configure the network settings of the camera using the Panasonic “IP Setting Software”

It is possible to perform the network settings of the camera using the “IP Setting Software” on the provided CD-ROM. When using multiple cameras, it is necessary to configure the network settings of each camera independently. If the Panasonic “IP Setting Software” does not work, access the “Network” page from the setup menu of the camera in the browser and perform settings separately. (→page 136)

### IMPORTANT

- When using Windows 8, Windows 7, or Windows Vista, the “Windows Security Alert” window may be displayed when starting the “IP Setting Software”. In this case, disable “User Account Control” from the control panel.
  - Panasonic “IP Setting Software” is inoperable in other subnets via the same router.
  - This camera cannot be displayed or set with an older version of the “IP Setting Software” (version 2.xx).
  - Due to security enhancements in “IP Setting Software”, “Network Settings” of the camera to be configured cannot be changed when around 20 minutes have passed after turning on the power of the camera. (When the effective period is set to “20min” in the “Easy IP Setup accommodate period”.) However, settings can be changed after 20 minutes for cameras in the initial set mode.
1. To start the Panasonic “IP Setting Software”, click the [Run] button next to [IP Setting Software] from the CD launcher menu window, or double-click on the shortcut icon created after installing the software on the PC.
    - The License Agreement will be displayed. Read the Agreement and choose “I accept the terms in the license agreement”, and click [OK].
    - The “IP Setting Software” screen is displayed. If a camera is found, information about it, such as the MAC address and IP address, is displayed.
  2. Click the [Access Camera] button after selecting the MAC address/IP address of the camera to be configured.

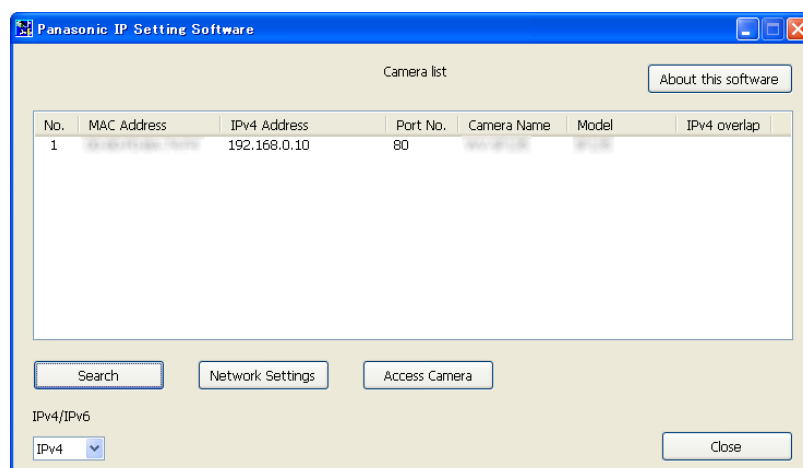

### Note

- When using a DHCP server, the IP address assigned to the camera can be displayed by clicking the [Search] button of the “IP Setting Software”.
- When duplicate IP addresses are used, the number of the camera with the duplicate address is displayed in overlap.
- It is possible to change the “Camera list” display between IPv4 addresses and IPv6 addresses in accordance with the protocol in use.

- The information displayed can be sorted by clicking the title of each displayed item.
  - When the [Network Settings] button is clicked, the “Network Settings” screen is displayed and network settings can be changed. For further information, refer to page 182.
3. When the viewer software “Network Camera View 4S” installation screen is displayed, follow the on-screen instructions to install the software. (The viewer software “Network Camera View 4S” is installed from the camera.)
- The “Live” page of the camera is displayed.
  - If the viewer software “Network Camera View 4S” cannot be installed or images are not displayed, click the [Install] button next to [Viewer Software] from the CD launcher window to install the software.

### Changing Network Settings

When changing settings related to the network settings, such as connection mode, IP address, and subnet mask, click the [Network Settings] button in [IP Setting Software] screen.

The “Network Settings” screen is displayed. Enter each item and then click the [Save] button.

#### Note

- By unchecking the “Wait for camera restarting.” checkbox, multiple cameras can be continuously configured.
- For further information about each setting of the “Network Settings” page, refer to page 136.

### IMPORTANT

- It may take for around 2 minutes to complete to upload the settings to the camera after clicking the [Save] button. The settings may be invalidated when the LAN cable is disconnected before completing the upload. In this case, perform the settings again.

- When using a firewall (including software), allow access to all UDP ports.

## About the displayed system log

### Error indications relating to SMTP

| Category          | Indication                                            | Description                                                                                                                                                                                                                          |
|-------------------|-------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| POP3 server error | Authentication error.                                 | <ul style="list-style-type: none"> <li>Entered user name or password may be incorrect. Check if the E-mail settings are configured correctly.</li> </ul>                                                                             |
|                   | Failed to find the POP3 server.                       | <ul style="list-style-type: none"> <li>The IP address of the server may be incorrect. Check if the IP address of the server is configured correctly.</li> <li>The POP3 server may be down. Ask the network administrator.</li> </ul> |
| SMTP server error | Authentication error.                                 | <ul style="list-style-type: none"> <li>Entered user name or password may be incorrect. Check if the E-mail settings are configured correctly.</li> </ul>                                                                             |
|                   | Failed to resolve the E-mail server address from DNS. | <ul style="list-style-type: none"> <li>The designated IP address of the DNS may be incorrect. Check if the DNS settings are configured correctly.</li> <li>The DNS server may be down. Ask the network administrator.</li> </ul>     |
|                   | Failed to find the SMTP server.                       | <ul style="list-style-type: none"> <li>The IP address of the server may be incorrect. Check if the IP address of the server is configured correctly.</li> <li>The SMTP server may be down. Ask the network administrator.</li> </ul> |
| Internal error    | Undefined error.                                      | <ul style="list-style-type: none"> <li>An error occurred in the E-mail function. Check if the E-mail settings are configured correctly.</li> </ul>                                                                                   |

### Error indications relating to FTP

| Category         | Indication                                         | Description                                                                                                                                                                                                                                                                |
|------------------|----------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| FTP server error | Failed to resolve the FTP server address from DNS. | <ul style="list-style-type: none"> <li>The FTP server may be down. Ask the network administrator.</li> </ul>                                                                                                                                                               |
|                  | Failed to find the FTP server.                     | <ul style="list-style-type: none"> <li>The IP address of the server may be incorrect. Check if the IP address of the server is configured correctly.</li> </ul>                                                                                                            |
| Connection error | File transfer error.                               | <ul style="list-style-type: none"> <li>The FTP server settings may be incorrect. Check if the FTP settings are configured correctly.</li> <li>The settings relating to the indicated item may be incorrect. Check if the FTP settings are configured correctly.</li> </ul> |
|                  | Passive mode error.                                |                                                                                                                                                                                                                                                                            |
|                  | Log out failed.                                    |                                                                                                                                                                                                                                                                            |
|                  | Failed to change the directory.                    |                                                                                                                                                                                                                                                                            |
|                  | User name or password isn't correct.               |                                                                                                                                                                                                                                                                            |

| Category       | Indication       | Description                                                                                                                                  |
|----------------|------------------|----------------------------------------------------------------------------------------------------------------------------------------------|
| Internal error | Undefined error. | <ul style="list-style-type: none"> <li>An error occurred in the FTP function. Check if the FTP settings are configured correctly.</li> </ul> |

### Error indications relating to “Viewnetcam.com”

| Category                    | Indication                                                    | Description                                                                                                                                                                                                                      |
|-----------------------------|---------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Viewnetcam.com server error | Failed to resolve the Viewnetcam.com server address from DNS. | <ul style="list-style-type: none"> <li>The designated IP address of the DNS may be incorrect. Check if the DNS settings are configured correctly.</li> <li>The DNS server may be down. Ask the network administrator.</li> </ul> |
| Connection error            | No response from the Viewnetcam.com server.                   | <ul style="list-style-type: none"> <li>The “Viewnetcam.com” server may be down. Ask the network administrator.</li> </ul>                                                                                                        |
|                             | File transfer error.                                          |                                                                                                                                                                                                                                  |
| Internal error              | Undefined error.                                              | <ul style="list-style-type: none"> <li>An error relating to the “Viewnetcam.com” function occurred. Check if the “Viewnetcam.com” settings are configured correctly.</li> </ul>                                                  |

### Error indications relating to Dynamic DNS Update

| Category          | Indication                                          | Description                                                                                                                                                                                                                      |
|-------------------|-----------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| DDNS server error | Failed to resolve the DDNS server address from DNS. | <ul style="list-style-type: none"> <li>The designated IP address of the DNS may be incorrect. Check if the DNS settings are configured correctly.</li> <li>The DNS server may be down. Ask the network administrator.</li> </ul> |
| Connection error  | No response from the DDNS server.                   | <ul style="list-style-type: none"> <li>The DDNS server may be down. Ask the network administrator.</li> </ul>                                                                                                                    |
|                   | Same host name has registered.                      | <ul style="list-style-type: none"> <li>The same host name has already been registered in the DDNS server. Check if the DDNS Update settings are configured correctly.</li> </ul>                                                 |
| Internal error    | Undefined error.                                    | <ul style="list-style-type: none"> <li>An error occurred in the DDNS function. Check if the DDNS Update settings are configured correctly.</li> </ul>                                                                            |

## Error indications relating to NTP

| Category                          | Indication                       | Description                                                                                                                                                                                                                         |
|-----------------------------------|----------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Connection error                  | No response from the NTP server. | <ul style="list-style-type: none"> <li>The IP address of the server may be incorrect. Check if the IP address of the server is configured correctly.</li> <li>The NTP server may be down. Ask the network administrator.</li> </ul> |
| Internal error                    | Undefined error.                 | <ul style="list-style-type: none"> <li>An error occurred in the NTP function. Check if the NTP settings are configured correctly.</li> </ul>                                                                                        |
| Synchronizing with NTP succeeded. | NTP update succeeded.            | <ul style="list-style-type: none"> <li>Time correction succeeded.</li> </ul>                                                                                                                                                        |

## Log indications relating to HTTPS

| Category | Indication                              | Description                                                                                                        |
|----------|-----------------------------------------|--------------------------------------------------------------------------------------------------------------------|
| HTTPS    | Self-signed Certificate - Generated     | <ul style="list-style-type: none"> <li>Generation of the self-signed certificate is complete.</li> </ul>           |
|          | Self-signed Certificate - Deleted       | <ul style="list-style-type: none"> <li>Deletion of the self-signed certificate is complete.</li> </ul>             |
|          | Certificate Signing Request - Generated | <ul style="list-style-type: none"> <li>Generation of the CSR (Certificate Signing Request) is complete.</li> </ul> |
|          | CA Certificate - Installed              | <ul style="list-style-type: none"> <li>Installation of the server certificate is complete.</li> </ul>              |
|          | CA Certificate - Deleted                | <ul style="list-style-type: none"> <li>Deletion of the server certificate is complete.</li> </ul>                  |
|          | Previous CRT key - Applied              | <ul style="list-style-type: none"> <li>Previous CRT key is applied.</li> </ul>                                     |
|          | CRT key - Generated                     | <ul style="list-style-type: none"> <li>Generation of the CRT key is complete.</li> </ul>                           |

## Log indications relating to login

| Category | Indication              | Description                                                                                                                                                                                                                                                 |
|----------|-------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Login    | User name or IP address | <ul style="list-style-type: none"> <li>The login user name will be displayed when "On" is selected for "User auth."</li> <li>The IP address of the PC currently accessing to the camera will be displayed when "On" is selected for "Host auth."</li> </ul> |

## Error indications relating to Panasonic alarm protocol notification

| Category                                    | Indication                                     | Description                                                                                                                                                                                                                                                                                     |
|---------------------------------------------|------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Panasonic alarm protocol notification error | Failed to find destination of notification.    | <ul style="list-style-type: none"><li>• The IP address of the destination of notification may be incorrect. Check if the IP address of the destination of notification is configured correctly.</li><li>• The destination of notification may be down. Ask the network administrator.</li></ul> |
|                                             | Cannot resolve notification addresses from DNS | <ul style="list-style-type: none"><li>• The DNS server settings may be incorrect. Check if the DNS settings are configured correctly.</li><li>• The DNS server may be down. Ask the network administrator.</li></ul>                                                                            |

## 23 Troubleshooting

**Before asking for repairs, check the symptoms with the following table.**

Contact your dealer if a problem cannot be solved even after checking and trying the solution in the table or a problem is not described below.

| Symptom                             | Cause/solution                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | Reference pages           |
|-------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------|
| Cannot access from the web browser. | <ul style="list-style-type: none"> <li>Is the LAN cable (category 5 or better, STP*) firmly connected to the network connector of the camera?<br/>*E model only</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | Installation Guide        |
|                                     | <ul style="list-style-type: none"> <li>Is the link indicator lit?<br/>When it is not lit, connection to a LAN may not be established or a network may be not working correctly. Check if the cables have any contact failure or if the wiring is correct or not.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | Installation Guide        |
|                                     | <ul style="list-style-type: none"> <li>Is the power of the camera on?<br/>Check if the power of the camera is turned on.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | Installation Guide        |
|                                     | <ul style="list-style-type: none"> <li>Are the set IP addresses valid?</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | 136                       |
|                                     | <ul style="list-style-type: none"> <li>Are you accessing the wrong IP address?<br/>Check the connection as follows.<br/>With the Windows command prompt, &gt; ping "IP address of the camera".<br/>If there is reply from the camera, the connection is normal.<br/>If there is no reply, check the connection with the following methods using a computer connected to the same network as the camera. If the firewall settings on the PC are enabled, temporarily disable them before performing settings on the camera.               <ul style="list-style-type: none"> <li>Start the Panasonic "IP Setting Software", confirm the camera's IP address, and then access that IP address.</li> <li>If the network settings (IP address, subnet mask, and default gateway) are incorrect, reboot the camera and change the network settings by using the Panasonic "IP Setting Software" within 20 minutes after the restart.</li> <li>In networks that do not have a DHCP server, the IP address of the camera will be configured to "192.168.0.10" when the camera is rebooted by holding the INITIAL SET button on the camera. After the camera is initialized, access the camera and set the IP address again. (When the camera is initialized, all the settings of the camera previously configured on the setup menus will be initialized.)</li> </ul> </li> </ul> | 181<br>Installation Guide |

| Symptom                                    | Cause/solution                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | Reference pages |
|--------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
|                                            | <ul style="list-style-type: none"> <li>Is "554" selected for the HTTP port number?<br/>For the HTTP port number, select a port number other than the following port numbers used by the camera. The number used by the camera: 20, 21, 23, 25, 42, 53, 67, 68, 69, 110, 123, 161, 162, 443, 554, 995, 10669, 10670, 59000 - 61000</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                   | 139             |
| Cannot access from the web browser.        | <ul style="list-style-type: none"> <li>Is the same IP address provided to other devices? Are there contradictions between the address and the network subnet to be accessed?<br/><b>When the camera and the PC are connected in the same subnet:</b><br/>Are the IP addresses of the camera and the PC set in a common subnet? Or is "Use Proxy Server" for the settings of the web browser checked?<br/>When accessing the camera in the same subnet, it is recommended to enter the address of the camera in the "Don't Use Proxy For These Addresses" box.<br/><b>When the camera and the PC are connected in the different subnet:</b><br/>Is the IP address of the default gateway set for the camera correct?</li> </ul> | -               |
|                                            | <ul style="list-style-type: none"> <li>Is the name currently used to access the camera different from the name registered for the "Viewnetcam.com" service?<br/>Access the camera again with the registered name.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | 160             |
|                                            | <ul style="list-style-type: none"> <li>Did you access "http://" while using the HTTPS function?<br/>To use the HTTPS function, access "https://". It is also necessary to enter the port number.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | 151             |
| Cannot access the camera via the Internet. | <ul style="list-style-type: none"> <li>Are the network settings of the camera correct?<br/>Set the default gateway or DNS server address correctly. To use the DDNS service, check that the settings are correct.</li> <li>Is the setting for "Default gateway" on the "Network" page configured? Or is the setting correct?<br/><b>When communicating using IPv4:</b><br/>Configure the setting for "Default gateway" of "IPv4 network" on the [Network] tab of the setup menu.</li> </ul>                                                                                                                                                                                                                                    | 136             |

| Symptom                                                               | Cause/solution                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | Reference pages   |
|-----------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------|
|                                                                       | <ul style="list-style-type: none"> <li>Is the setting of port forwarding configured for the router?<br/>To enable the access to the camera via the Internet, it is necessary to perform the port forwarding setting when the router in use does not support the UPnP function. Refer to the manuals provided with the router for further information.</li> <li>Is UPnP function of the router disabled?<br/>Refer to the manuals provided with the router in use to enable the UPnP function.</li> <li>Is packet filtering set for the router to forbid the access via the Internet?<br/>Configure the settings of the router in use to enable the access via the Internet. Refer to the manuals provided with the router for further information about the settings.</li> </ul> | 140               |
|                                                                       | <ul style="list-style-type: none"> <li>Are you accessing the camera using the local address (the IP address used in a local network)?<br/>When accessing the camera, use the global address (or the URL registered in the DDNS service) and the port number of the camera as the IP address to be used in the Internet.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                               | 137<br>138<br>158 |
| Cannot access the camera via the URL of the "Viewnetcam.com" service. | <ul style="list-style-type: none"> <li>Is the global address of camera (or router) notified to the "Viewnetcam.com" service server?<br/>Log into the "My Account" page of "Viewnetcam.com" website (<a href="http://www.viewnetcam.com/">http://www.viewnetcam.com/</a>) to check the information of the registered camera. If the global address is not displayed for the IP address, access the camera, and register the user information for the "Viewnetcam.com" service on the [DDNS] tab on the "Network" page of the setup menu. In addition, check the "Status" of "Viewnetcam.com" (on the [Status] tab) and the system log (on the [System log] tab) of the "Maintenance" page of the setup menu.</li> </ul>                                                           | 161<br>174        |
| Authentication window is displayed repeatedly.                        | <ul style="list-style-type: none"> <li>Is the user name and password changed?<br/>While accessing the camera, when changing the user name and password of another user logging into the camera on another web browser, the authentication window will be displayed each time the screen is changed or refreshed.</li> <li>Have you changed the [Authentication] setting?<br/>When the [Authentication] setting has been changed, close the web browser, and then access the camera again.</li> </ul>                                                                                                                                                                                                                                                                             | -                 |
| It takes time to display the screen.                                  | <ul style="list-style-type: none"> <li>Are you accessing the camera in the HTTPS mode?<br/>In this mode, the refresh interval becomes slower due to decode procession.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | -                 |


| Symptom                                                                              | Cause/solution                                                                                                                                                                                                                                                                                                          | Reference pages |
|--------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
|                                                                                      | <ul style="list-style-type: none"> <li>Are you accessing another camera in the same local network via a proxy server?<br/>Configure the web browser to not use the proxy server.</li> </ul>                                                                                                                             | -               |
|                                                                                      | <ul style="list-style-type: none"> <li>Are two or more users browsing the camera images simultaneously?<br/>It may take time to display the screen or refresh interval may become slower when two or more users browse the camera images simultaneously.</li> </ul>                                                     | -               |
| Cannot access the camera from a cellular phone.                                      | <ul style="list-style-type: none"> <li>Is the URL correct? Or is "/mobile" missing at the end of the URL?<br/>Check if the URL is entered correctly. When accessing the camera from a cellular phone, it is necessary to enter "/mobile" at the end of the URL that is used for the camera access from a PC.</li> </ul> | 16              |
|                                                                                      | <ul style="list-style-type: none"> <li>Is the SSL encryption method different from that of the camera?<br/>Select "HTTP" (Do not select "HTTPS") for "HTTPS" - "Connection" on the "Network" page - the [Network] tab, and access the camera again.</li> </ul>                                                          | 141             |
|                                                                                      | <ul style="list-style-type: none"> <li>Did you access "http://" while using the HTTPS function?<br/>To use the HTTPS function, access "https://". It is also necessary to enter the port number.</li> </ul>                                                                                                             | 151             |
| Cannot access the camera from a mobile terminal.                                     | <ul style="list-style-type: none"> <li>Is the URL correct? Or is "/cam" missing at the end of the URL?<br/>Check if the URL is entered correctly. When accessing the camera from a mobile terminal, it is necessary to enter "/cam" at the end of the URL that is used for the camera access from a PC.</li> </ul>      | 18              |
|                                                                                      | <ul style="list-style-type: none"> <li>Is the SSL encryption method different from that of the camera?<br/>Select "HTTP" (Do not select "HTTPS") for "HTTPS" - "Connection" on the "Network" page - the [Network] tab, and access the camera again.</li> </ul>                                                          | 136             |
|                                                                                      | <ul style="list-style-type: none"> <li>Did you access "http://" while using the HTTPS function?<br/>To use the HTTPS function, access "https://". It is also necessary to enter the port number.</li> </ul>                                                                                                             | 151             |
| A cookie error was displayed when performing user registration for "Viewnetcam.com". | <ul style="list-style-type: none"> <li>Is the web browser configured to allow cookies?<br/>Configure the web browser to allow cookies. In Internet Explorer, from [Tools] select [Internet Options] and configure the cookies setting in the [Privacy] tab.</li> </ul>                                                  | -               |

| Symptom                                                   | Cause/solution                                                                                                                                                                                                                                                                                                                                                                                | Reference pages |
|-----------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| User registration for the "Viewnetcam.com" service fails. | <ul style="list-style-type: none"> <li>Is the registered E-mail address correct?<br/>When an E-mail with the "Viewnetcam.com" website link is not received, the registered E-mail address may be incorrect. Visit the "Viewnetcam.com" website (<a href="http://www.viewnetcam.com/">http://www.viewnetcam.com/</a>) to register the correct E-mail address.</li> </ul>                       | -               |
| Cannot obtain images on the SD memory card.               | <ul style="list-style-type: none"> <li>Is "Allow" selected for "FTP access to camera" on the [Network] tab of "Network" page?<br/>It is necessary in advance to select "Allow" for "FTP access to camera" on the [Network] tab of the "Network" page.</li> </ul>                                                                                                                              | 142             |
|                                                           | <ul style="list-style-type: none"> <li>Is the entered password correct?<br/>Restart the web browser and enter the password again.</li> </ul>                                                                                                                                                                                                                                                  | 60              |
|                                                           | <ul style="list-style-type: none"> <li>Access to the SD memory card may be failed.<br/>Restart the web browser and retry to obtain images.</li> </ul>                                                                                                                                                                                                                                         | -               |
| No image is displayed.                                    | <ul style="list-style-type: none"> <li>Is the viewer software installed on the PC?<br/>Install the viewer software on a PC.</li> </ul>                                                                                                                                                                                                                                                        | 3               |
|                                                           | <ul style="list-style-type: none"> <li>Is the version of DirectX® 9.0c or later?<br/>Check the version of DirectX as follows.<br/> <ol style="list-style-type: none"> <li>Select "Run..." from the start menu of Windows.</li> <li>Enter "dxdiag" in the displayed dialog box and click the [OK] button.<br/>If the version of DirectX is older than 9.0c, upgrade it.</li> </ol> </li> </ul> | -               |
|                                                           | <ul style="list-style-type: none"> <li>Is the cellular phone in use support the 320×240 or 640×480 resolution? Or is the image data size too big to display images on the cellular phone?<br/>Refer to the manuals provided with the cellular phone in use for the restrictions of image data sizes.</li> </ul>                                                                               | -               |

| Symptom                                                      | Cause/solution                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | Reference pages    |
|--------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------|
| No image is displayed. / Older images or logs are displayed. | <ul style="list-style-type: none"> <li>When [Every time I visit the webpage] is not selected for [Check for newer versions of stored pages:] in the [Temporary Internet Files] section, images sometimes may not be displayed on the “Live” page. In this case, do the following.               <ol style="list-style-type: none"> <li>Select [Internet Options...] from [Tools] on the menu bar of Internet Explorer. The [Internet Options] window will be displayed.</li> <li><b>When using Internet Explorer 10.0:</b><br/>Click the [Settings] button in the [Browsing history] section on the [General] tab, and then select [Every time I visit the webpage] for [Check for newer versions of stored pages:] in the [Temporary Internet Files] tab on the [Website Data Settings] window.<br/><b>When using Internet Explorer 7.0, Internet Explorer 8.0, or Internet Explorer 9.0:</b><br/>Click the [Settings] button in the [Browsing history] section on the [General] tab, and then select [Every time I visit the webpage] for [Check for newer versions of stored pages:] in the [Temporary Internet Files] section on the [Temporary Internet Files and History Settings] window.</li> </ol> </li> </ul> | -                  |
| Images are displayed blurry.                                 | <ul style="list-style-type: none"> <li>Is the focus adjusted correctly?<br/>Check if the focus is adjusted correctly.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | Installation Guide |
| The image is not being refreshed.                            | <ul style="list-style-type: none"> <li>Depending on the version of your browser, there might be difficulties refreshing the picture, etc.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | Installation Guide |
|                                                              | <ul style="list-style-type: none"> <li>Depending on the traffic of the network or the concentration of access to the camera, there might be difficulties displaying the camera picture. Request the camera picture using the web browser such as by pressing the [F5] key, etc.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | -                  |
| No image is displayed (or too dark).                         | <ul style="list-style-type: none"> <li>Is the brightness setting set at an appropriate level?<br/>Click the [Normal] button of [Brightness].</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | 9                  |
| Images are displayed washed out.                             | <ul style="list-style-type: none"> <li>Is the brightness setting set at an appropriate level?<br/>Click the [Normal] button of [Brightness].</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | 9                  |
| Flicker appears on the screen.                               | <ul style="list-style-type: none"> <li>When flicker occurs frequently, select “Indoor scene” for “Light control mode”.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | 89                 |

| Symptom                                                                                                                                         | Cause/solution                                                                                                                                                                                                                                                                                                | Reference pages    |
|-------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------|
| Images cannot be saved on the SD memory card.                                                                                                   | <ul style="list-style-type: none"> <li>Is the SD memory card inserted correctly?<br/>Check if the SD memory card is inserted correctly.</li> </ul>                                                                                                                                                            | Installation Guide |
| Failed to write/read data on the SD memory card.                                                                                                | <ul style="list-style-type: none"> <li>Is the SD memory card formatted?<br/>Format the SD memory card.</li> </ul>                                                                                                                                                                                             | 58                 |
|                                                                                                                                                 | <ul style="list-style-type: none"> <li>Isn't the write protect switch set to "LOCK"?<br/>When the write protect switch is set to "LOCK", available size/total size indication of the SD memory card to be displayed on "Remaining capacity" of the [SD memory card] tab will be "*****KB/*****KB".</li> </ul> | -                  |
|                                                                                                                                                 | <ul style="list-style-type: none"> <li>Is "-----KB/-----KB" displayed on "Remaining capacity" of the [SD memory card] tab?<br/>Format the SD memory card.</li> </ul>                                                                                                                                          | 58                 |
|                                                                                                                                                 | <ul style="list-style-type: none"> <li>Is any recognition error received when the "Diag." of "E-mail notification" or "Panasonic alarm protocol" is used?<br/>Format the SD memory card.</li> </ul>                                                                                                           | 58<br>115<br>117   |
|                                                                                                                                                 | <ul style="list-style-type: none"> <li>Isn't the SD memory card out of order?<br/>There are limited times to overwrite on an SD memory card. When frequently overwritten, it may be at the end of product life. It is recommended to replace the SD memory card.</li> </ul>                                   | -                  |
| Audio is not output from other products such as a network disk recorder or PC software package.                                                 | <ul style="list-style-type: none"> <li>Some of the products such as a network disk recorder or PC software package may not support "G.711". Set the audio encoding format of the products to "G.726 (32 kbps)."</li> </ul>                                                                                    | 102                |
| The alarm occurrence indication button and the SD recording status indicator on the "Live" page do not display the current status in real time. | <ul style="list-style-type: none"> <li>Is the viewer software installed on the PC?<br/>Confirm that the viewer software "Network Camera View 4S" is installed.</li> </ul>                                                                                                                                     | 3                  |
|                                                                                                                                                 | <ul style="list-style-type: none"> <li>Is "Real time" selected for "Alarm status update mode"?</li> </ul>                                                                                                                                                                                                     | 46                 |
| No image is displayed on the "Live" page.                                                                                                       | <ul style="list-style-type: none"> <li>Press the [F5] key on the keyboard of the PC or click the [Live] button.</li> </ul>                                                                                                                                                                                    | 9                  |
| Shortcut icon of the camera is not displayed on "My Network Places" of the PC.                                                                  | <ul style="list-style-type: none"> <li>Is the Windows component of UPnP added?<br/>Add the component to the PC in use.</li> </ul>                                                                                                                                                                             | 140                |

| Symptom                                             | Cause/solution                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | Reference pages |
|-----------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| Cannot download the log list.                       | <ul style="list-style-type: none"> <li>Download of files using Internet Explorer may be disabled.<br/>Click "Internet Options..." on the [Tools] menu of Internet Explorer, and [Security] tab. Then, click the [Custom Level...] button to open the "Security Setting" window. Under "Downloads", select "Enable" for "Automatic prompting for file downloads" (except Internet Explorer 9.0). Click the [OK] button. The warning window will be displayed. Click the [Yes] button.</li> </ul> | -               |
| Images are not displayed or not refreshed smoothly. | <ul style="list-style-type: none"> <li>Delete temporary internet files as follows.               <ol style="list-style-type: none"> <li>Select "Internet Options..." under "Tools" on the menu bar of Internet Explorer. The "Internet Options" window will be displayed.</li> <li>Click the [Delete Files...] button in the "Temporary Internet Files" section on the [General] tab.</li> </ol> </li> </ul>                                                                                    | -               |
|                                                     | <ul style="list-style-type: none"> <li>The firewall function of the anti-virus software may be filtering the port of the camera.<br/>Exclude the port number of the camera from the list of the port numbers to be filtered by the anti-virus software.</li> </ul>                                                                                                                                                                                                                              | -               |
| No indicator lights.                                | <ul style="list-style-type: none"> <li>Is "Off" selected for "Indicator" on the "Basic" page?<br/>Select "On" for "Indicator".</li> </ul>                                                                                                                                                                                                                                                                                                                                                       | 46              |
| H.264 images are not displayed.                     | <ul style="list-style-type: none"> <li>When "Network Camera View 4S" is deleted from a PC on which both the viewer software "Network Camera View 3" and "Network Camera View 4" are installed, H.264 images will not be displayed.<br/>In this case, delete "Network Camera View 3" from the PC and then install "Network Camera View 4S".</li> </ul>                                                                                                                                           | 3               |
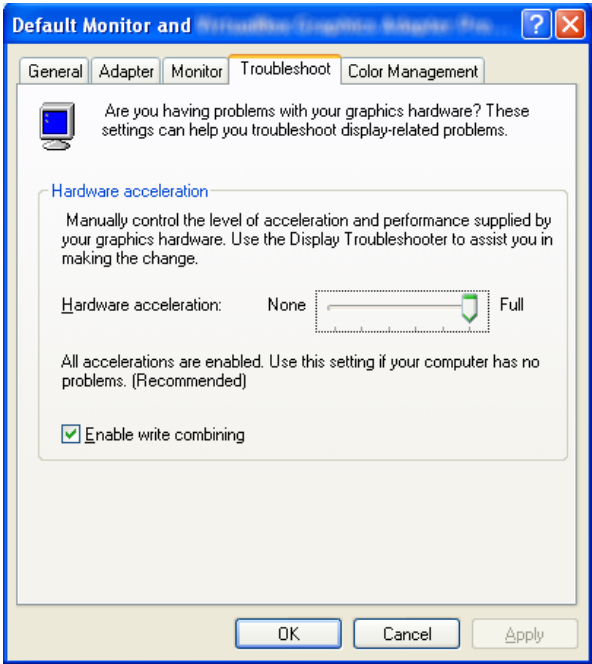
| Symptom                                                                                                                                                | Cause/solution                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | Reference pages |
|--------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| When displaying H.264 images on two or more web browser windows, images from two or more cameras are displayed in sequence on a single browser window. | <ul style="list-style-type: none"> <li>This may occur due to the display adapter and driver combination. When this has occurred, first update the driver of the display adapter to the latest version. If updating the driver does not solve the problem, adjust the hardware acceleration as follows. The following are descriptions for when Windows XP is installed on the PC in use. <ol style="list-style-type: none"> <li>Right-click on the desktop and select "Properties" from the displayed pop-up menu.</li> <li>Select "Settings" from "Display Properties", and then click the [Advanced] button.</li> <li>Click the [Troubleshoot] tab and disable the DirectDraw acceleration by adjusting the level of Hardware acceleration.</li> </ol> </li> </ul>  | -               |

## Information Bar

Depending on the OS installed on the PC, the following may occur. Follow the instructions below when the following has occurred. By performing the following solutions, other applications may not be affected.


### When using Internet Explorer 9.0 or Internet Explorer 10.0:

The “Information Bar” (①) expressed in the following symptom and solutions will be displayed just below the address bar only when there is information to communicate.



### When using Internet Explorer 7.0 or Internet Explorer 8.0:


The “Information Bar” (②) expressed in the following symptom and solutions will be displayed just below the address bar only when there is information to communicate.

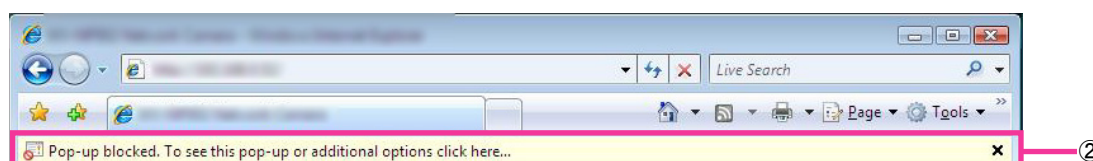

| Symptom                                                                                                                                                                                                                                                 | Cause/solution                                                                                                                                                                                                                                | Reference pages |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| The following message is displayed on the information bar.<br>“Pop-up blocked. To see this pop-up or additional options, click here...” (Internet Explorer 7 or Internet Explorer 8)                                                                    | <ul style="list-style-type: none"> <li>Click the information bar and select “Always Allow Pop-ups from This Site...”. The dialog window saying “Allow pop-ups from this site?” will be displayed. Click the [Yes] button.</li> </ul>          | -               |
| The following message is displayed on the information bar.<br>“This webpage wants to run the following add-on: ‘WebVideo Module’ from ‘Panasonic System Networks Co.,Ltd.’.” (Internet Explorer 9 or Internet Explorer 10)                              | <ul style="list-style-type: none"> <li>Select [Allow].</li> </ul>                                                                                                                                                                             | -               |
| The following message is displayed on the information bar.<br>“This site might require the following ActiveX control 'nwc4Ssetup.exe' from 'Panasonic System Networks Co.,Ltd.'. Click here to install...” (Internet Explorer 7 or Internet Explorer 8) | <ul style="list-style-type: none"> <li>Click the information bar and select “Install ActiveX Control”.<br/>The “Security Warning” window will be displayed. Click the [Install] button on the displayed “Security Warning” window.</li> </ul> | -               |

| Symptom                                                                                                                                                                                                                             | Cause/solution                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | Reference pages |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| The following message is displayed on the information bar.<br>"This webpage wants to install the following add-on:<br>'nwc4Ssetup.exe' from<br>'Panasonic System Networks Co.,Ltd.'." (Internet Explorer 9 or Internet Explorer 10) | <ul style="list-style-type: none"> <li>Select [Install]. The "Security Warning" window will be displayed. Click the [Install] button on the displayed "Security Warning" window.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                | -               |
| An unnecessary status bar or scroll bar is displayed on the pop-up window.                                                                                                                                                          | <ul style="list-style-type: none"> <li>Click "Internet Options..." under "Tools" of the menu bar of Internet Explorer, and then click the [Security] tab. Click "Internet" in the "Select a Web content zone to specify its security settings:" section. Then, click the [Custom Level...] button to open the "Security Setting" window. Under "Miscellaneous", select "Enable" for "Allow script-initiated windows without size or position constraints". Click the [OK] button. When the warning window is displayed, click the [Yes] button.</li> </ul> | -               |
| Images are not fit in the frames.                                                                                                                                                                                                   | <ul style="list-style-type: none"> <li>When "120 DPI" is selected for "DPI setting", they may not be displayed correctly. Click the [Settings] tab on the "Properties" window of "Screen" (in the control panel), and then click the [Advanced] button. Change the "DPI setting" as necessary.</li> </ul>                                                                                                                                                                                                                                                  | -               |

# 24 Directory structure of drive B

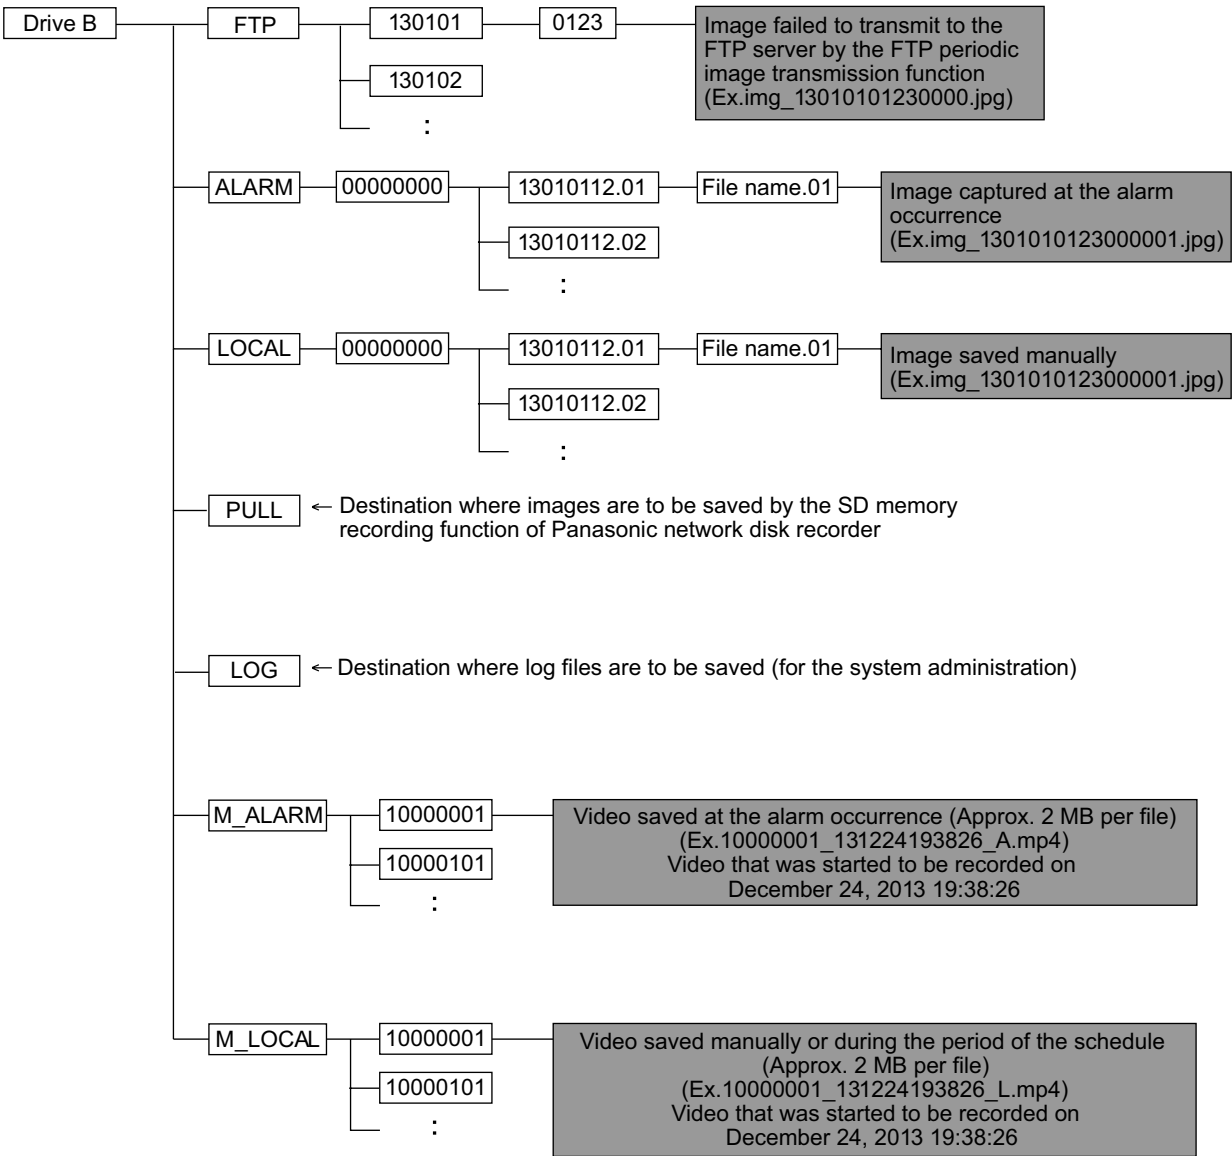

**For U.S. and Canada:**

**Panasonic System Communications Company of North America,  
Unit of Panasonic Corporation of North America**

[www.panasonic.com/business/](http://www.panasonic.com/business/)

For customer support, call 1.800.528.6747

Three Panasonic Way, Secaucus, New Jersey 07094 U.S.A.

**Panasonic Canada Inc.**

5770 Ambler Drive, Mississauga, Ontario, L4W 2T3 Canada

(905)624-5010

[www.panasonic.ca](http://www.panasonic.ca)

**For Europe and other countries:**

**Panasonic Corporation**

<http://panasonic.net>

Importer's name and address to follow EU rules:

Panasonic Testing Centre

Panasonic Marketing Europe GmbH

Winsbergring 15, 22525 Hamburg, Germany