Installation Procedure

PGQW2322XA
avs0621-2111
Printed in China

Manual site | Support site

Parts and functions

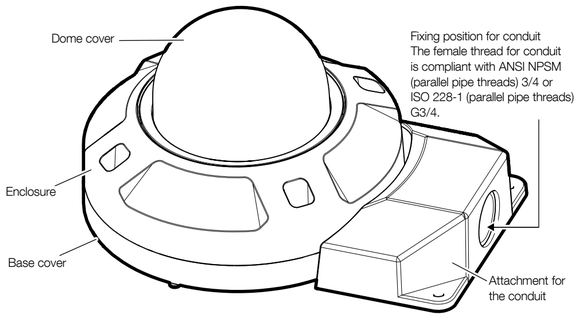

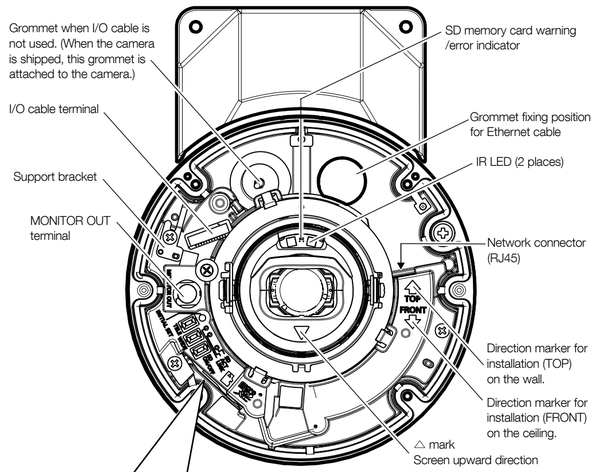

●Operating Instructions
"Indicators" → All off

●Operating Instructions
"Format the microSD memory card"

●Support website
"Compatible microSD memory card"
<Control No.: C0107>

Step1 Preparations

■Common

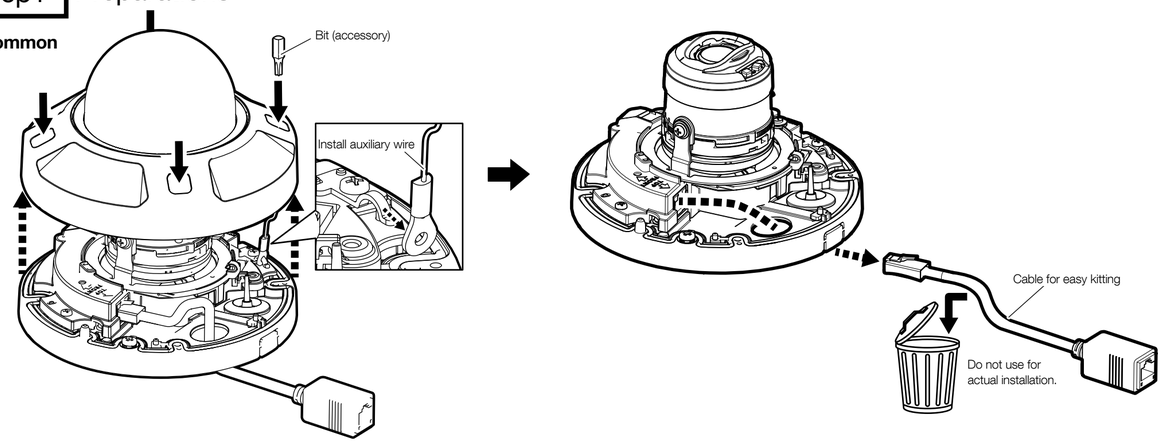

■When using attachment for the conduit

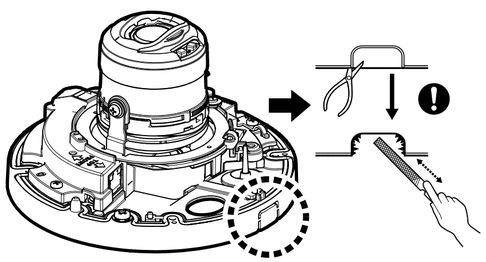

■When using a RJ45 Ethernet cable (WV-QCA500A: optional accessory)

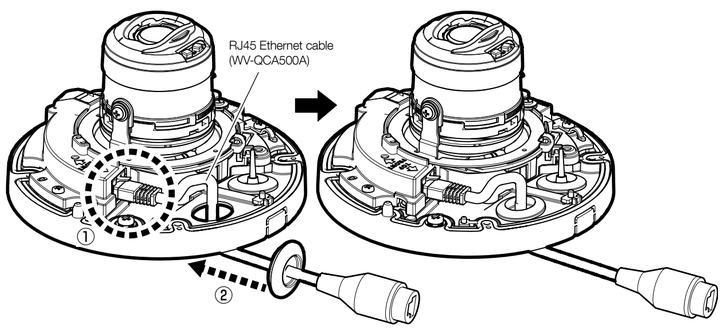

■When using an I/O cable (WV-QCA501A: optional accessory)

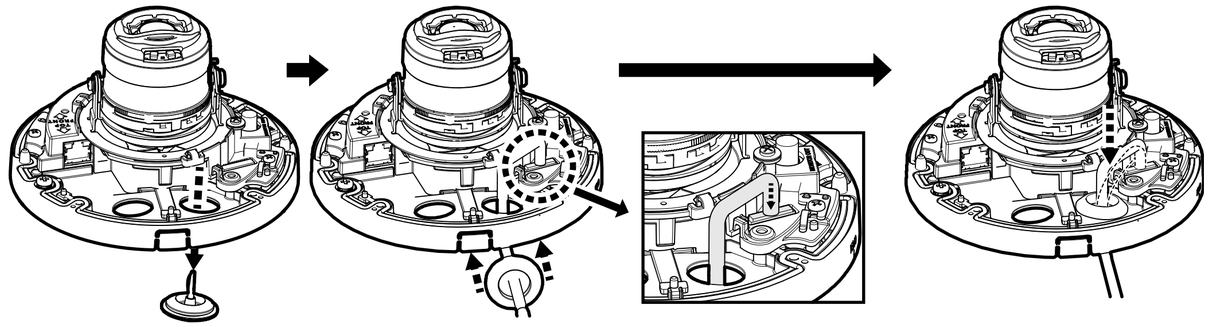

Step2

■Gangbox/ junction box

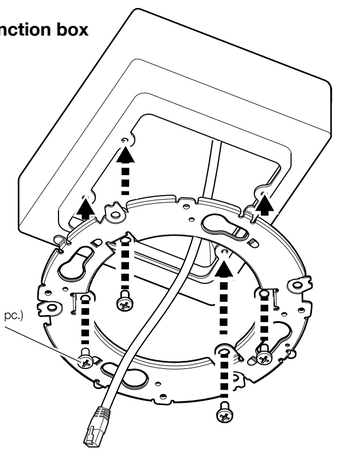

M4 (4 pcs.) (locally procured)
Minimum pull-out strength: 196 N {44 lbf} (per 1 pc.)

■Base bracket (WV-QJB501-W)

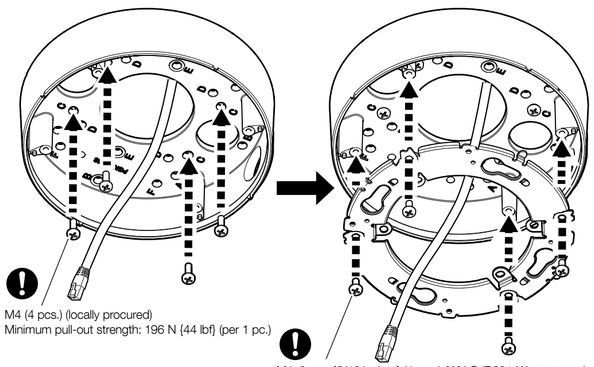

M4 (4 pcs.) (locally procured)
Minimum pull-out strength: 196 N {44 lbf} (per 1 pc.)

M4x8 mm {5/16 inches} (4 pcs.) (WV-QJB501-W accessory)
Recommended tightening torque: 0.78 N·m {0.58 lbf·ft}

■Directly mount the camera

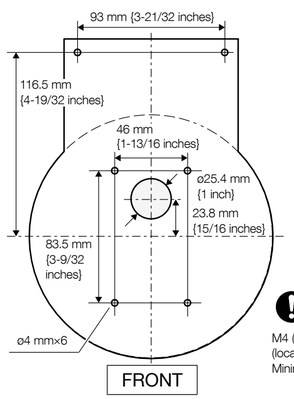

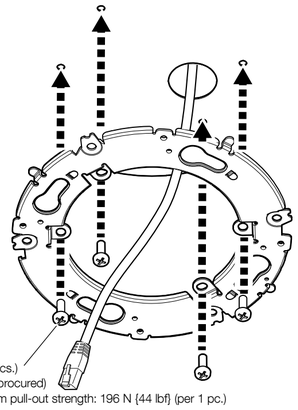

M4 (4 pcs.)
(locally procured)
Minimum pull-out strength: 196 N {44 lbf} (per 1 pc.)

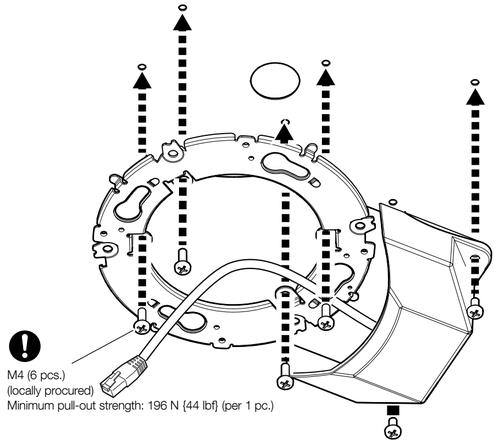

M4 (6 pcs.)
(locally procured)
Minimum pull-out strength: 196 N {44 lbf} (per 1 pc.)

If you want to change the direction of the camera after it has been installed.

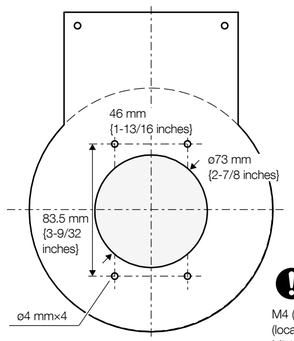

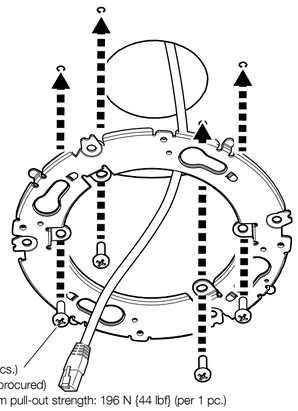

M4 (4 pcs.)
(locally procured)
Minimum pull-out strength: 196 N {44 lbf} (per 1 pc.)

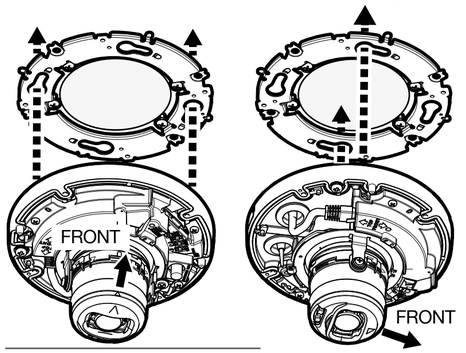

Note:

- Camera can be installed in each direction.

Step3

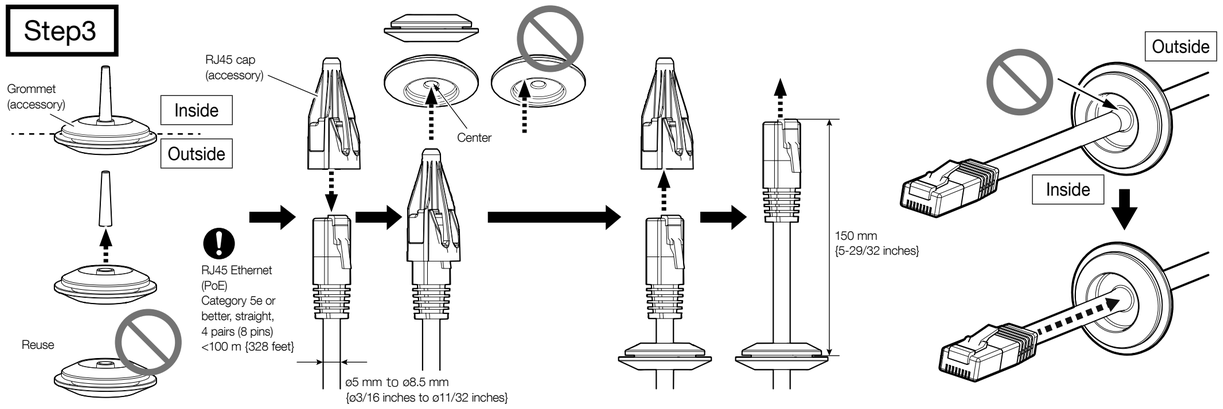

Step4

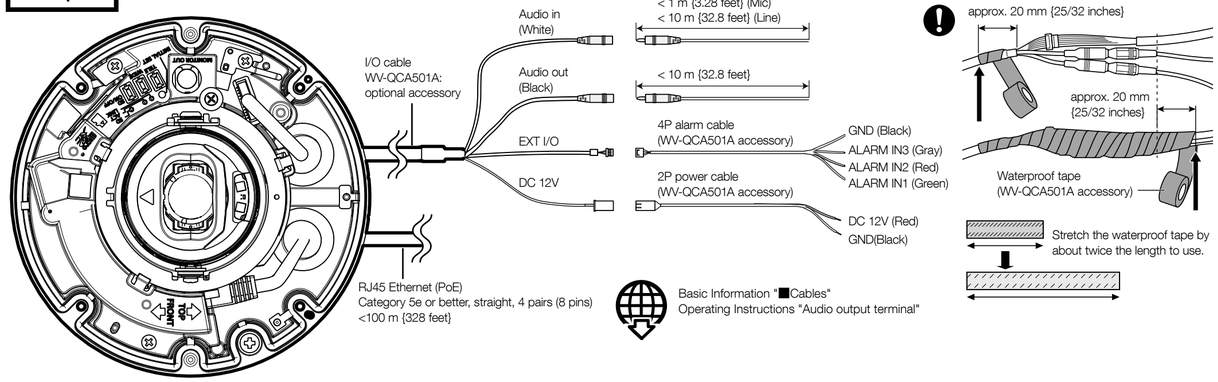

■RJ45 Ethernet cable

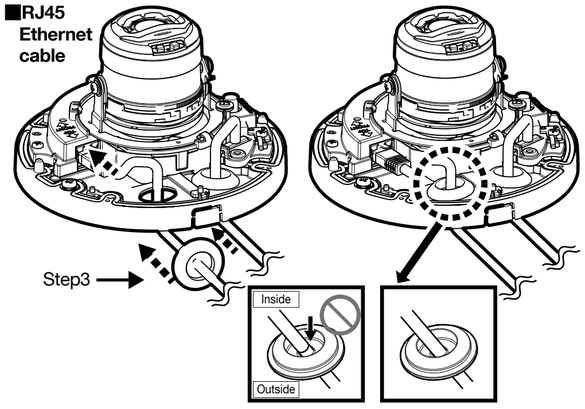

Ceiling

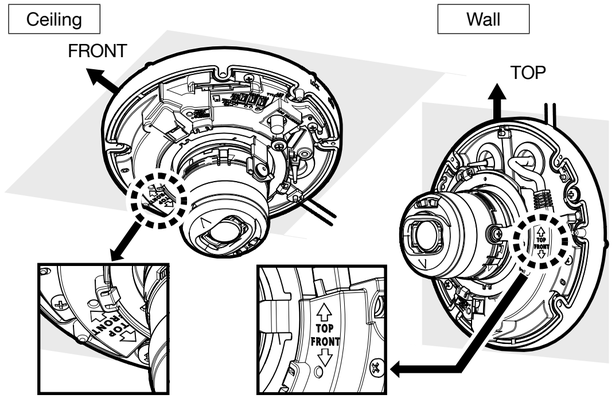

Wall

Step5

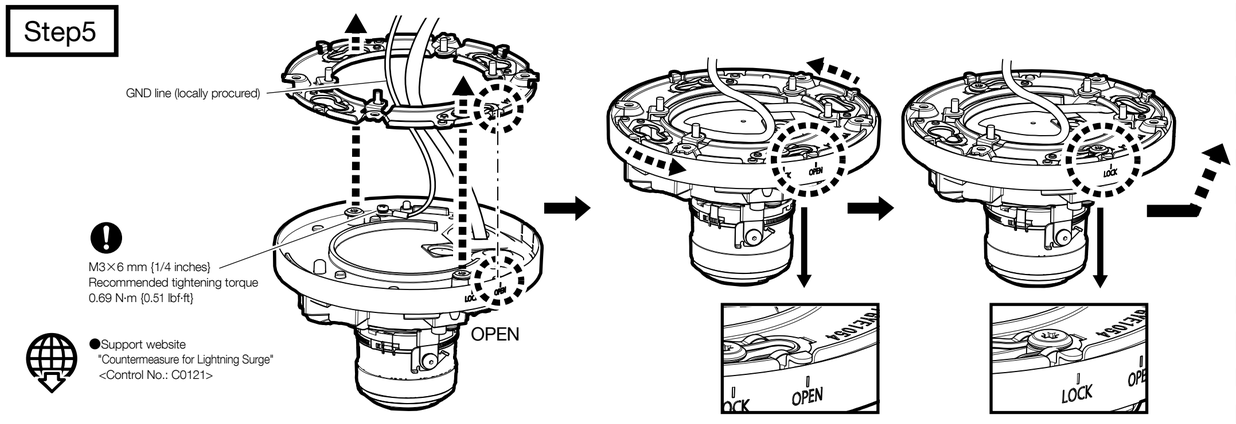

Step5 (Continued)

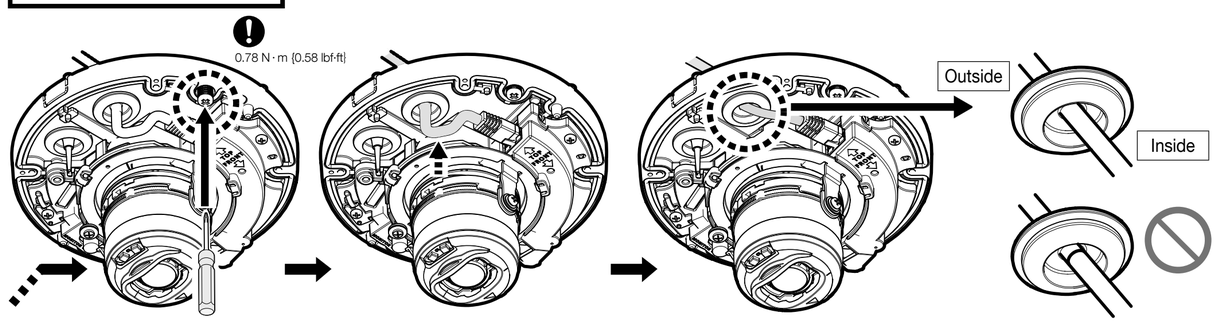

Step6

→ Turn the power on(DC 12 V/PoE).
If there is a protection film on the lens, remove it.

Ceiling

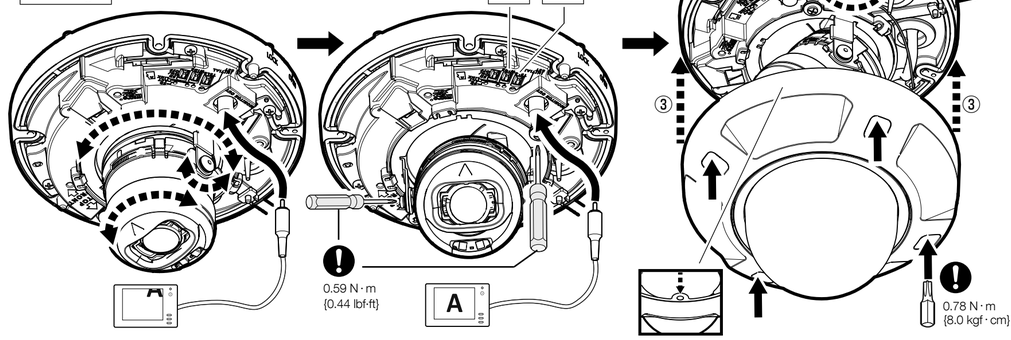

Wall

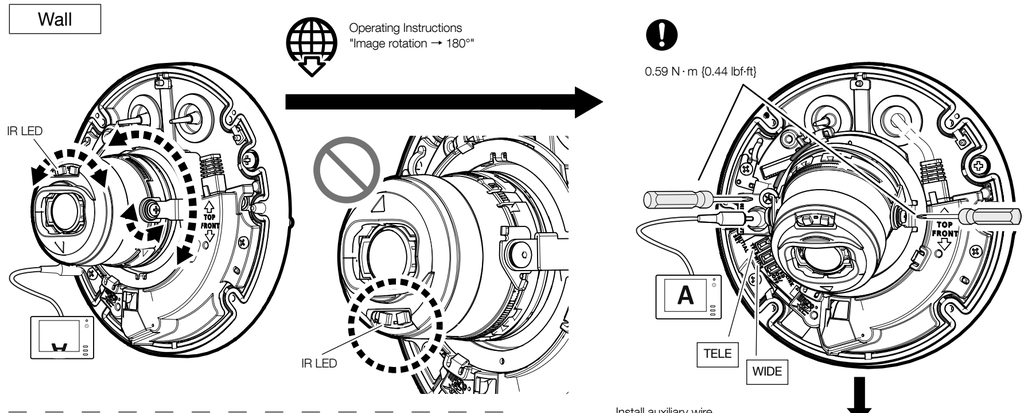
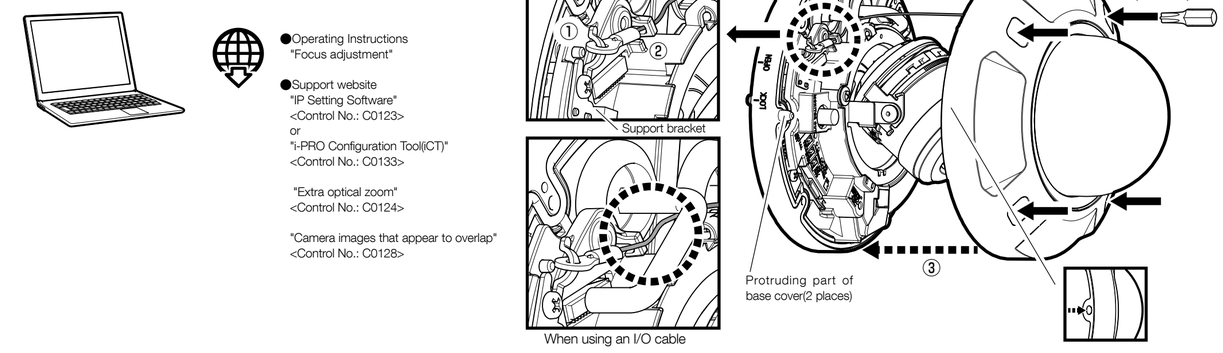
Step7